


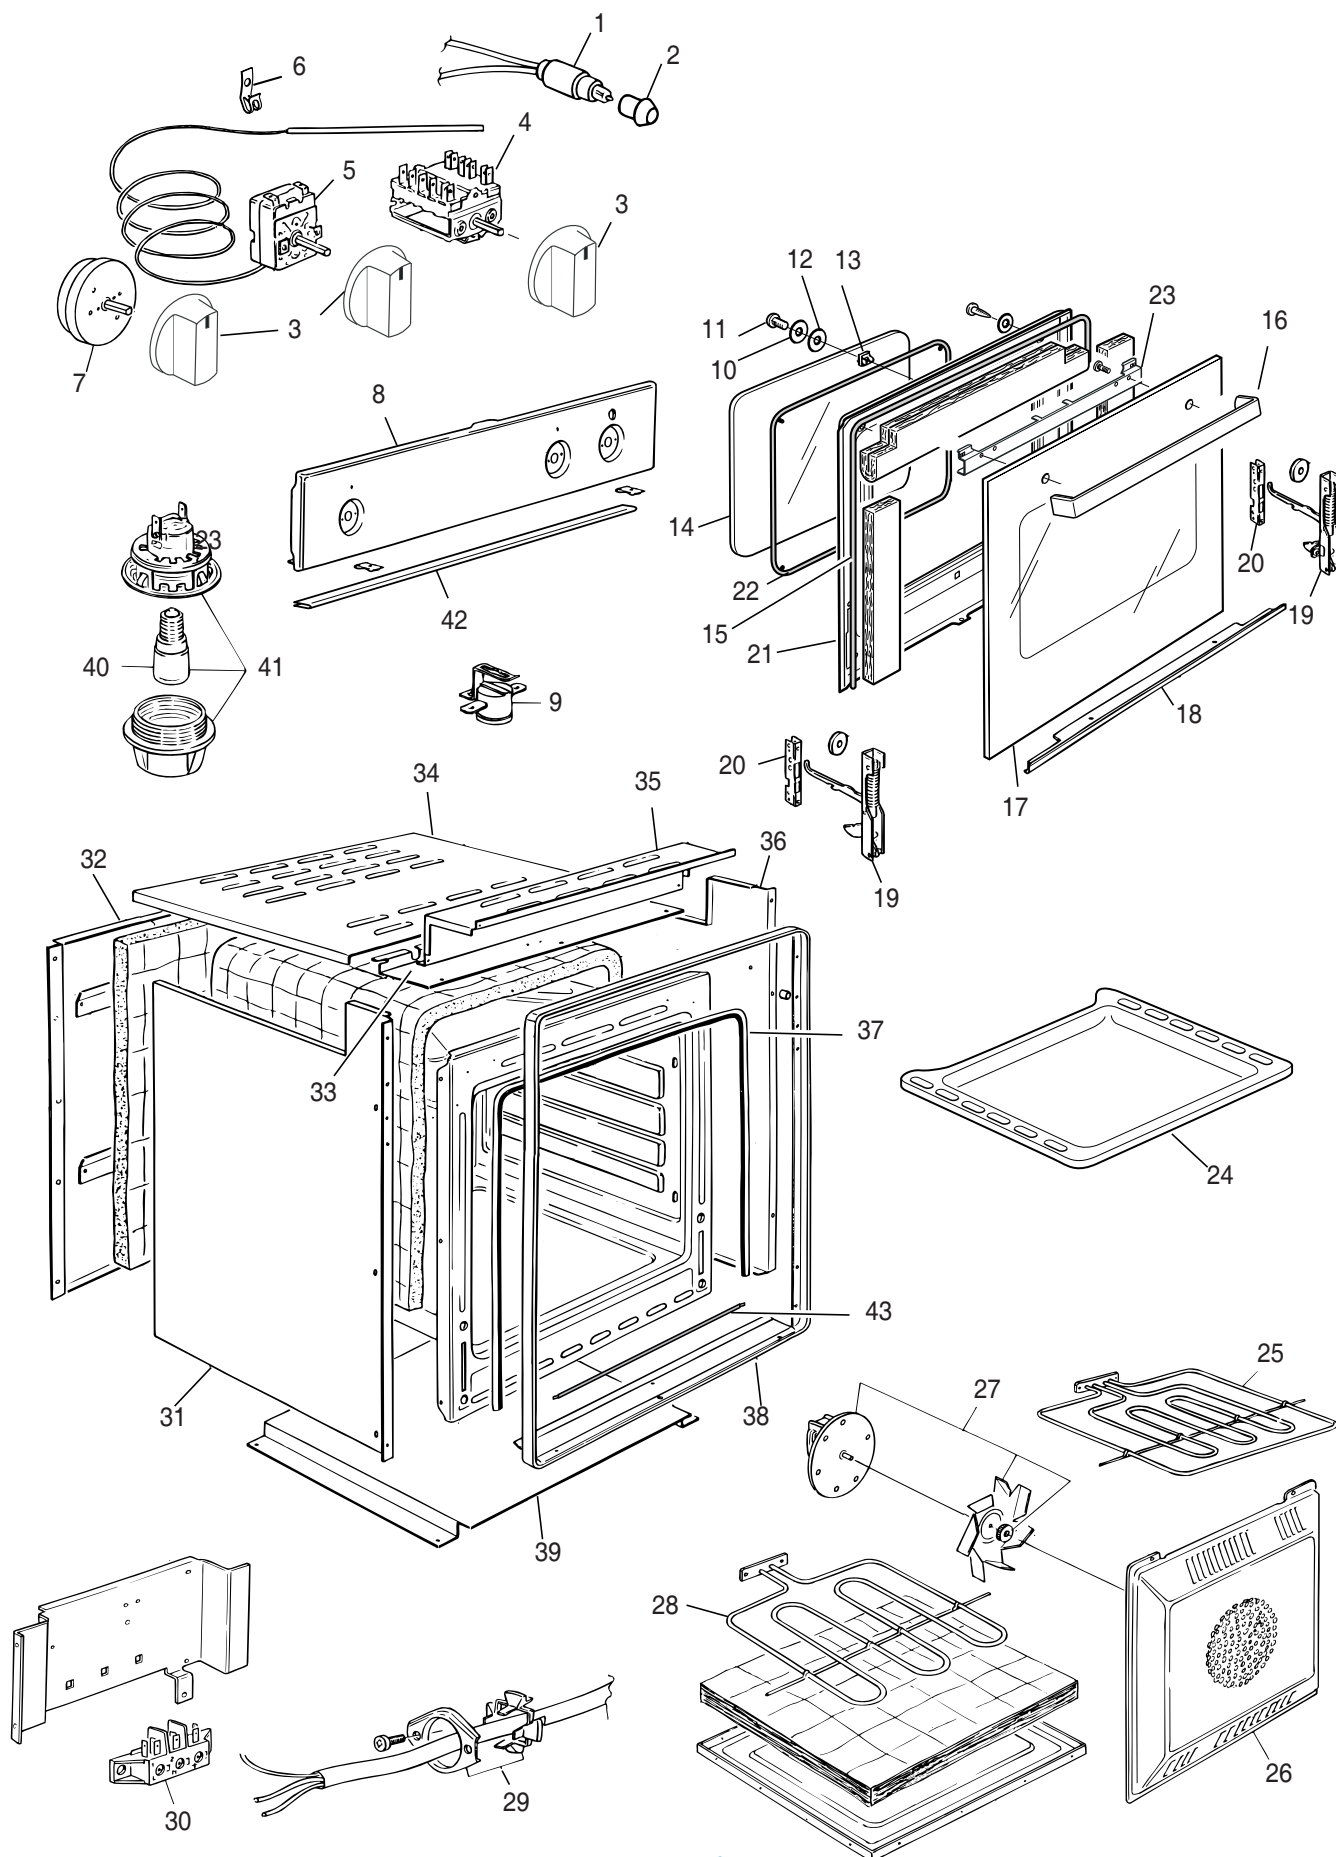

Position	Code	description
01	073036	LAMP
02	073035	Control lamp cover - red
03	2182002363	KNOB
04	050030	Oven switch
05	066072	Oven thermostat
06	213025	CLIP
07	074009	60 min alarm
08	35F7A40HD2	FRONT PANEL
09	066073	Cut-off thermostat 150 degrees
10	103205.1	WASHER
11	001214	SCREW
13	214021	NUT
14	0311000.1T	Inner glass
16	037265080	HANDLE
17	0312214	GLASS
18	083186080	PROFILE
19	063103	Hinge (male)
20	063025	Top oven hinge (female) works with male hinge 063089
21	373FF707K	INNER DOOR
22	053084	Bottom oven glass seal
23	4116111	Fixing bar
24	48B6101G	DRIP PAN
25	062103004	HEATING ELEMENT
26	47AN601G	Fan diffuser
27	079008001F	Fan motor - 230 V
28	062058004	Bottom element - 230 V
29	NOCODE01	NOT AVAILABLE
30	051062	Terminal block
32	411F718	REAR PANEL
33	4216002Z	SPACER
35	411F711	Control panel shelter
37	053199	Bottom oven seal
38	083184080	PROFILE
39	411F706	Bottom panel
40	073013001	LAMP
41	072023	Lamp holder assembly

42	053125	SEAL
43	053074	Upper seal