


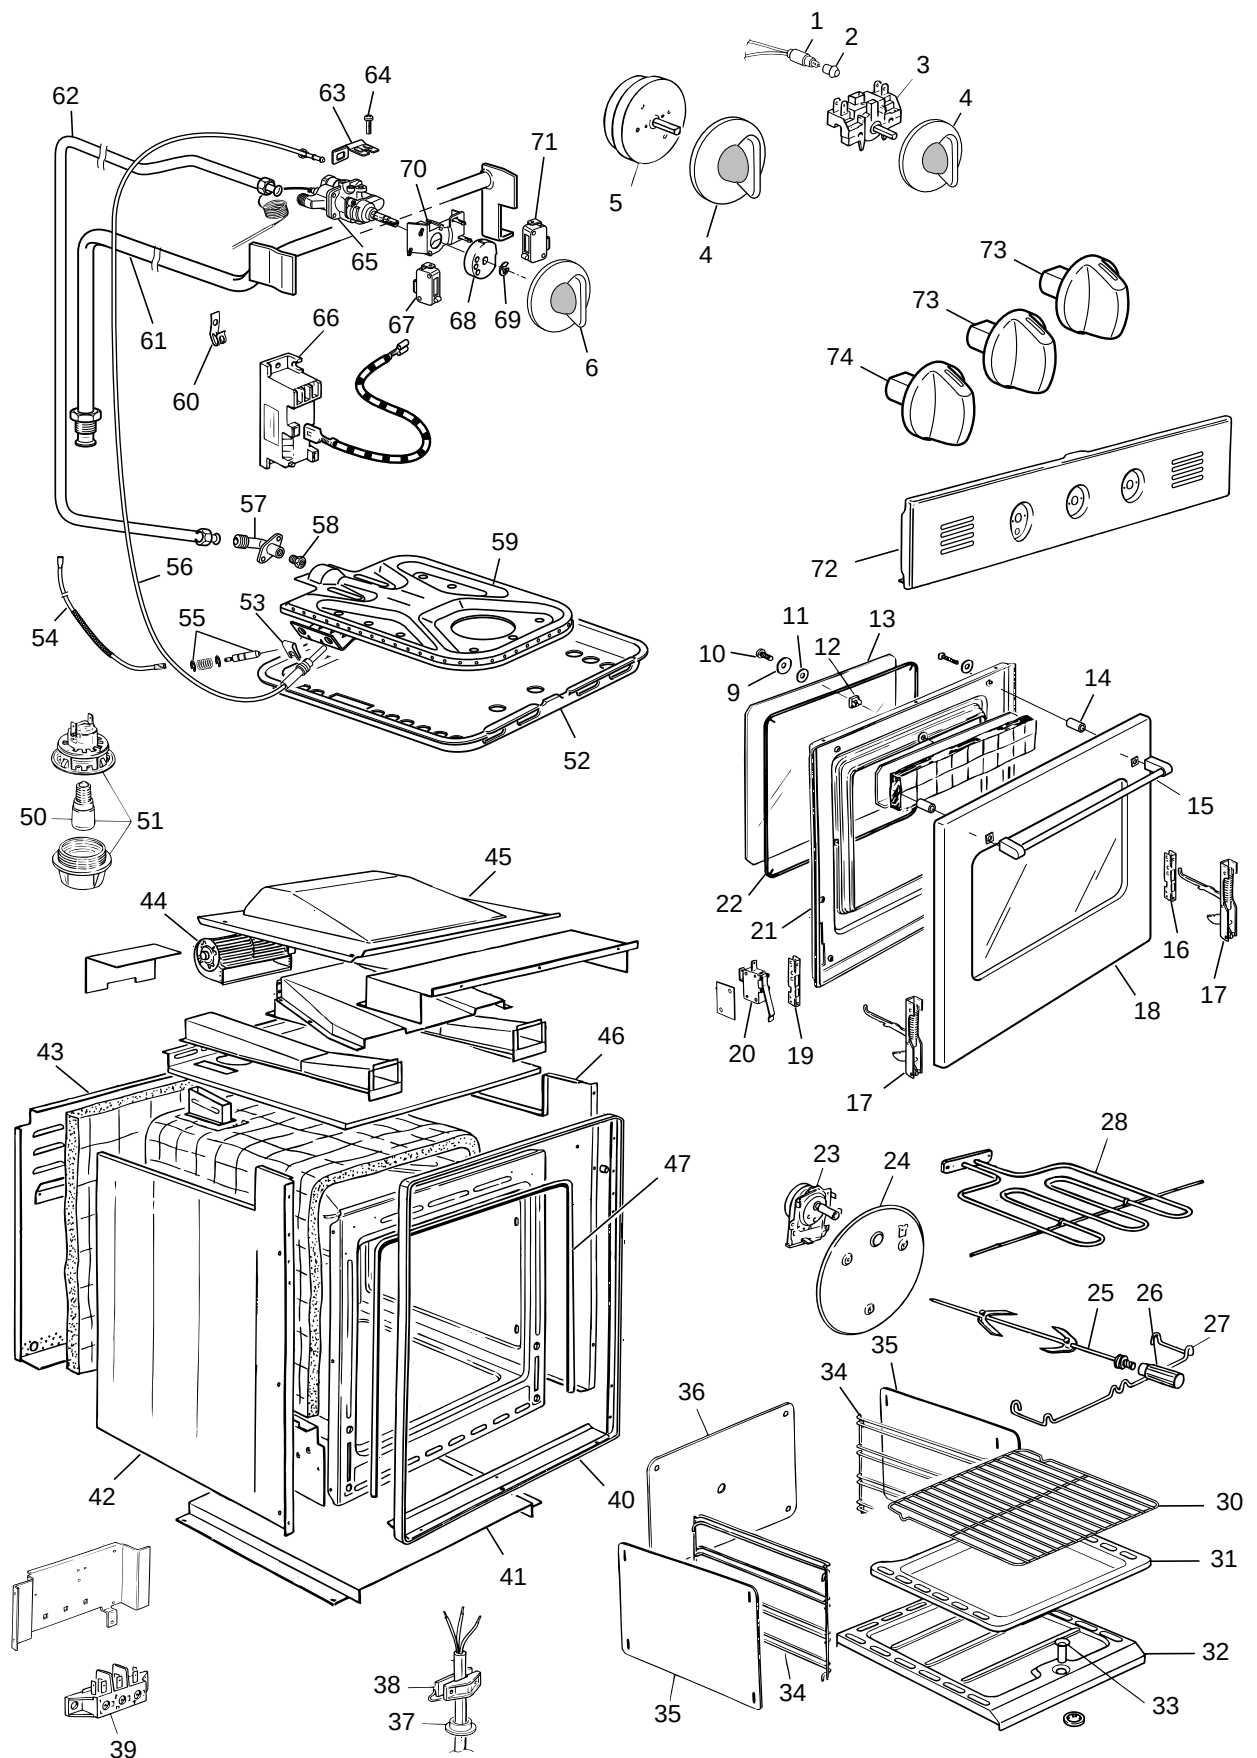

Position	Code	description
01	073037	LAMP
02	073035	Control lamp cover - red
03	050035	CHANGE OVER SWITCH
04	218344X324	Oven knob
05	074009	60 min alarm
06	218344X358	KNOB
09	103205.1	WASHER
10	001214	SCREW
11	003035	WASHER
12	214021	NUT
13	0311000.1	Inner glass
15	037191062	HANDLE
16	063025	Top oven hinge (female) works with male hinge 063089
17	063118	Bottom oven hinge (male)
18	032F71016B	GLASS
19	063064	BOX
20	077053	SWITCH
21	373FF706G	Door Skin
22	053084	Bottom oven glass seal
26	037012	Spear handle
27	217272	SUPPORT
28	062053004	HEATING ELEMENT
30	217270.1	GRID
31	48B6101G	DRIP PAN
32	47EFG01G	BOTTOM
33	103057	LIGHTING TUBE
34	217291	Shelf support
35	473000	Catalytic panels
37	052007	Wire ring
39	051062	Terminal block
40	083184066	FRAME
41	411F706	Bottom panel
42	411F721	Left side panel
43	411FG01	CLOSURE
44	079017	Tangential fan
45	411FG07	Upper shelter

46	411F719	Right side panel
47	053199	Bottom oven seal
48	083184035	Trim surround
50	073013001	LAMP
51	072023	Lamp holder assembly
52	47EFG02K	BOTTOM
53	035098	SPRING
54	103261	CABLE
55	084027	ELECTRODE
56	107045	THERMOCOUPLE
57	067025	CONNECTION
058A	101069	Injector - diameter 0.83
058B	101090	INJECTOR d. 1,25
59	215431	BURNER
60	213015	CLIP
61	342FG00G03	FEED ASSY
63	NOCODE01	NOT AVAILABLE
64	001189	SCREW
65	066135	THERMOSTAT
66	082076	Electronic ignition
67	077073	MICROSWITCH
68	103392	CAM
69	003039	RETAINING RING
70	103370	SUPPORT
71	077066	MICROSWITCH
72	35F712SYDL	FRONT PIECE
73	218G00X332	CONTROL KNOB
74	218G00X359	KNOB