

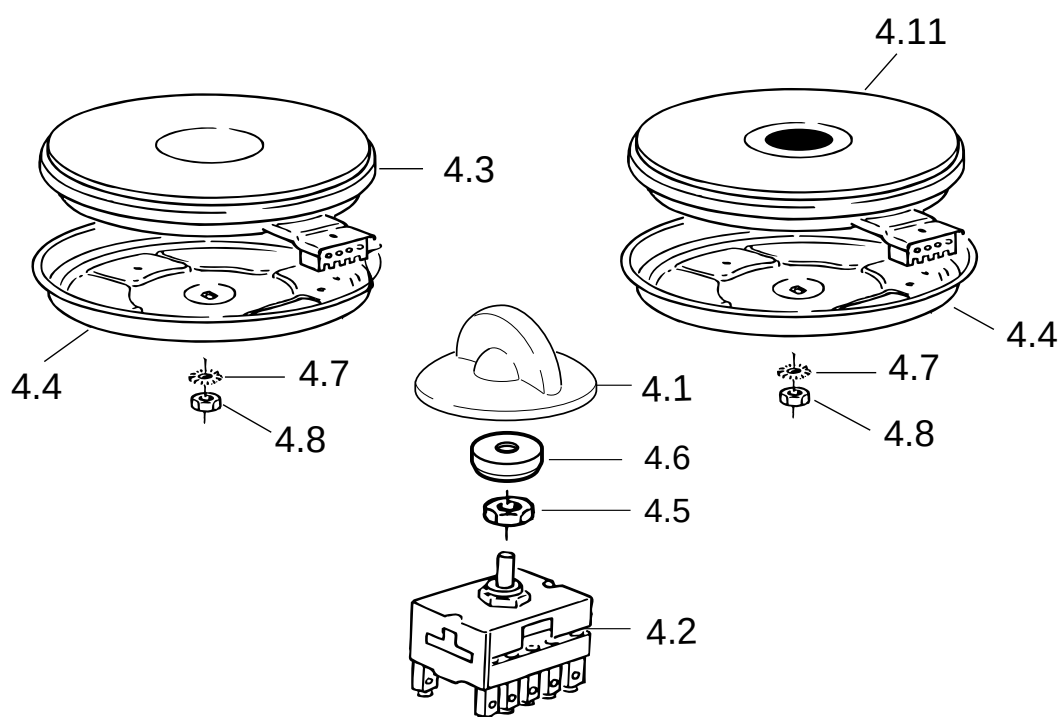


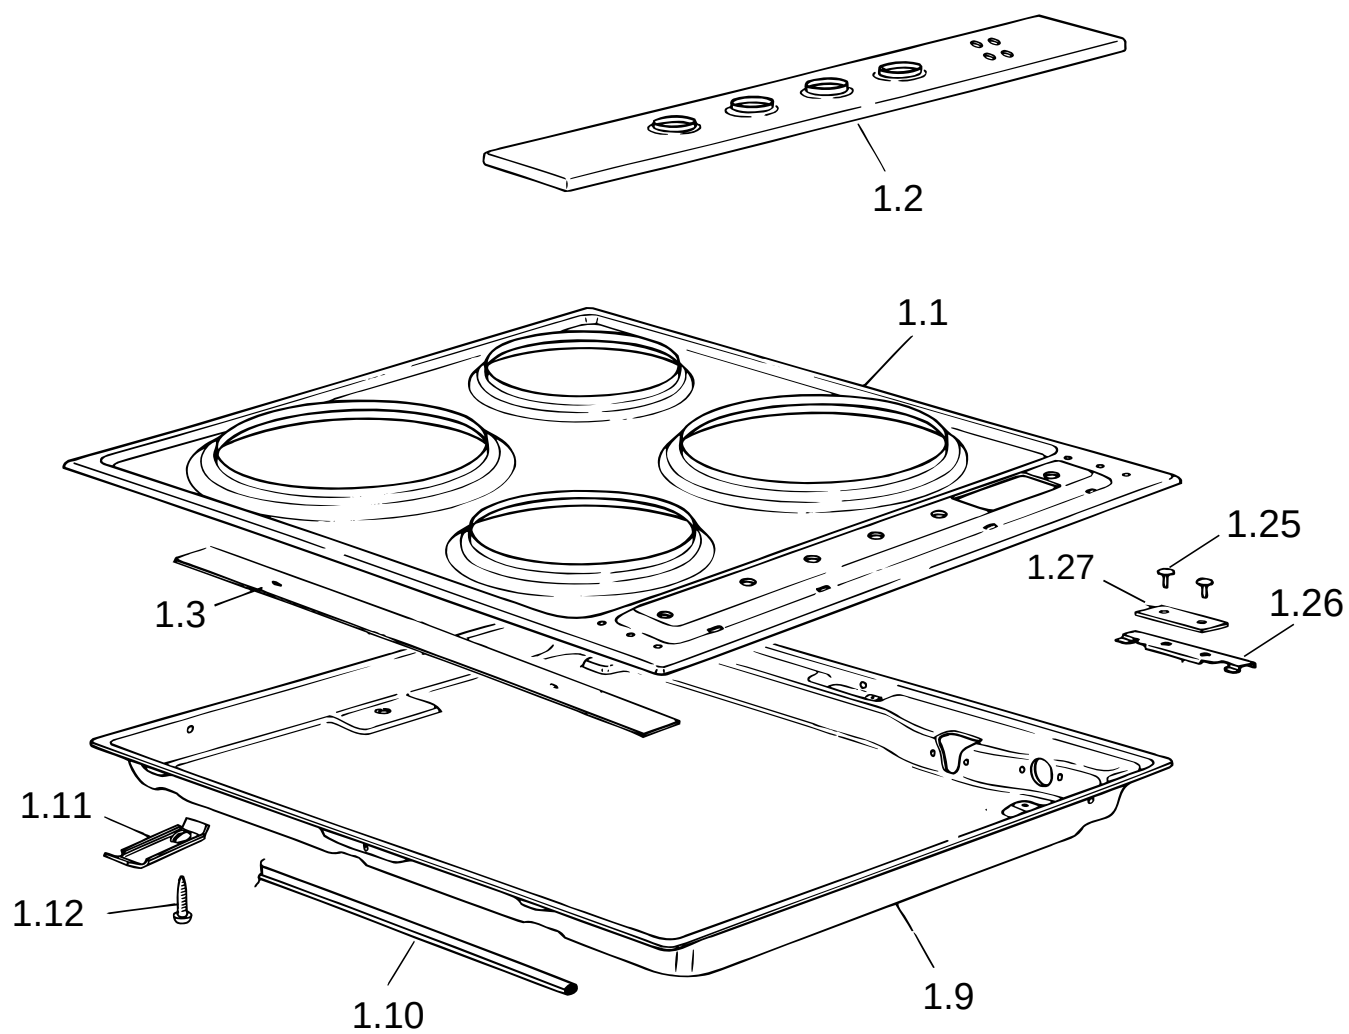

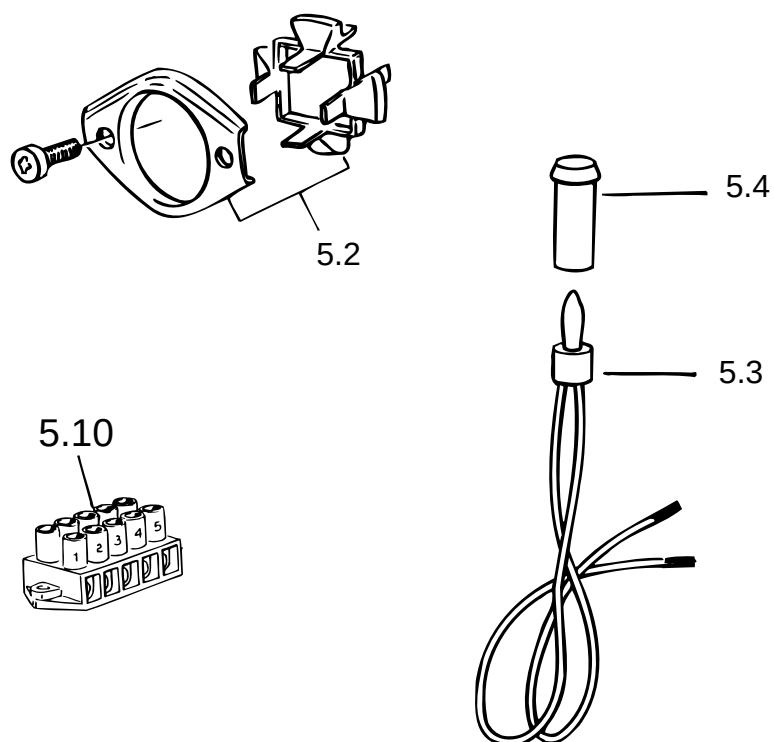

ELECTRIC COMPONENTS

Mod.: "LEHW, LEHS"

Ref. Table: 2/5.F

<u>REF.</u>	<u>CODE</u>	<u>DESCRIPTION</u>
5.2	052001	Wire fastener
5.3	073021	Control lamp L 420
=	073022	Control lamp L 270
5.4	073023	Control lamp cover
5.10	051025	Terminal block
-	113844	Wiring

Position	Code	description
1= 1.1	330I50411	Hob top
2= 1.2	35P18873DA	CONTROL PANEL
3= 1.9	4116321	Burner casing
4= 1.10	053065	SEAL
5= 1.11	094154	Fixing bracket
6= 1.12	001130	SCREW
7= 1.22	58B6303	Bar
8= 1.25a	103118002	Plug (Black)
9= 1.25b	103118035	Plug (White)
10= 1.26	094101	BRACKET
11= 1.27	103120	PROTECTION
12= 4.1a	218A00355M	Knob (White)
13= 4.1b	218P00255M	Knob (Black)
14= 4.2	050033	Normal/rapid electric plate switch
15= 4.3a	04724230	Normal electric plate - diameter 145 - 1000 W - 230 V
16= 4.3b	04737230	Normal electric plate - diameter 180 - 1500 W - 230 V
17= 4.4a	103084R	Normal/rapid plate protection diam 145
18= 4.4b	103081	Normal/rapid plate protection - diameter 180
19= 4.4c	58B6301	Normal plate protection - diameter 180
20= 4.5	214025	NUT
21= 4.6	053055	Switch gasket
22= 4.7	003020	WASHER
23= 4.8	214027	NUT
24= 4.11a	04764230	Rapid electric plate - diameter 145 - 1500 W - 230 V
25= 4.11b	04765230	Rapid electric plate - diameter 180 - 2000 W - 230 V
26= 5.2	052001	Wire fastener
27= 5.3a	073021	Control lamp L 420
28= 5.3b	073022	Control lamp L 270
29= 5.4	073023	Control lamp cover
30= 5.10	051025	Terminal block