


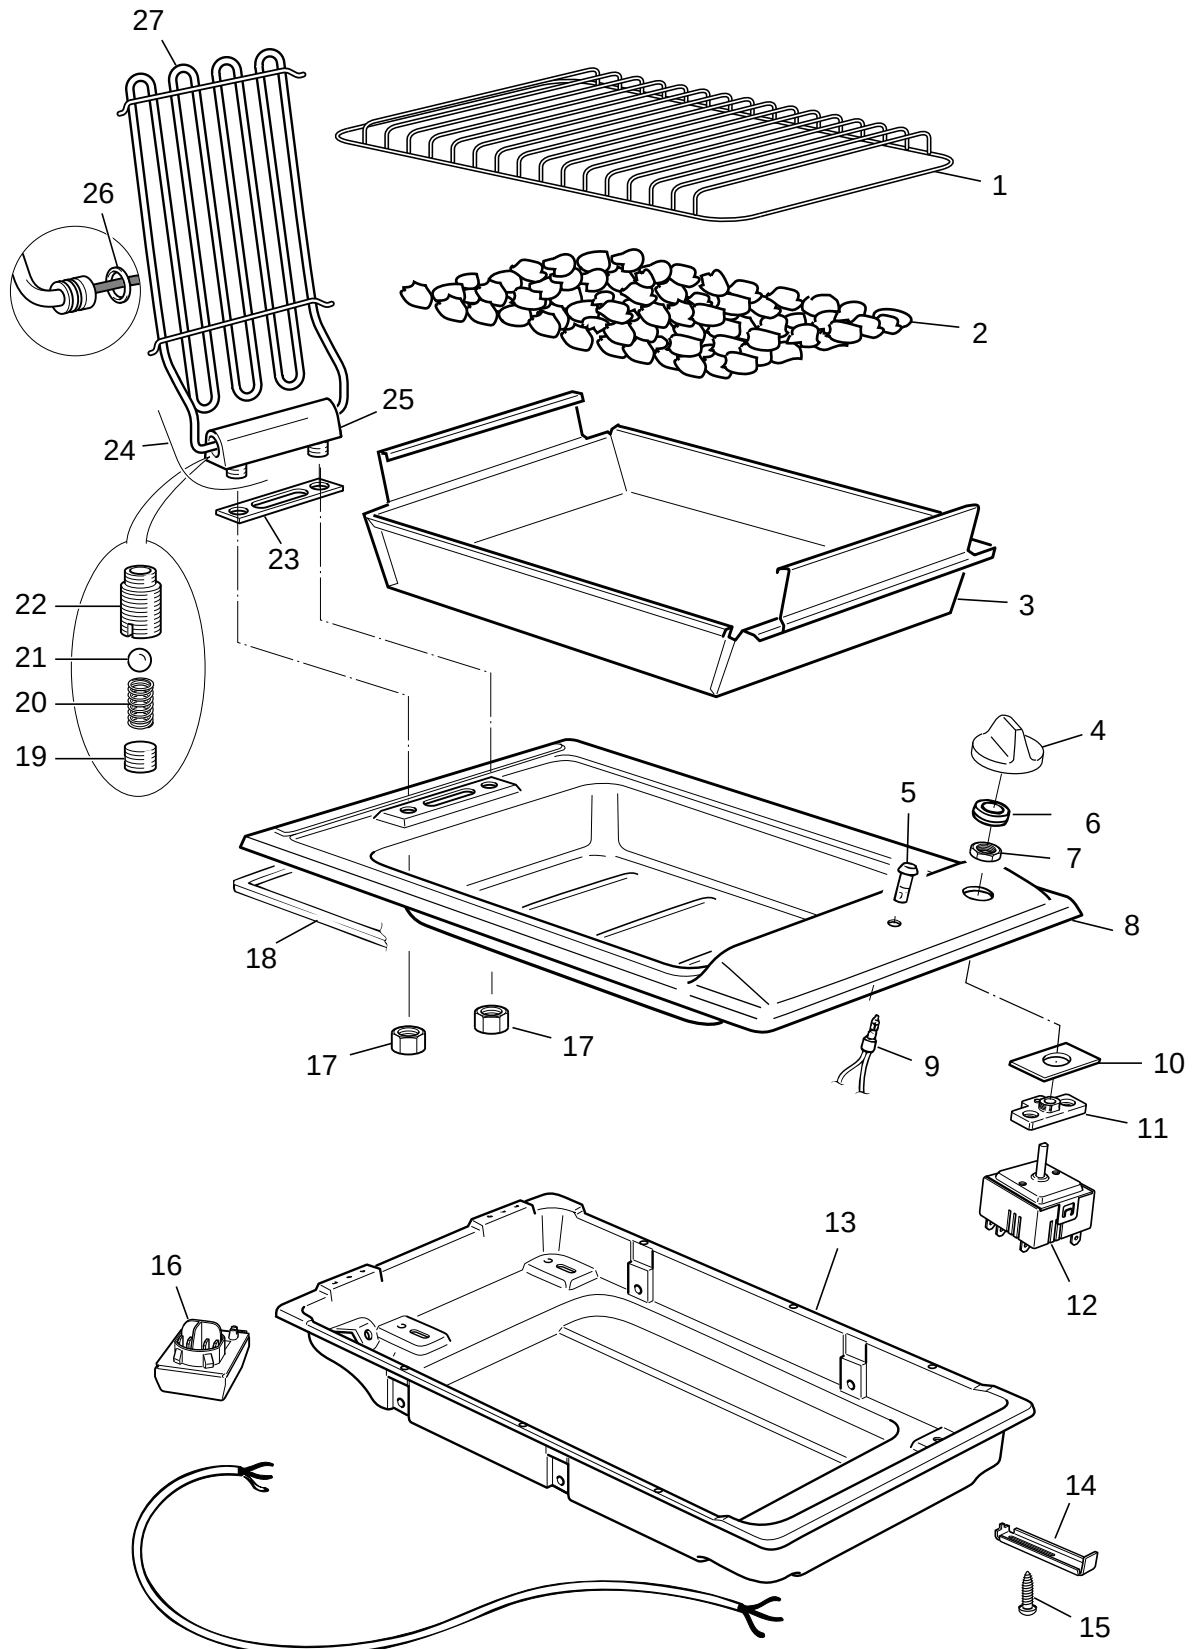

Position	Code	description
01	NOCODE01	NOT AVAILABLE
02	103503	Pumice stone
03	4113B01	Pumice stone tray
04	218G00X333	KNOB
05	073060	Control lamp cover (Orange)
06	053079	Knob rubber
008A	333B014SDA	Domino cooktop
008B	334B014SDA	Domino cooktop
09	073043	Control lamp L 200
10	053055	Switch gasket
12	050110230	Energy regulator
13	4113B02	CASING
14	094347	Front fixing bracket (to fix the appliance to the cabinet)
15	001069	SCREW
16	051079	Terminal Block
18	053065	SEAL
20	035096	SPRING
21	103534	BALL
22	071057	BOLT
23	053081	GASKET
24	4933B001	Tiltable electric element group
26	003056	O RING
27	062085004	Tiltable electric element