


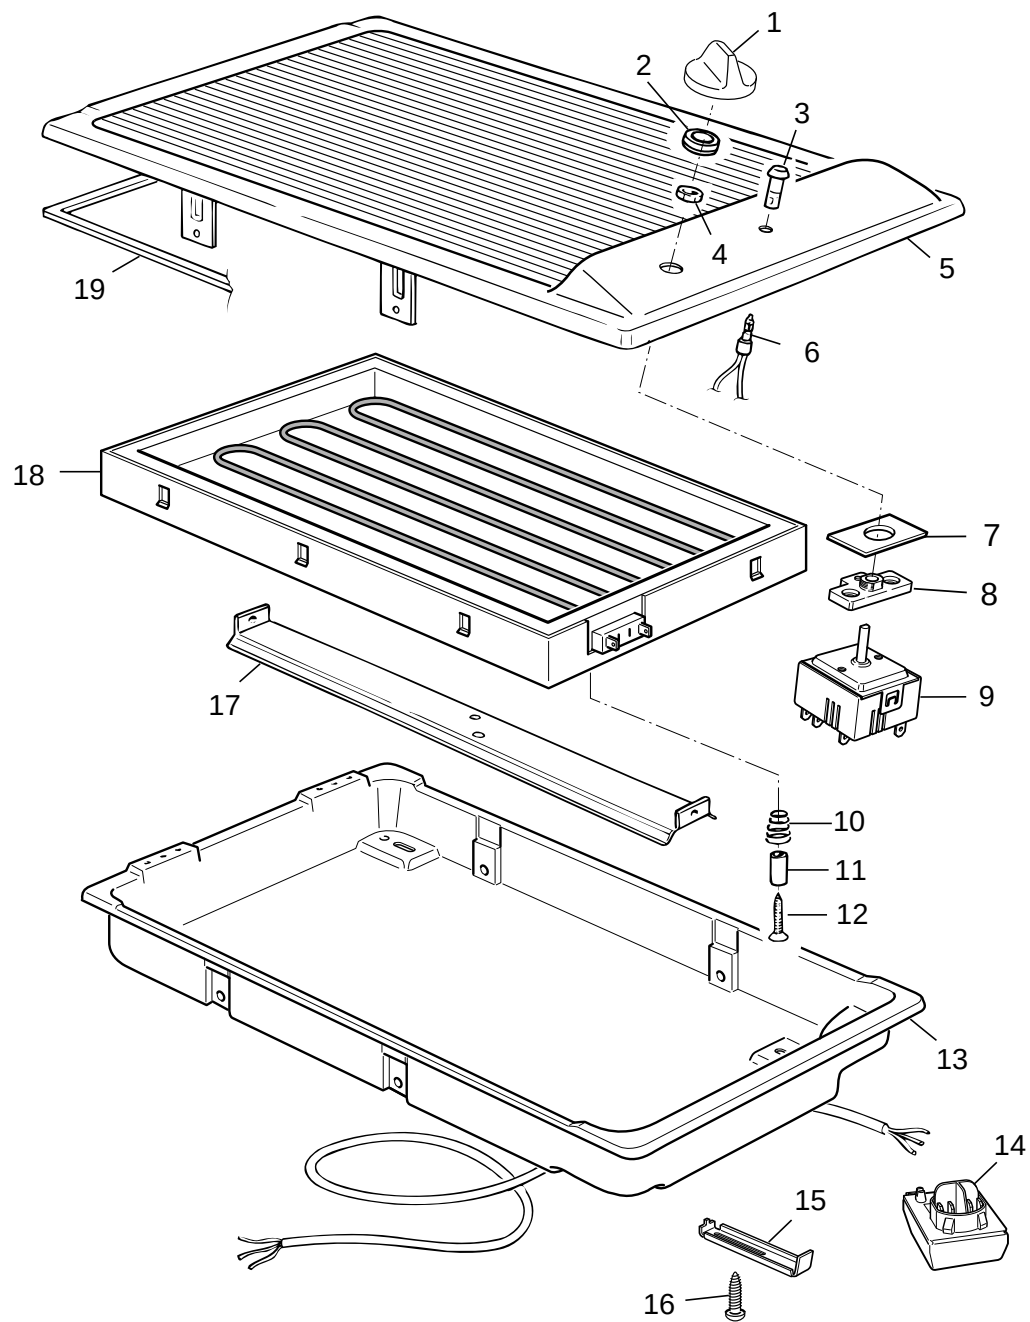

Position	Code	description
01	218G00X333	KNOB
02	053079	Knob rubber
03	073060	Control lamp cover (Orange)
05	3553C60	WORK TOP
06	073043	Control lamp L 200
07	053055	Switch gasket
08	NOCODE01	NOT AVAILABLE
09	050110230	Energy regulator
13	4113C05	CASING
14	051079	Terminal Block
15	094347	Front fixing bracket (to fix the appliance to the cabinet)
16	001069	SCREW
19	053065	SEAL