


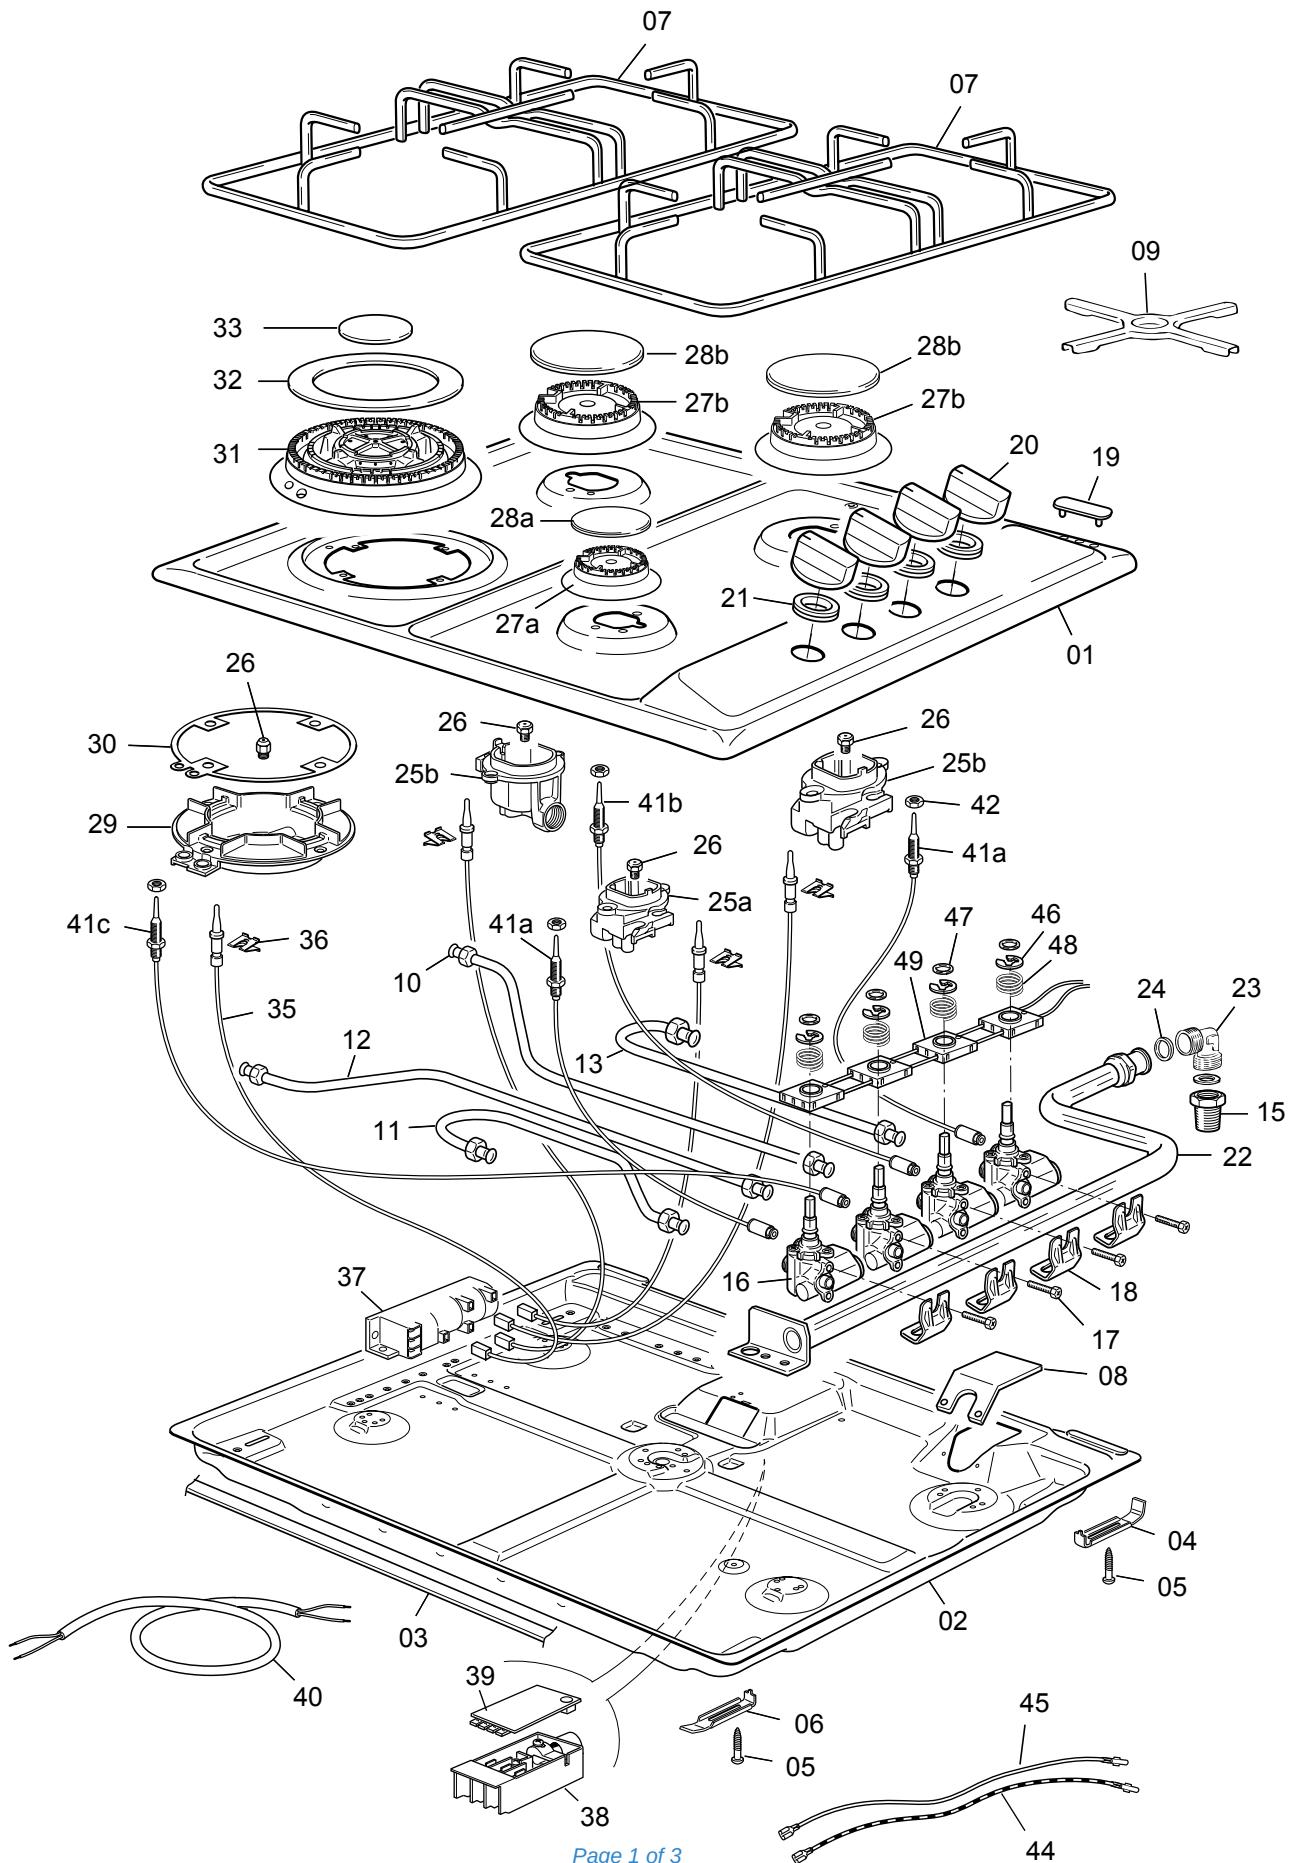

Position	Code	description
01	3360402SDL	WORK TOP
02	4116001	BOTTOM
03	053065	SEAL
04	094335	Fixing bracket
06	094338	Fixing bracket
07	217424	GRID
08	094337	Inlet pipe fixing bracket
09	217303	Grate for small pans
10	NOCODE01	NOT AVAILABLE
15	067026	Conical adaptor
016A	106224	Tap - diameter 0.25 - A
016B	106230	SR tap - diameter 0.30
016C	106232	Tap - diameter 0.62
17	001189	SCREW
19	10348100X	PLUG
20	2183007363	KNOB
21	040057	Rubber joint
22	3426040G01	FEED ASSY
23	067008	Elbow
24	053024.1	Sealing washer
25A	215465	Burner-cupA
25B	215466	Burner-cupSR
026A	101180	Injector (ulpg) diam 0.50 - DU CENTR
026B	101181	INJECTOR d. 0,65
026C	101233	Injector ULPG Ø 0.95 - TR
026D	101234	INJECTOR d. 0,72
026E	101235	INJECTOR d. 0,97
026F	101237	Injector diam 1.35 - G20
27A	068109003	Burner-head Auxiliary
27B	068110003	Burner-head Semi-rapid
28A	216129080	Burner-cap A
28B	216130080	Burner-cap SR
29	215469	Burner-cup Triple-ring
30	053078	Triple-ring burner-cup gasket
31	068115003	Burner-head Triple-ring
32	216133080	Burner-cap outside TR
33	216132080	Burner-cap inside TR

035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid & amp
035C	084033	Igniter TR - L = 500
36	035094	Igniter spring
37	082082	Electronic ignition
38	051054	Terminal block
41A	107039	Burner thermocouple L=500 mm
41B	107039	Burner thermocouple L=500 mm
41C	107043	Burner thermocouple L=500mm (triple-ring burner)
42	214057	NUT
46	003055	WASHER
48	035095	SPRING
49	103482	Ignition switches