


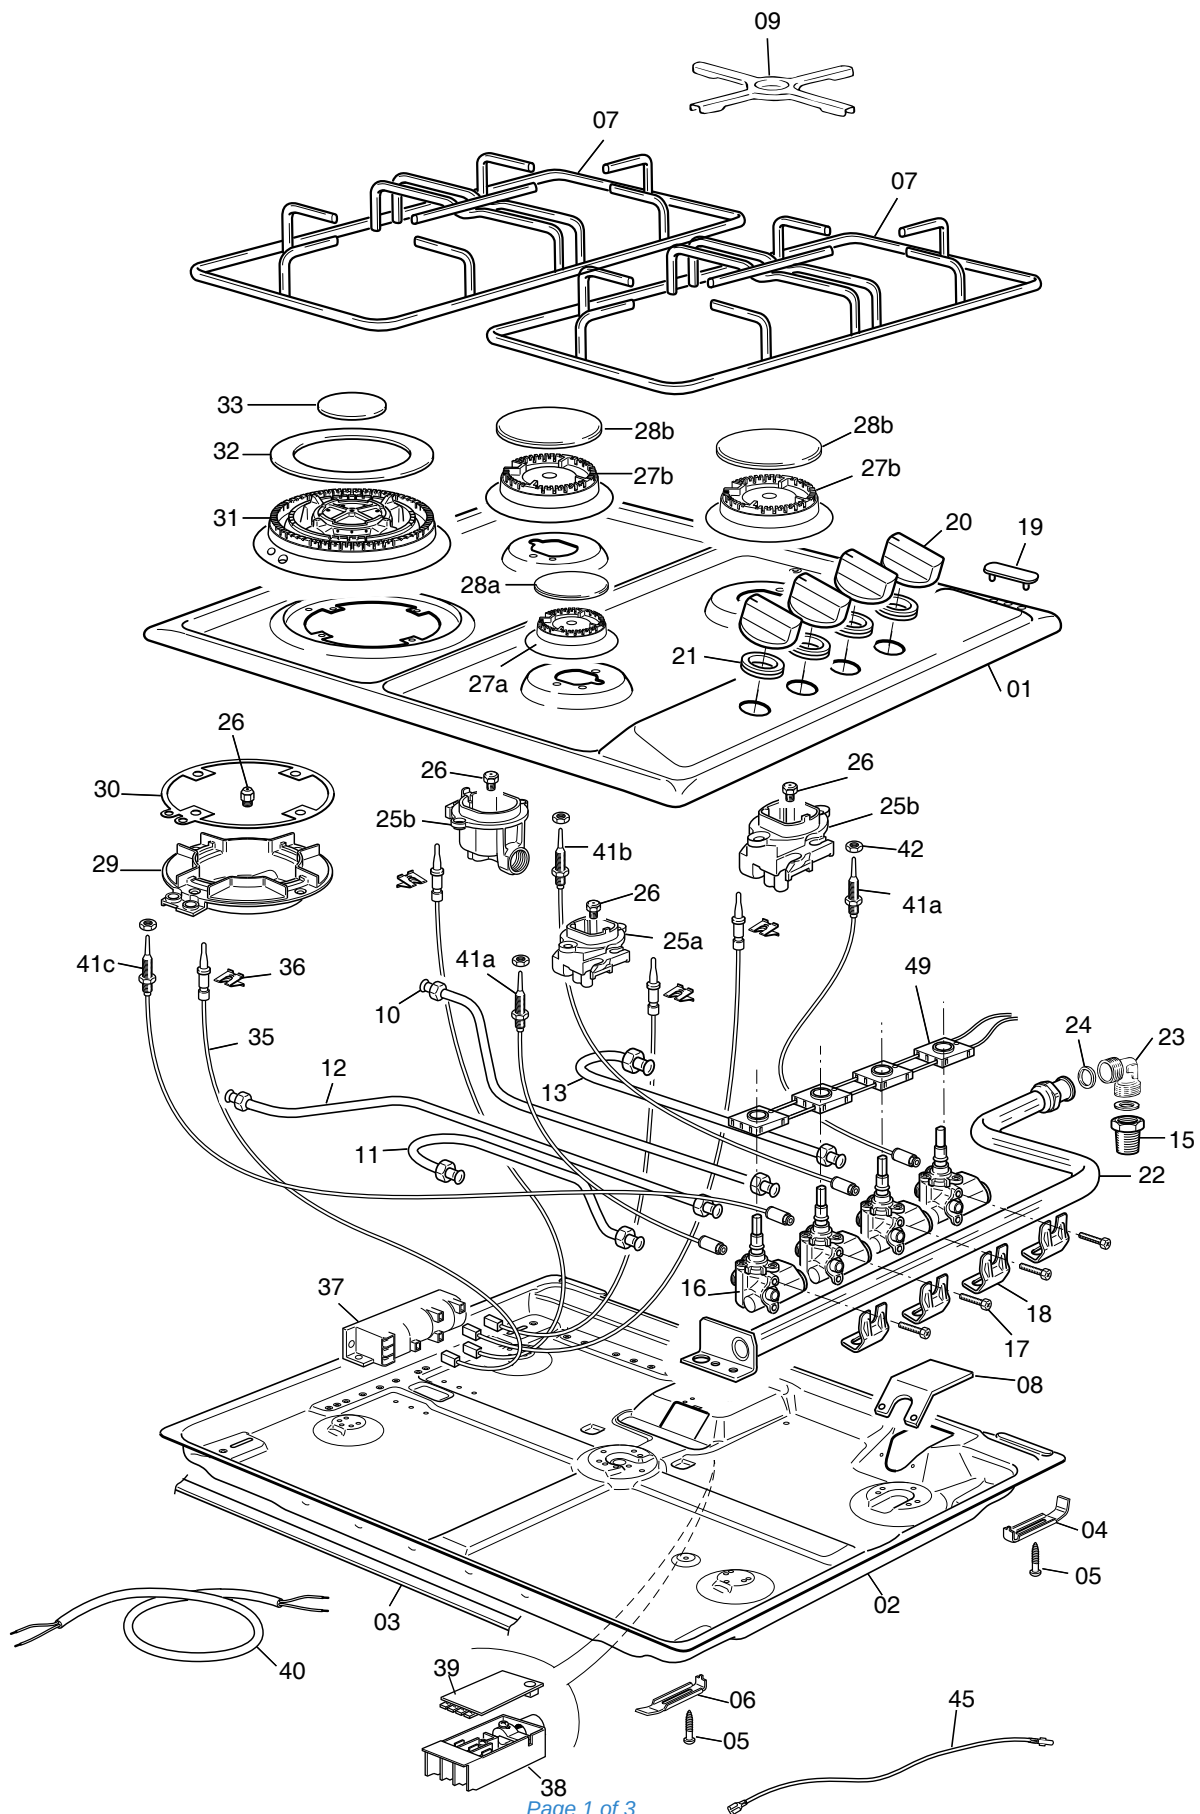

Position	Code	description
01	3360402SD1	WORK TOP
02	4116001	BOTTOM
03	053065	SEAL
04	094335	Fixing bracket
06	094338	Fixing bracket
07	217424	GRID
08	094337	Inlet pipe fixing bracket
09	217303	Grate for small pans
10	029863	PIPING
11	029861	PIPING
12	029864	PIPING TC
13	029862	PIPING
15	067026	Conical adaptor
016A	106249	Tap Auxiliary diam 0.27
016B	106252	Tap Semi-rapid diam 0.34
016C	106254	Tap Triple-ring diam 0.65
18	094616	Tap bracket
19	10348100X	PLUG
20	2183007363	KNOB
21	040057	Rubber joint
22	3426040G01	FEED ASSY
23	067008	Elbow
24	053024.1	Sealing washer
25a	215465	Burner-cupA
25b	215466	Burner-cupSR
026A	101180	Injector (ulpg) diam 0.50 - DU CENTR
026B	101181	INJECTOR d. 0,65
026C	101233	Injector ULPG Ø 0.95 - TR
026D	101234	INJECTOR d. 0,72
026E	101235	INJECTOR d. 0,97
026F	101237	Injector diam 1.35 - G20
27a	068109003	Burner-head Auxiliary
27b	068110003	Burner-head Semi-rapid
28a	216129080	Burner-cap A
28b	216130080	Burner-cap SR
29	215169	BURNER
30	053078	Triple-ring burner-cup gasket

31	068115003	Burner-head Triple-ring
32	216133080	Burner-cap outside TR
33	216132080	Burner-cap inside TR
035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid &
035C	084032	Spark plug L=250mm (triple-ring burner)
36	035094	Igniter spring
37	082082	Electronic ignition
38	051054	Terminal block
41a	107039	Burner thermocouple L=500 mm
41b	107039	Burner thermocouple L=500 mm
41c	107043	Burner thermocouple L=500mm (triple-ring burner)
42	214057	NUT
45	NOCODE01	NOT AVAILABLE
49	1031123	Ignition switches