


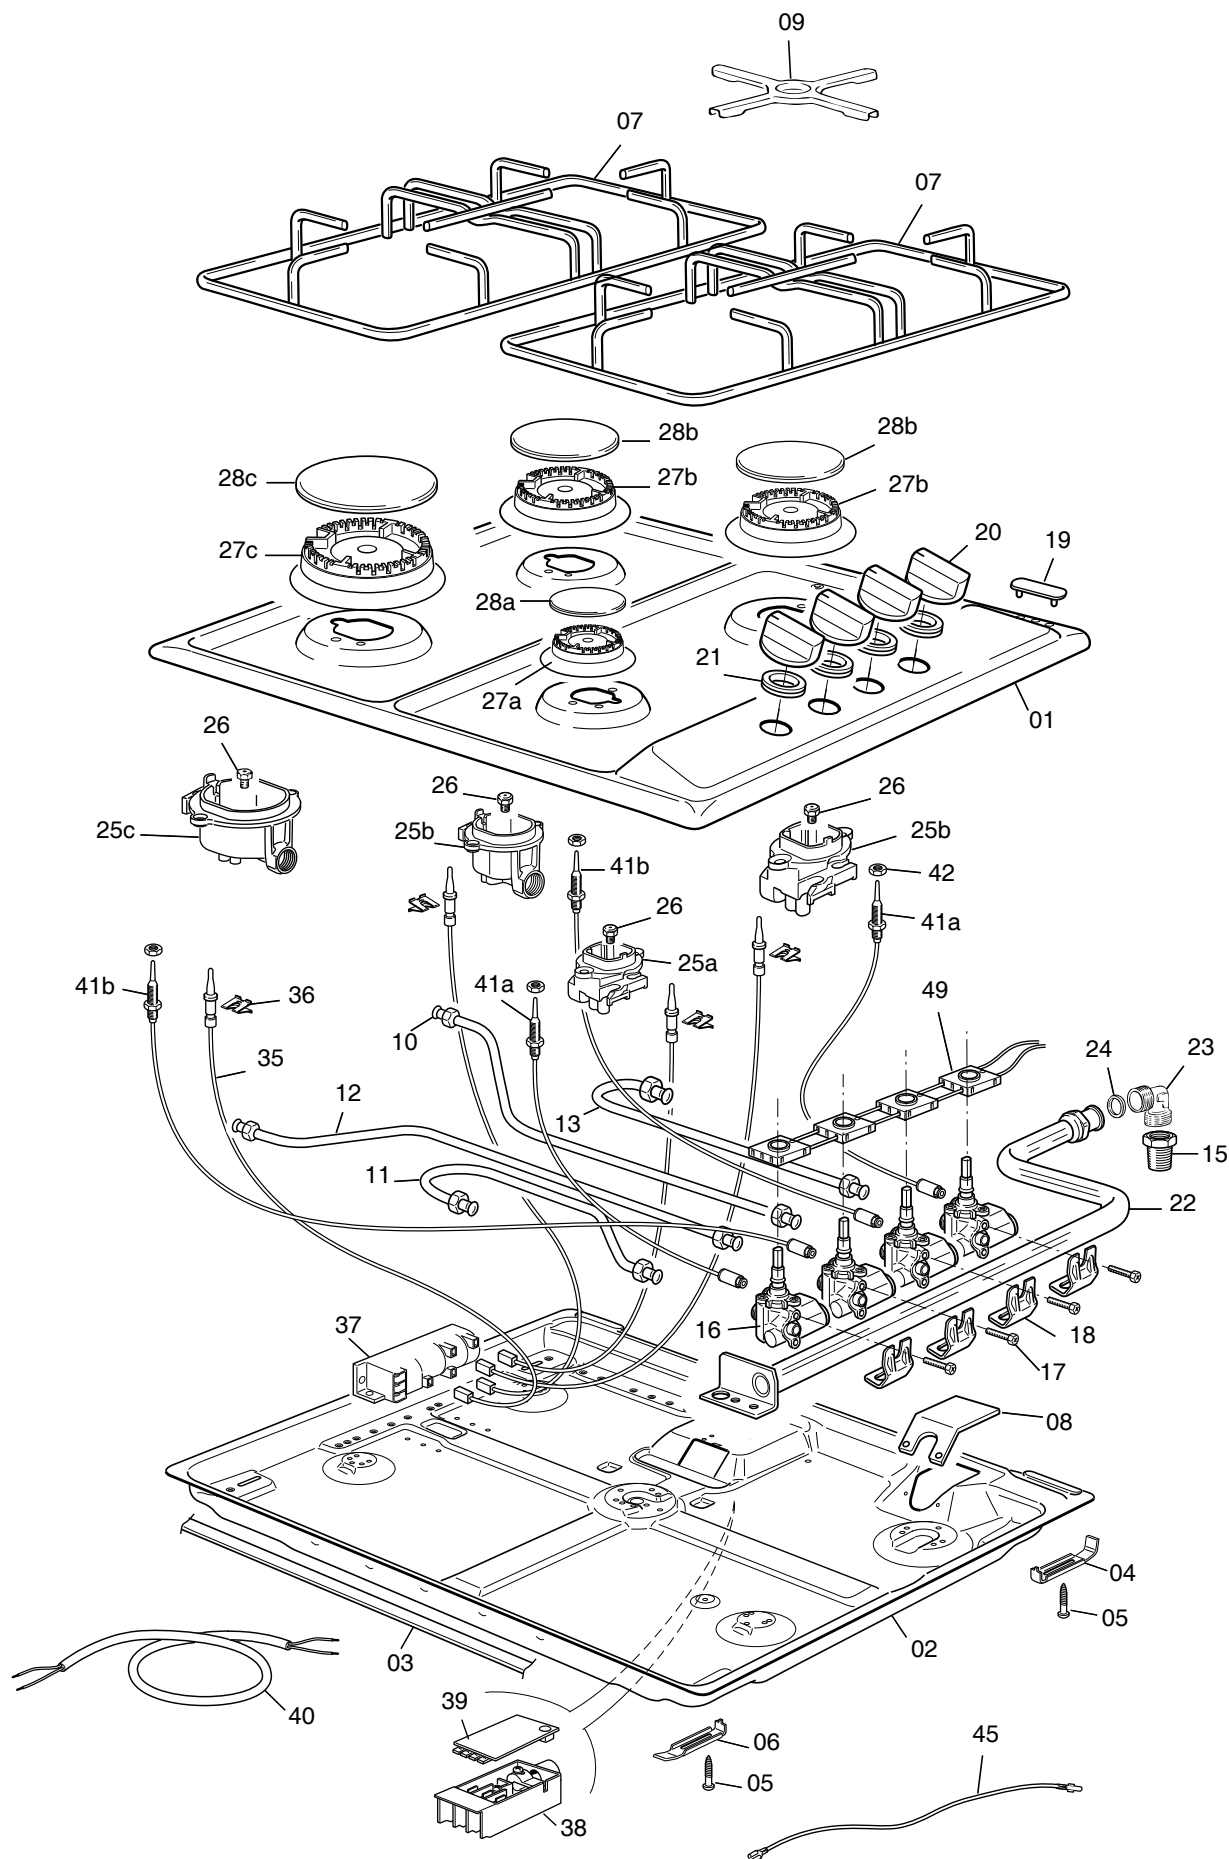

IT IL46ASV

IL46ASV Rubinetti Alluminio SABAF -
SOSTITUITO DA P60DDL001X

Position	Code	description
01	3360401SD1	WORK TOP
02	4116001	BOTTOM
03	053065	SEAL
04	094335	Fixing bracket
05	NOCODE01	NOT AVAILABLE
06	094338	Fixing bracket
07	217424	GRID
08	094337	Inlet pipe fixing bracket
09	217303	Grate for small pans
10	029863	PIPING
11	029861	PIPING
12	029868	PIPING
13	029862	PIPING
15	067026	Conical adaptor
016A	106249	Tap Auxiliary diam 0.27
016B	106252	Tap Semi-rapid diam 0.34
016C	106253	Tap Rapid diam 0.44
18	094616	Tap bracket
19	10348100X	PLUG
20	2183007363	KNOB
21	040057	Rubber joint
22	3426040G01	FEED ASSY
23	067008	Elbow
24	053024.1	Sealing washer
25a	215465	Burner-cupA
25b	215466	Burner-cupSR
25c	215467	Burner-cupTR
026A	101180	Injector (ulpg) diam 0.50 - DU CENTR
026B	101181	INJECTOR d. 0,65
026C	101182	Injector NATURAL GAS Ø 0.85 - A
026D	101234	INJECTOR d. 0,72
026E	101235	INJECTOR d. 0,97
026F	101236	INJECTOR d. 1,15
27a	068109003	Burner-head Auxiliary
27b	068110003	Burner-head Semi-rapid
27c	068111003	Burner-head Rapid
28a	216129080	Burner-cap A

IT IL46ASV

IL46ASV Rubinetti Alluminio SABAF -
SOSTITUITO DA P60DDL001X

28b	216130080	Burner-cap SR
28c	216131080	HEAD R
035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid & amp
36	035094	Igniter spring
37	082082	Electronic ignition
38	051054	Terminal block
41a	107039	Burner thermocouple L=500 mm
41b	107039	Burner thermocouple L=500 mm
42	214057	NUT
49	1031123	Ignition switches