


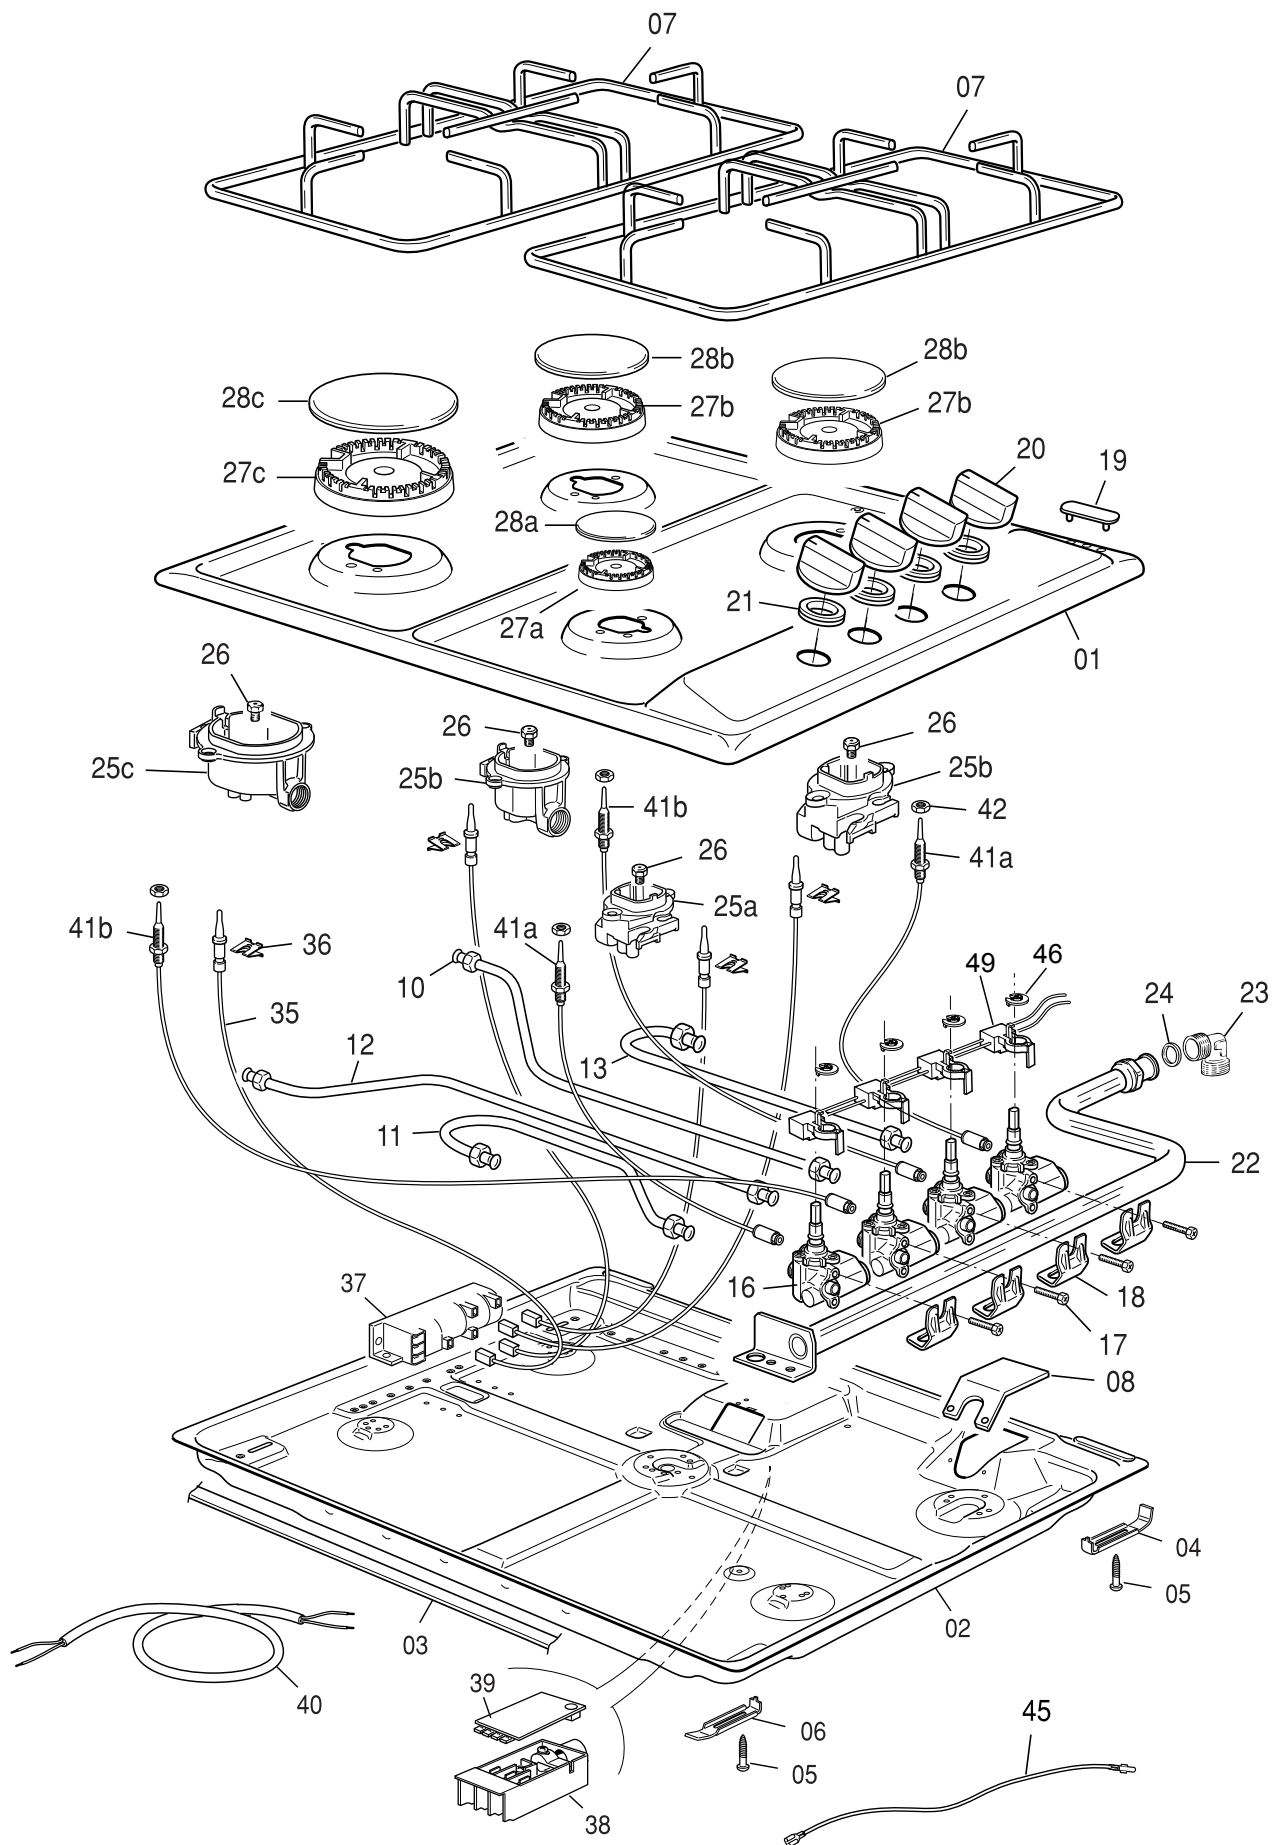

Position	Code	description
01	3D60401SD1	WORK TOP
02	4116001	BOTTOM
03	053026	SEAL
04	094335	Fixing bracket
05	001221	SCREW
06	094338	Fixing bracket
07	217424	GRID
08	094337	Inlet pipe fixing bracket
10	0291013	PIPING
11	0291012	PIPING
12	0291015	PIPING
13	0291014	PIPING
16A	106289GN	TAP
16B	106290	Faucet d.0,34
16C	106291	TAP
17	001282	Tap fixing screw
18	094654	Tap bracket
19	103481002	PLUG
20	2183007363	KNOB
21	040057	Rubber joint
22	3426040G01	FEED ASSY
23	067008	Elbow
24	053024.1	Sealing washer
25A	215496	Burner-cup A
25B	215497	Burner-cup SR
25C	215499	Burner-cup R
26A	101348	Injector diam 0.50 - DUAL IN
26B	101351	Injector diam 0.66 - DB outer (2x) (ULPG)
26C	101352	INJECTOR
26D	101343	INJECTOR
26E	101353	INJECTOR
26F	101354	INJECTOR
27A	068131003	Burner head A
27B	068132003	Burner head SR
27C	068133003	Burner head R
28A	216157080	FLAME BAFFLE R
28B	216158080	FLAME BAFFLE SR

28C	216159080	FLAME BAFFLE A
35A	084058	Spark plug L = 250 mm
35B	084060	Spark plug L = 500 mm
36	035125	Igniter spring
37	082082	Electronic ignition
38	051054	Terminal block
39	103451	Terminal block cover
40	054128	WIRING
41B	107082	THERMOCOUPLE
42	214079	Thermocouple nut
45	103389	Cable L = 400
46	003094	RETAINING RING
49	1031469	Ignition switches