


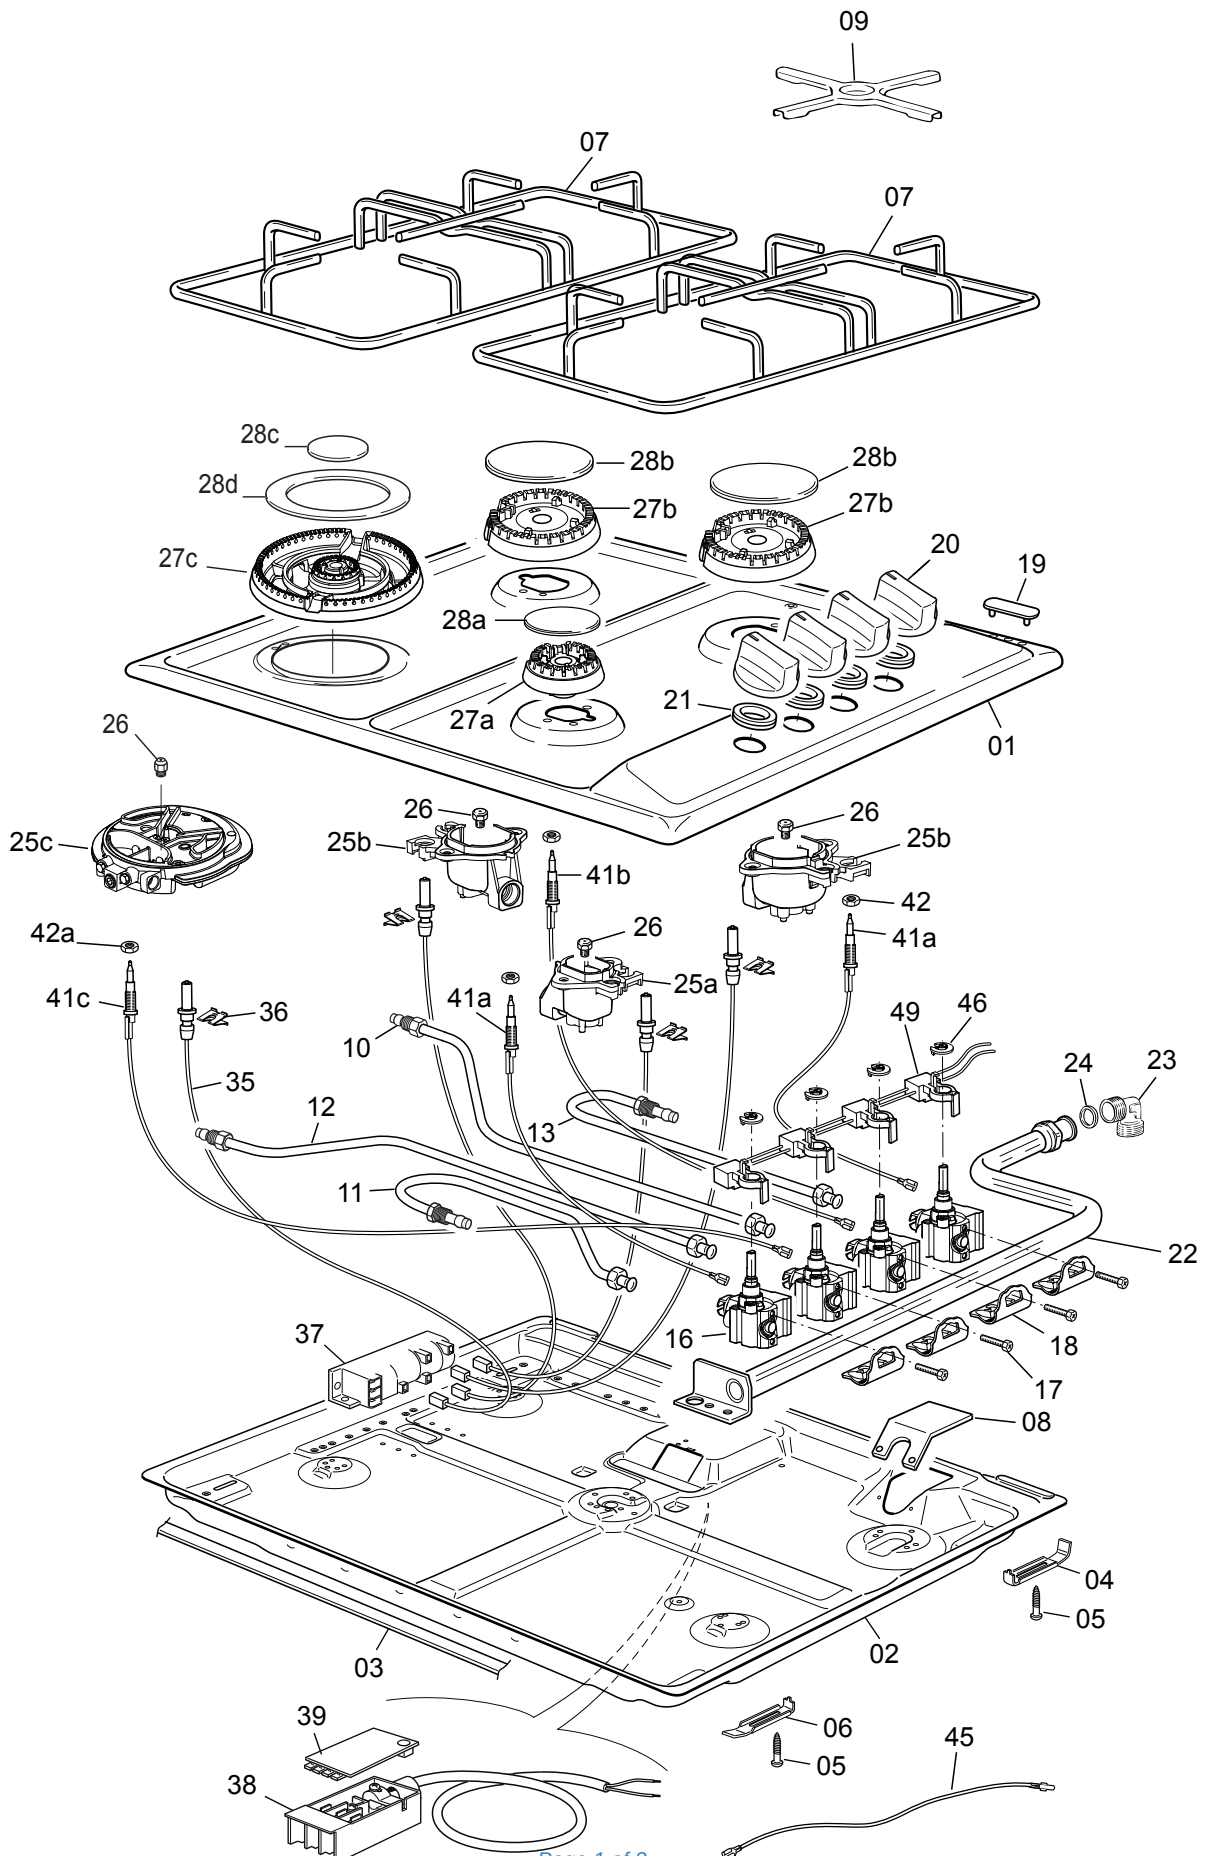

Position	Code	description
01	3D60402SD1	WORK TOP
02	4116001	BOTTOM
03	053026	SEAL
04	094335	Fixing bracket
05	001221	SCREW
06	094338	Fixing bracket
07	217424	GRID
08	094337	Inlet pipe fixing bracket
09	217303	Grate for small pans
10	0291014	PIPING
11	0291012	PIPING
12	0291016	PIPING
13	0291013	PIPING
16A	106289GN	TAP
16B	106290	Faucet d.0,34
16C	106292	TAP
17	001282	Tap fixing screw
18	094654	Tap bracket
19	10348100X	PLUG
20	2183007363	KNOB
21	040057	Rubber joint
22	3426040G01	FEED ASSY
23	067008	Elbow
24	053024.1	Sealing washer
25A	215496	Burner-cup A
25B	215497	Burner-cup SR
25C	215500	Burner-cup TR
26A	101348	Injector diam 0.50 - DUAL IN
26B	101351	Injector diam 0.66 - DB outer (2x) (ULPG)
26C	101352	INJECTOR
26D	101343	INJECTOR
26E	101353	INJECTOR
26F	101355	INJECTOR
27A	068131003	Burner head A
27B	068132003	Burner head SR
27C	068135	Burner-head TR
28A	216159080	FLAME BAFFLE A

28B	216158080	FLAME BAFFLE SR
28C	216155080	HEAD
28D	216156080	HEAD
35A	084058	Spark plug L = 250 mm
35B	084060	Spark plug L = 500 mm
35C	084063	ELECTRODE
36	035125	Igniter spring
37	082082	Electronic ignition
38	660128054	BOX
39	103451	Terminal block cover
41A	107082	THERMOCOUPLE
41C	107085	THERMOCOUPLE
42A	214079	Thermocouple nut
42B	214080	Thermocouple nut DUAL
45	103389	Cable L = 400
46	003094	RETAINING RING
49	1031469	Ignition switches