


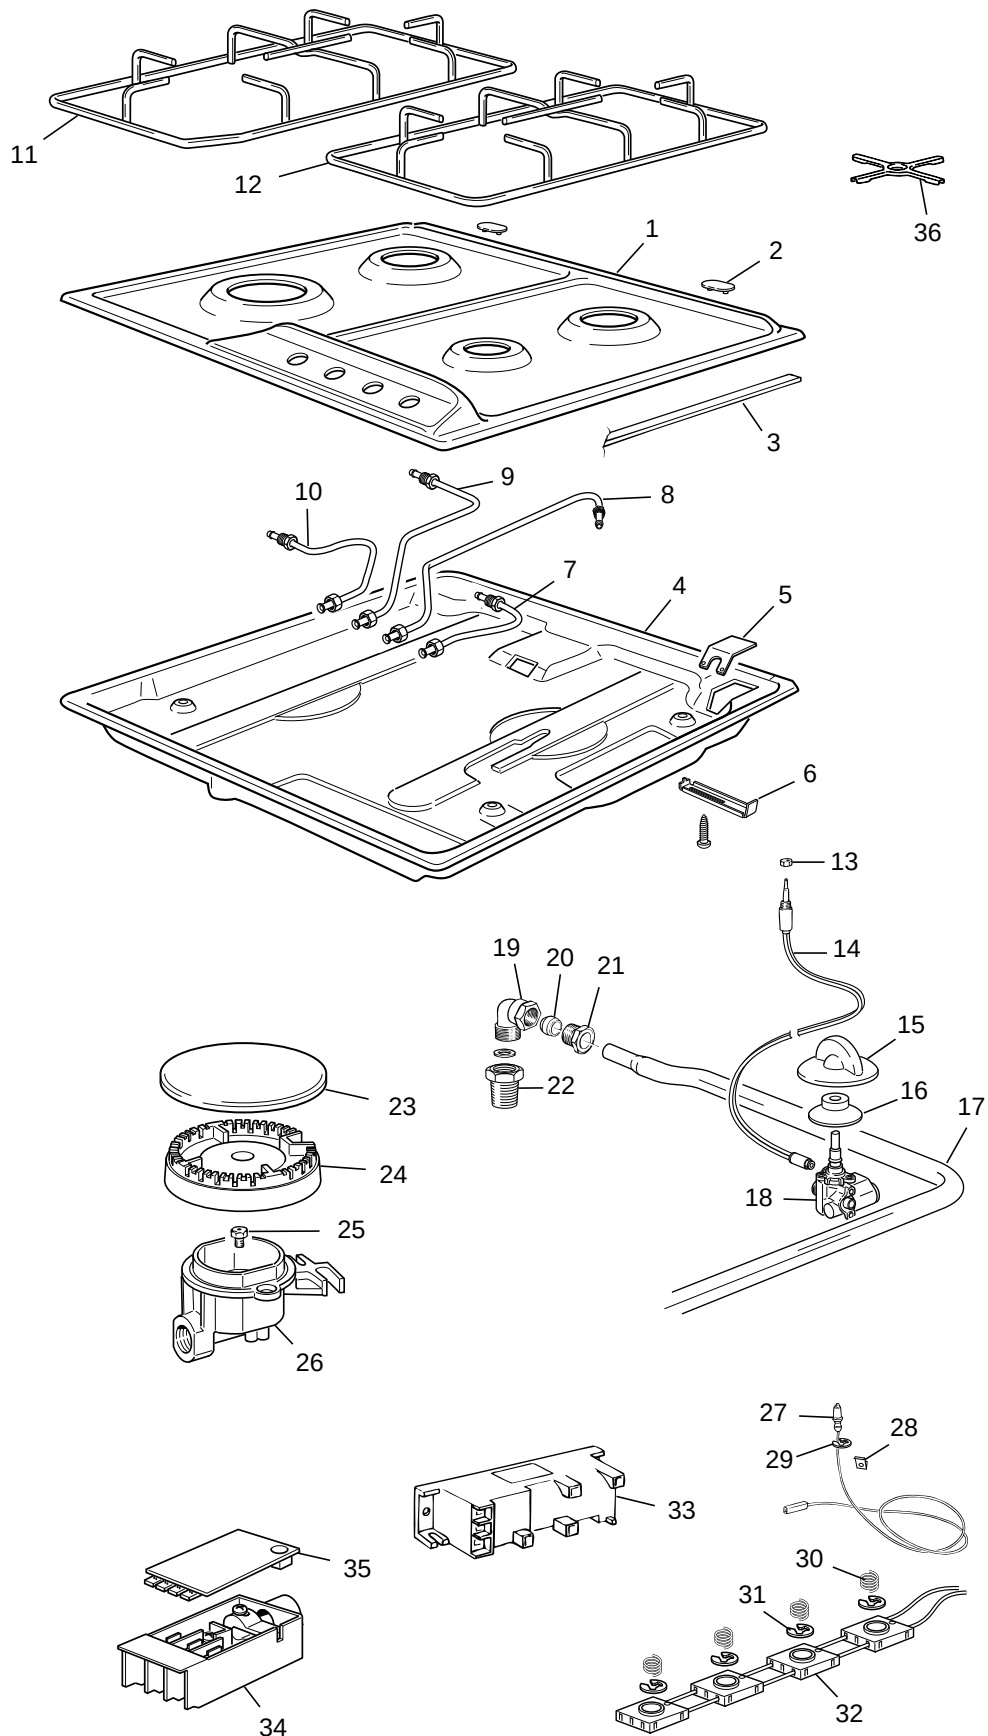

Position	Code	description
01	336D404SDL	WORK TOP
02	103481002	PLUG
03	053037	SEAL
04	4116D02	Burner casing
05	094337	Inlet pipe fixing bracket
06	094338	Fixing bracket
07	NOCODE01	NOT AVAILABLE
08	029529	Right SR burner pipe
11	217540080	Left top grate
12	217541080	Right top grate
13	214057	NUT
014A	107039	Burner thermocouple L=500 mm
014B	107039	Burner thermocouple L=500 mm
014C	107040	Burner thermocouple - L=600 mm
15	218P00261M	KNOB
16	040053	RUBBER PAD
17	3426D40G01	FEED ASSY
018A	106224	Tap - diameter 0.25 - A
018B	106230	SR tap - diameter 0.30
018C	106231	R tap - diameter 0.40
19	067027	CONNECTION
20	103212	DOUBLE CONE
21	214038	NUT
22	067026	Conical adaptor
023A	216129080	Burner-cap A
023B	216130080	Burner-cap SR
023C	216131080	HEAD R
024A	068104001	BURNER SR
024B	068105001	BURNER R
024C	068108001	BURNER A
025A	101180	Injector (ulpg) diam 0.50 - DU CENTR
025B	101181	INJECTOR d. 0,65
025C	101182	Injector NATURAL GAS Ø 0.85 - A
025D	101234	INJECTOR d. 0,72
025E	101235	INJECTOR d. 0,97
025F	101236	INJECTOR d. 1,15
026A	215465	Burner-cupA

026B	215466	Burner-cupSR
026C	215467	Burner-cupTR
027A	084028	Spark plug L=250mm (auxiliary burner)
027B	084029	Spark plug L=630mm (semirapid & amp
28	035094	Igniter spring
30	035095	SPRING
31	003055	WASHER
32	103482	Ignition switches
33	082082	Electronic ignition
34	051054	Terminal block
36	217303	Grate for small pans