


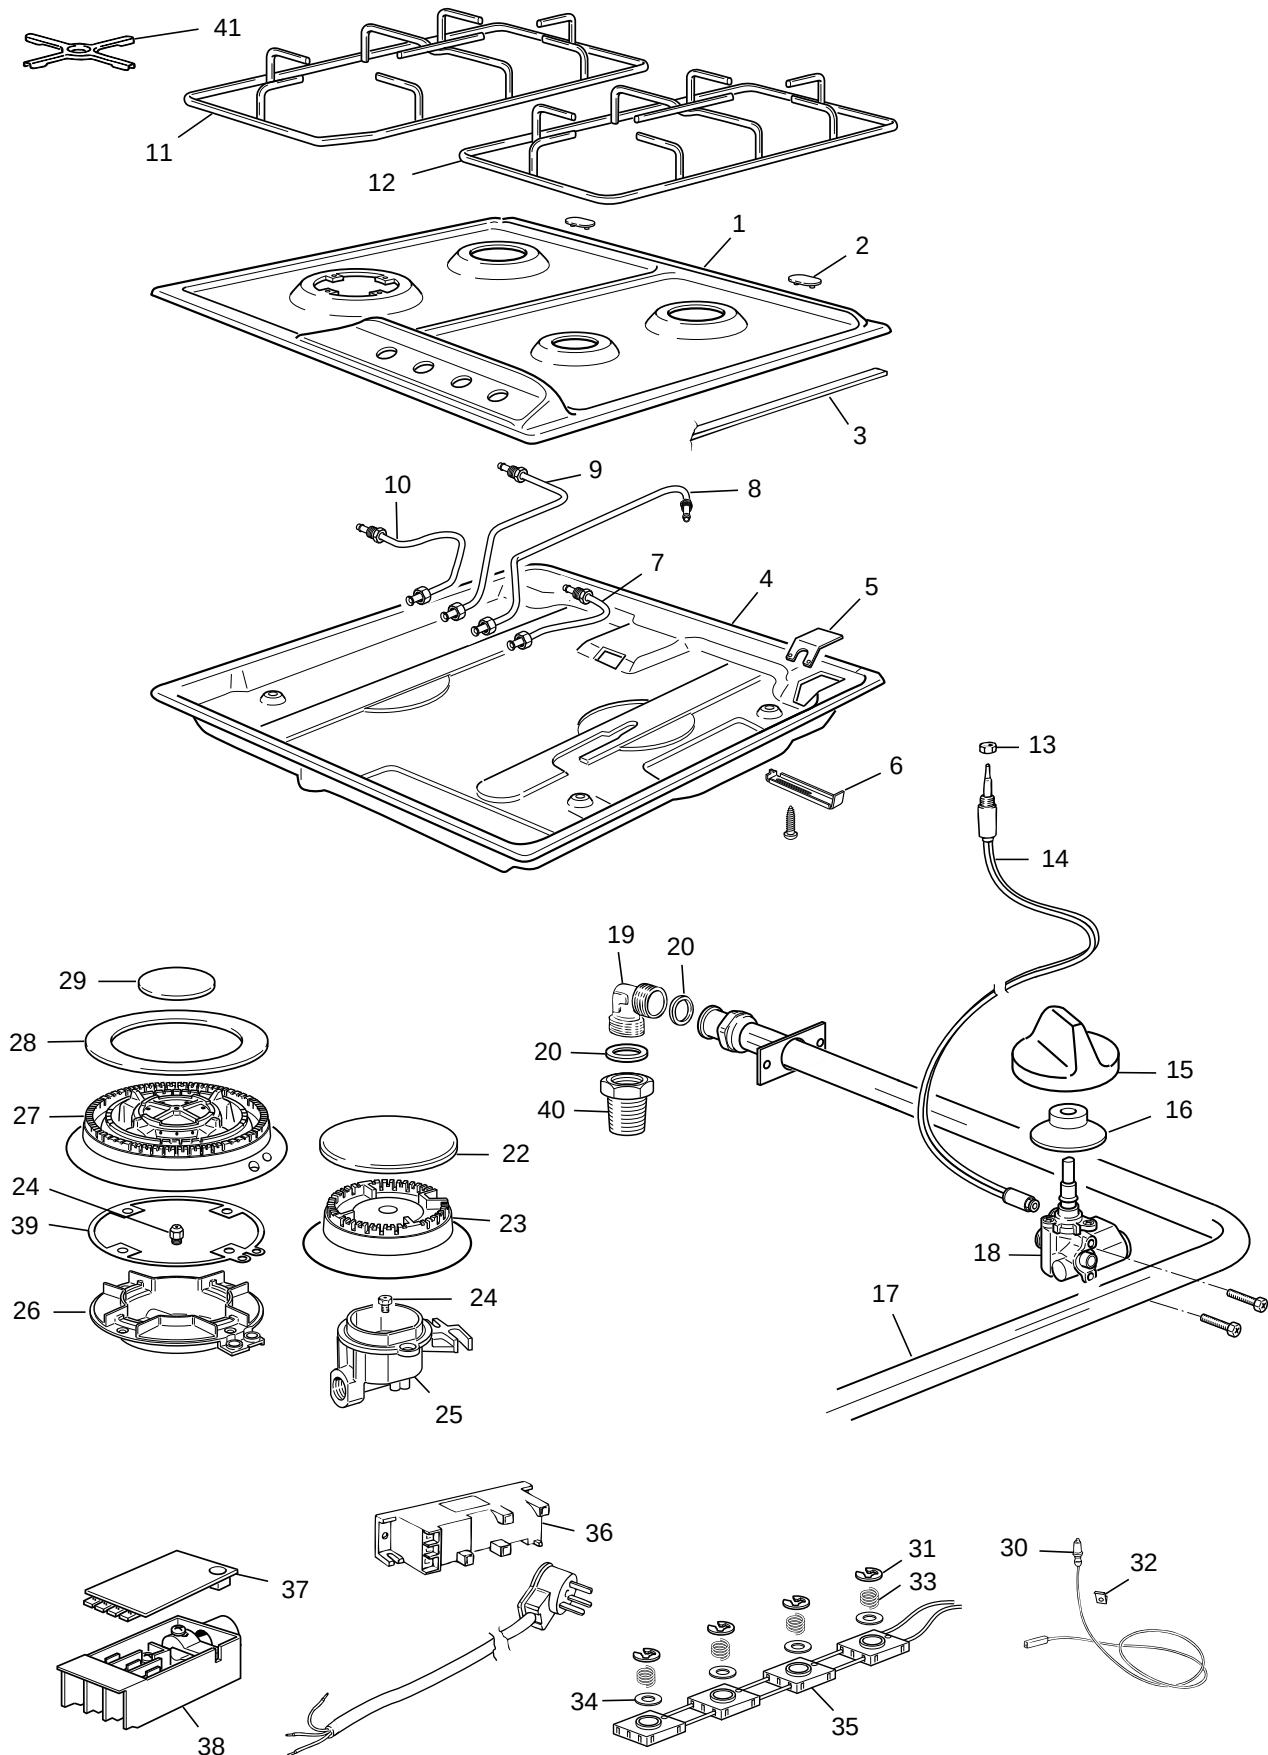

Position	Code	description
01	336D409SDA	Hob top
02	10348100X	PLUG
03	053037	SEAL
04	4116D02	Burner casing
05	094337	Inlet pipe fixing bracket
06	094338	Fixing bracket
08	029529	Right SR burner pipe
09	NOCODE01	NOT AVAILABLE
11	217540080	Left top grate
12	217541080	Right top grate
13	214057	NUT
014A	107039	Burner thermocouple L=500 mm
014B	107039	Burner thermocouple L=500 mm
014C	107040	Burner thermocouple - L=600 mm
014D	107043	Burner thermocouple L=500mm (triple-ring burner)
15	218G00X333	KNOB
16	040053	RUBBER PAD
17	3426D40G02	4 gas inlet pipe
018A	106224	Tap - diameter 0.25 - A
018B	106230	SR tap - diameter 0.30
018C	106232	Tap - diameter 0.62
19	067008	Elbow
20	053024.1	Sealing washer
022A	216129080	Burner-cap A
022B	216130080	Burner-cap SR
023A	068109003	Burner-head Auxiliary
023B	068110003	Burner-head Semi-rapid
024A	101180	Injector (ulpg) diam 0.50 - DU CENTR
024B	101181	INJECTOR d. 0,65
024C	101234	INJECTOR d. 0,72
024D	101235	INJECTOR d. 0,97
024E	101243	INJECTOR d. 1.24
024F	101244	Injector Rapid diam 0.91 - LPG
025A	215465	Burner-cupA
025B	215466	Burner-cupSR
26	215469	Burner-cup Triple-ring
27	068115003	Burner-head Triple-ring

EU IF46/1ASDV

IF46/1 ASDV Rubinetti Ottone IMIT

28	216133080	Burner-cap outside TR
29	216132080	Burner-cap inside TR
030A	084028	Spark plug L=250mm (auxiliary burner)
030B	084029	Spark plug L=630mm (semirapid &
030C	084032	Spark plug L=250mm (triple-ring burner)
32	035094	Igniter spring
33	035095	SPRING
34	003055	WASHER
35	103482	Ignition switches
36	082082	Electronic ignition
38	051054	Terminal block
39	053078	Triple-ring burner-cup gasket
40	067026	Conical adaptor
41	217303	Grate for small pans