


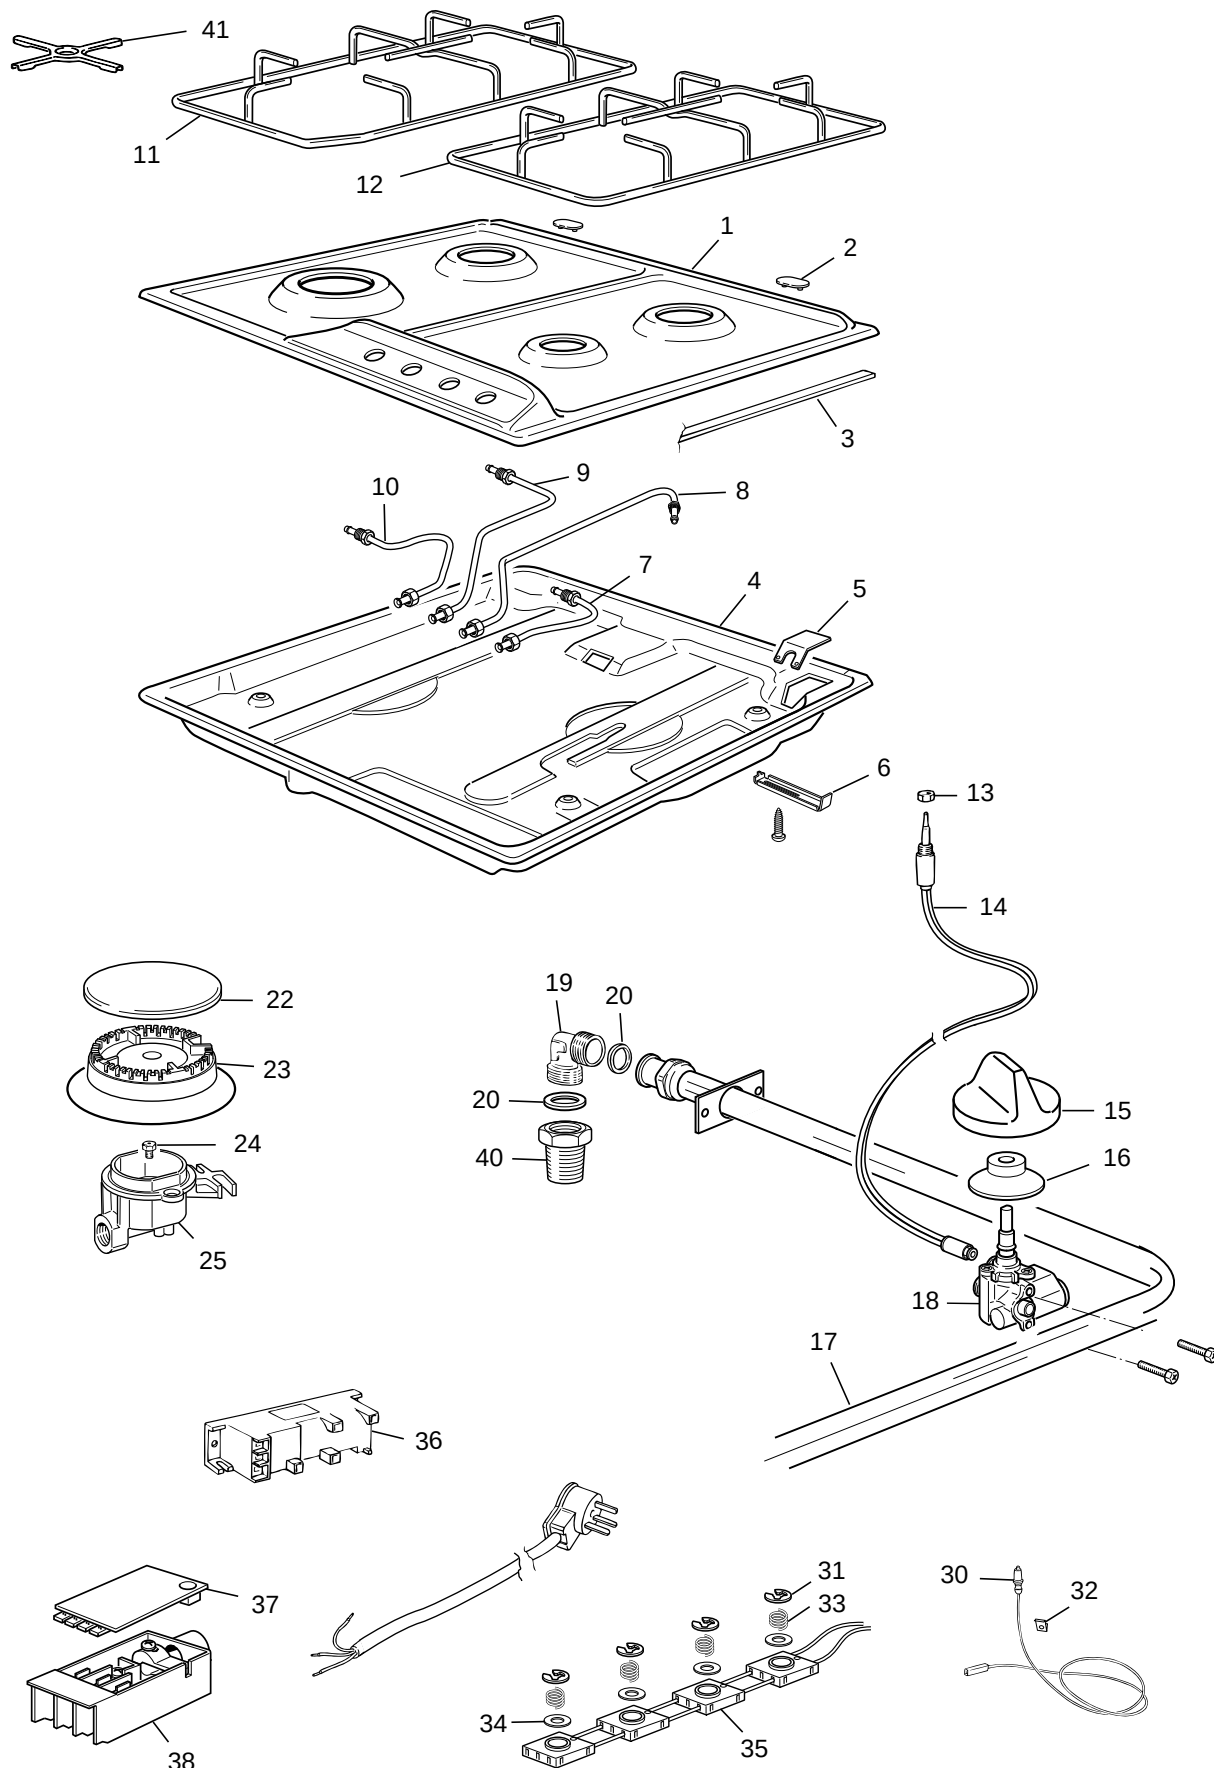

Position	Code	description
01	336D404SDA	WORK TOP
02	10348100X	PLUG
03	053037	SEAL
04	4116D02	Burner casing
05	094337	Inlet pipe fixing bracket
06	094338	Fixing bracket
08	029529	Right SR burner pipe
11	217540080	Left top grate
12	217541080	Right top grate
13	214057	NUT
014A	107039	Burner thermocouple L=500 mm
014B	107039	Burner thermocouple L=500 mm
014C	107040	Burner thermocouple - L=600 mm
15	218G00X333	KNOB
16	040053	RUBBER PAD
17	3426D40G02	4 gas inlet pipe
018A	106224	Tap - diameter 0.25 - A
018B	106230	SR tap - diameter 0.30
018C	106231	R tap - diameter 0.40
19	067008	Elbow
20	053024.1	Sealing washer
022A	216129080	Burner-cap A
022B	216130080	Burner-cap SR
022C	216131080	HEAD R
023A	068109003	Burner-head Auxiliary
023B	068110003	Burner-head Semi-rapid
023C	068111003	Burner-head Rapid
024A	101180	Injector (ulpg) diam 0.50 - DU CENTR
024B	101181	INJECTOR d. 0,65
024C	101182	Injector NATURAL GAS Ø 0.85 - A
024D	101234	INJECTOR d. 0,72
024E	101235	INJECTOR d. 0,97
024F	101236	INJECTOR d. 1,15
025A	215465	Burner-cupA
025B	215466	Burner-cupSR
025C	215467	Burner-cupTR
030A	084028	Spark plug L=250mm (auxiliary burner)

030B	084029	Spark plug L=630mm (semirapid &
32	035094	Igniter spring
33	035095	SPRING
34	003055	WASHER
35	103482	Ignition switches
36	082082	Electronic ignition
37	NOCODE01	NOT AVAILABLE
38	051054	Terminal block
40	067026	Conical adaptor
41	217303	Grate for small pans