


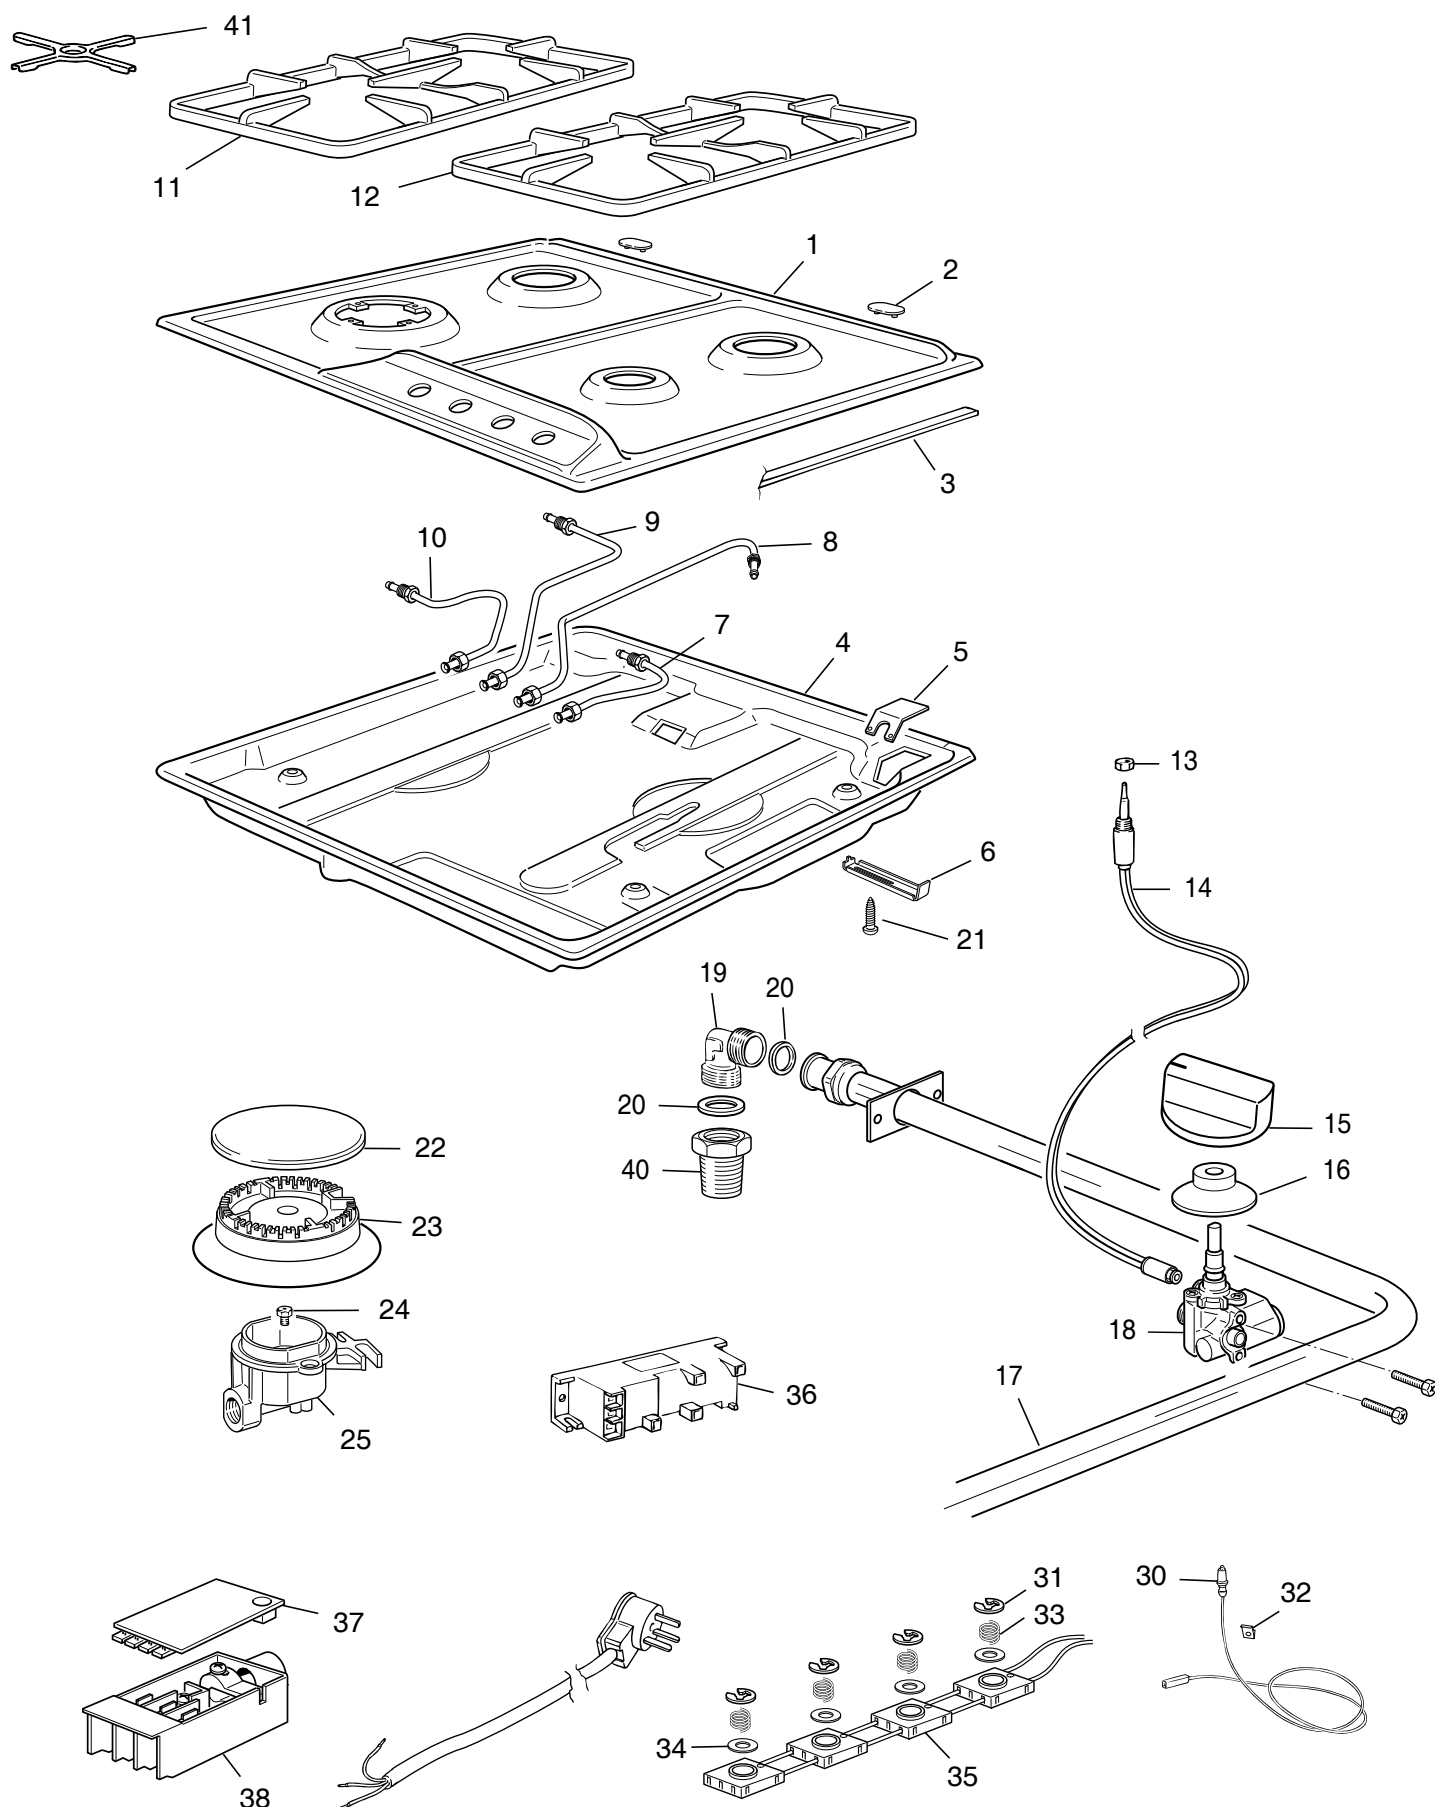

IT IF4R6PRO

IF 4R6 PRO - SOLO RICAMBI -
SOSTITUITO DA P6D0DL046X -
Rubinetti Ottone IMIT

Position	Code	description
01	336D404SDA	WORK TOP
02	10348100X	PLUG
03	053037	SEAL
04	4116D02	Burner casing
05	094337	Inlet pipe fixing bracket
06	094338	Fixing bracket
08	029529	Right SR burner pipe
11	217543	Left top grate
12	217544	Right top grate
13	214057	NUT
014A	107039	Burner thermocouple L=500 mm
014B	107039	Burner thermocouple L=500 mm
15	2183007363	KNOB
16	040053	RUBBER PAD
17	3426D40G02	4 gas inlet pipe
018A	106224	Tap - diameter 0.25 - A
018B	106230	SR tap - diameter 0.30
018C	106231	R tap - diameter 0.40
19	067008	Elbow
20	053024.1	Sealing washer
022A	216129005A	Burner-capA
022B	216130005A	Burner-capSR
022C	216131005A	Burner-cap R
023A	068109003	Burner-head Auxiliary
023B	068110003	Burner-head Semi-rapid
023C	068111003	Burner-head Rapid
024A	101180	Injector (ulpg) diam 0.50 - DU CENTR
024B	101181	INJECTOR d. 0,65
024C	101182	Injector NATURAL GAS Ø 0.85 - A
024D	101234	INJECTOR d. 0,72
024E	101235	INJECTOR d. 0,97
024F	101236	INJECTOR d. 1,15
025A	215465	Burner-cupA
025B	215466	Burner-cupSR
025C	215467	Burner-cupTR
030A	084028	Spark plug L=250mm (auxiliary burner)
030B	084029	Spark plug L=630mm (semirapid &

IT IF4R6PRO

IF 4R6 PRO - SOLO RICAMBI -
SOSTITUITO DA P6D0DL046X -
Rubinetti Ottone IMIT

32	035094	Igniter spring
33	035095	SPRING
34	003055	WASHER
35	103482	Ignition switches
36	082082	Electronic ignition
37	NOCODE01	NOT AVAILABLE
38	051054	Terminal block
40	067026	Conical adaptor
41	217303	Grate for small pans