


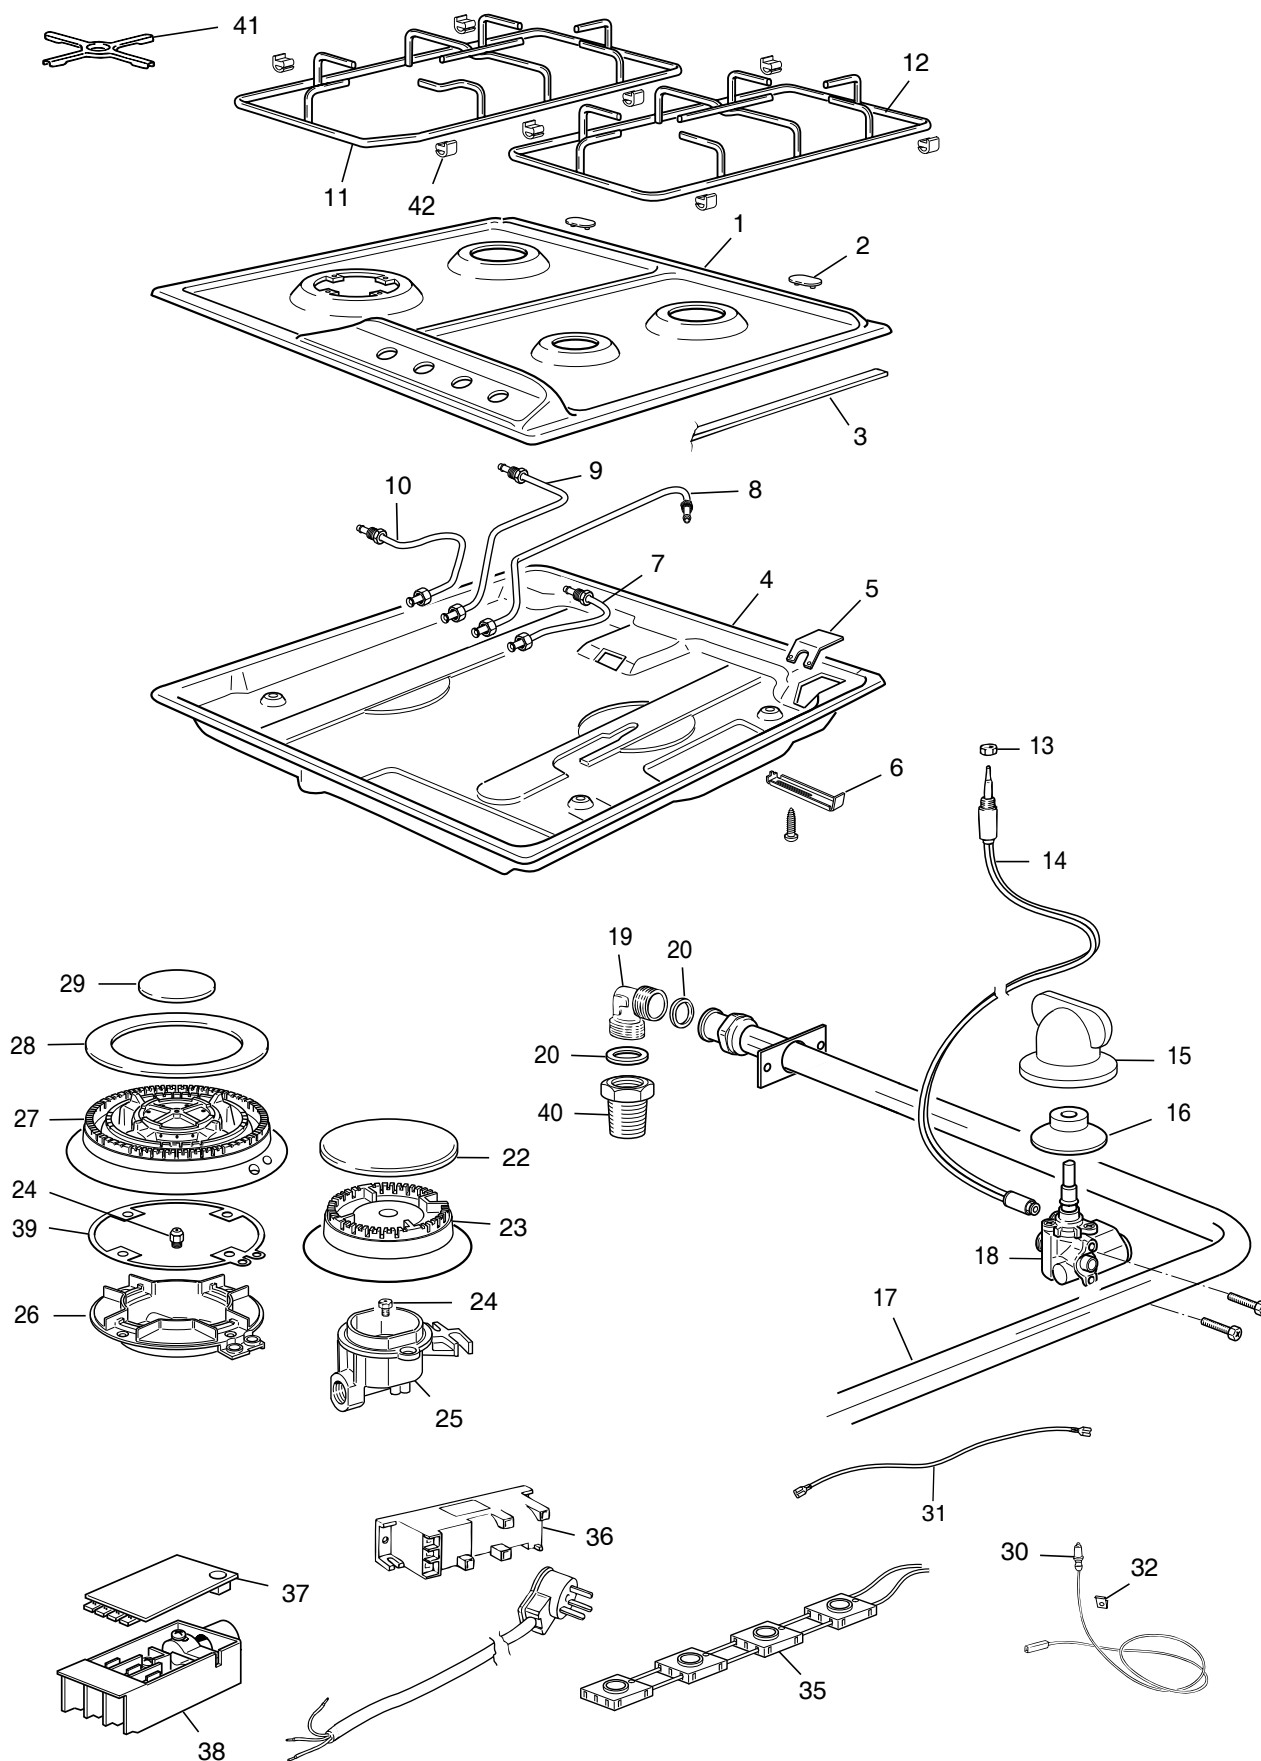

Position	Code	description
01	336D4091D5	WORK TOP
02	103481002	PLUG
03	053037	SEAL
04	4116D02	Burner casing
05	094337	Inlet pipe fixing bracket
06	094338	Fixing bracket
07	029842	A burner pipe
08	029841	Right SR burner pipe
09	029843	Left SR burner pipe
10	029848	TR burner pipe
11	217540005	GRID LEFT
12	217541005	GRID RIGHT
13	214057	NUT
014A	107039	Burner thermocouple L=500 mm
014B	107039	Burner thermocouple L=500 mm
014C	107043	Burner thermocouple L=500mm (triple-ring burner)
15	2183383O39	KNOB
16	040057	Rubber joint
17	3426D40G02	4 gas inlet pipe
018A	106249	Tap Auxiliary diam 0.27
018B	106252	Tap Semi-rapid diam 0.34
018C	106254	Tap Triple-ring diam 0.65
19	067008	Elbow
20	053024.1	Sealing washer
022A	216129005A	Burner-capA
022B	216130005A	Burner-capSR
023A	068109003	Burner-head Auxiliary
023B	068110003	Burner-head Semi-rapid
024A	101180	Injector (ulpg) diam 0.50 - DU CENTR
024B	101181	INJECTOR d. 0,65
024C	101234	INJECTOR d. 0,72
024D	101235	INJECTOR d. 0,97
024E	101243	INJECTOR d. 1.24
024F	101244	Injector Rapid diam 0.91 - LPG
025A	215465	Burner-cupA
025B	215466	Burner-cupSR
26	215469	Burner-cup Triple-ring

27	068115003	Burner-head Triple-ring
28	216133005A	Burner-cap outside TR
29	216132005A	Burner-cap inside TR
030A	084028	Spark plug L=250mm (auxiliary burner)
030B	084029	Spark plug L=630mm (semirapid &
030C	084032	Spark plug L=250mm (triple-ring burner)
32	035094	Igniter spring
35	1031123	Ignition switches
36	082082	Electronic ignition
37	NOCODE01	NOT AVAILABLE
38	051054	Terminal block
39	053078	Triple-ring burner-cup gasket
40	067026	Conical adaptor
41	217303	Grate for small pans
42	040026	Top grate buffer