


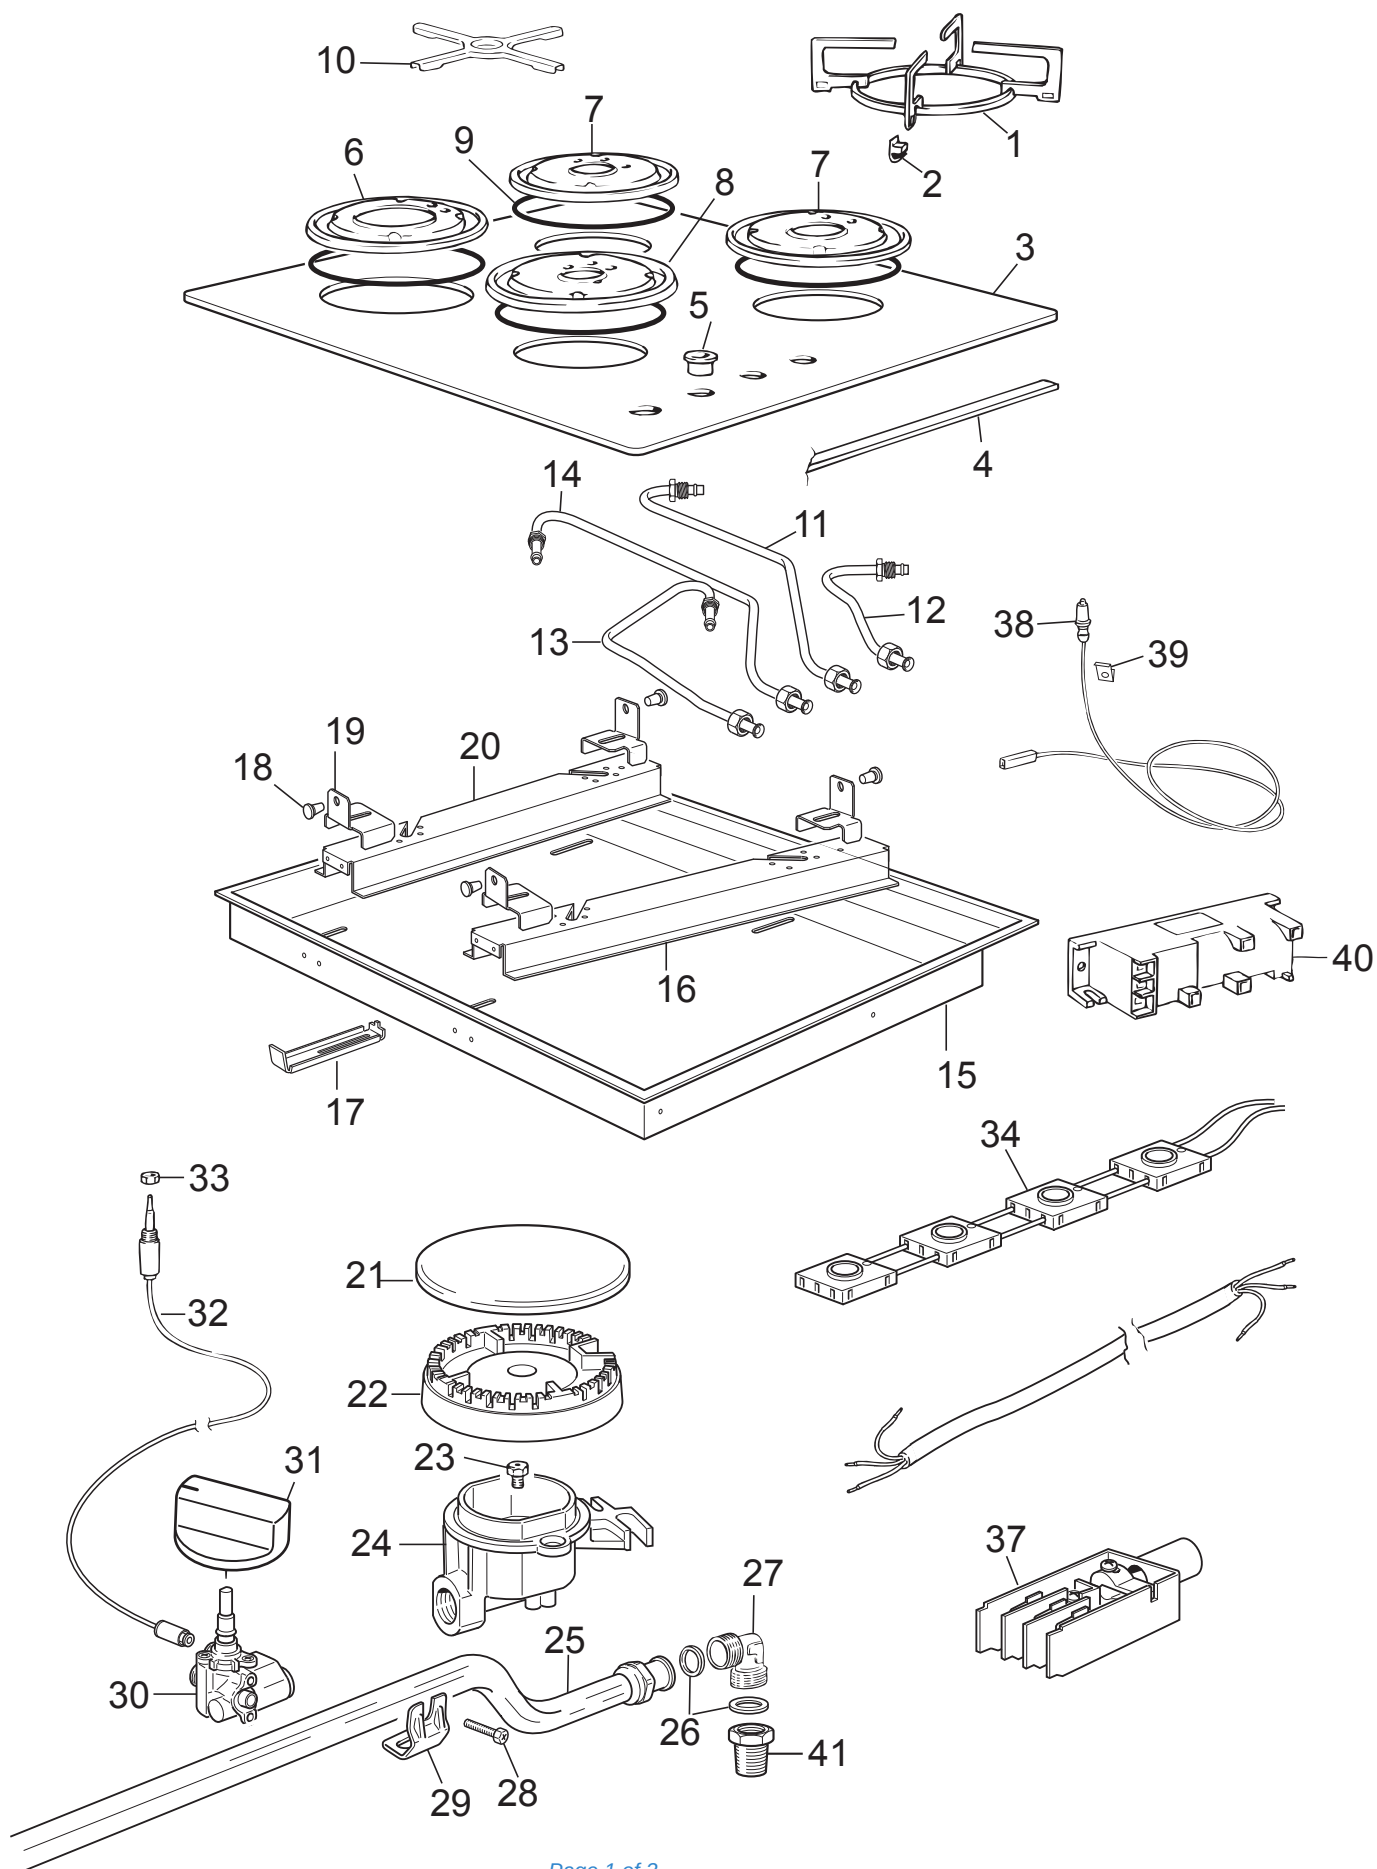

Position	Code	description
01	217377	GRID
02	040026	Top grate buffer
03	0326V2658	WORK TOP
04	053076	SEAL
05	040059	RUBBER PAD
06	51B6V21H	DISK R
07	51B6V20H	DISK SR
08	51B6V19H	DISK A
09	053073	GASKET
10	217303	Grate for small pans
11	029906	PIPING
12	029907	PIPING
13	029904	PIPING
14	029905	PIPING
15	4116V05	BOTTOM
16	51B6V42DX	CROSSPIECE RIGHT
017A	094335	Fixing bracket
017B	NOCODE01	NOT AVAILABLE
18	040056	Rubber
19	094418	BRACKET
20	51B6V42SX	CROSSPIECE LEFT
021A	216129080	Burner-cap A
021B	216130080	Burner-cap SR
021C	216131080	HEAD R
022A	068104001	BURNER SR
022B	068105001	BURNER R
022C	068108001	BURNER A
023A	101180	Injector (ulpg) diam 0.50 - DU CENTR
023B	101181	INJECTOR d. 0,65
023C	101182	Injector NATURAL GAS Ø 0.85 - A
023D	101234	INJECTOR d. 0,72
023E	101235	INJECTOR d. 0,97
023F	101236	INJECTOR d. 1,15
024A	215465	Burner-cupA
024B	215466	Burner-cupSR
024C	215467	Burner-cupTR
25	3426V40G03	FEED ASSY

26	053024.1	Sealing washer
27	067008	Elbow
28	001189	SCREW
29	094616	Tap bracket
030A	106249	Tap Auxiliary diam 0.27
030B	106252	Tap Semi-rapid diam 0.34
030C	106253	Tap Rapid diam 0.44
31	218200A415	KNOB
032A	107039	Burner thermocouple L=500 mm
032B	107039	Burner thermocouple L=500 mm
33	214057	NUT
34	1031133	WIRING
37	051054	Terminal block
038A	084028	Spark plug L=250mm (auxiliary burner)
038B	084029	Spark plug L=630mm (semirapid &
39	035094	Igniter spring
40	082082	Electronic ignition
41	067026	Conical adaptor