


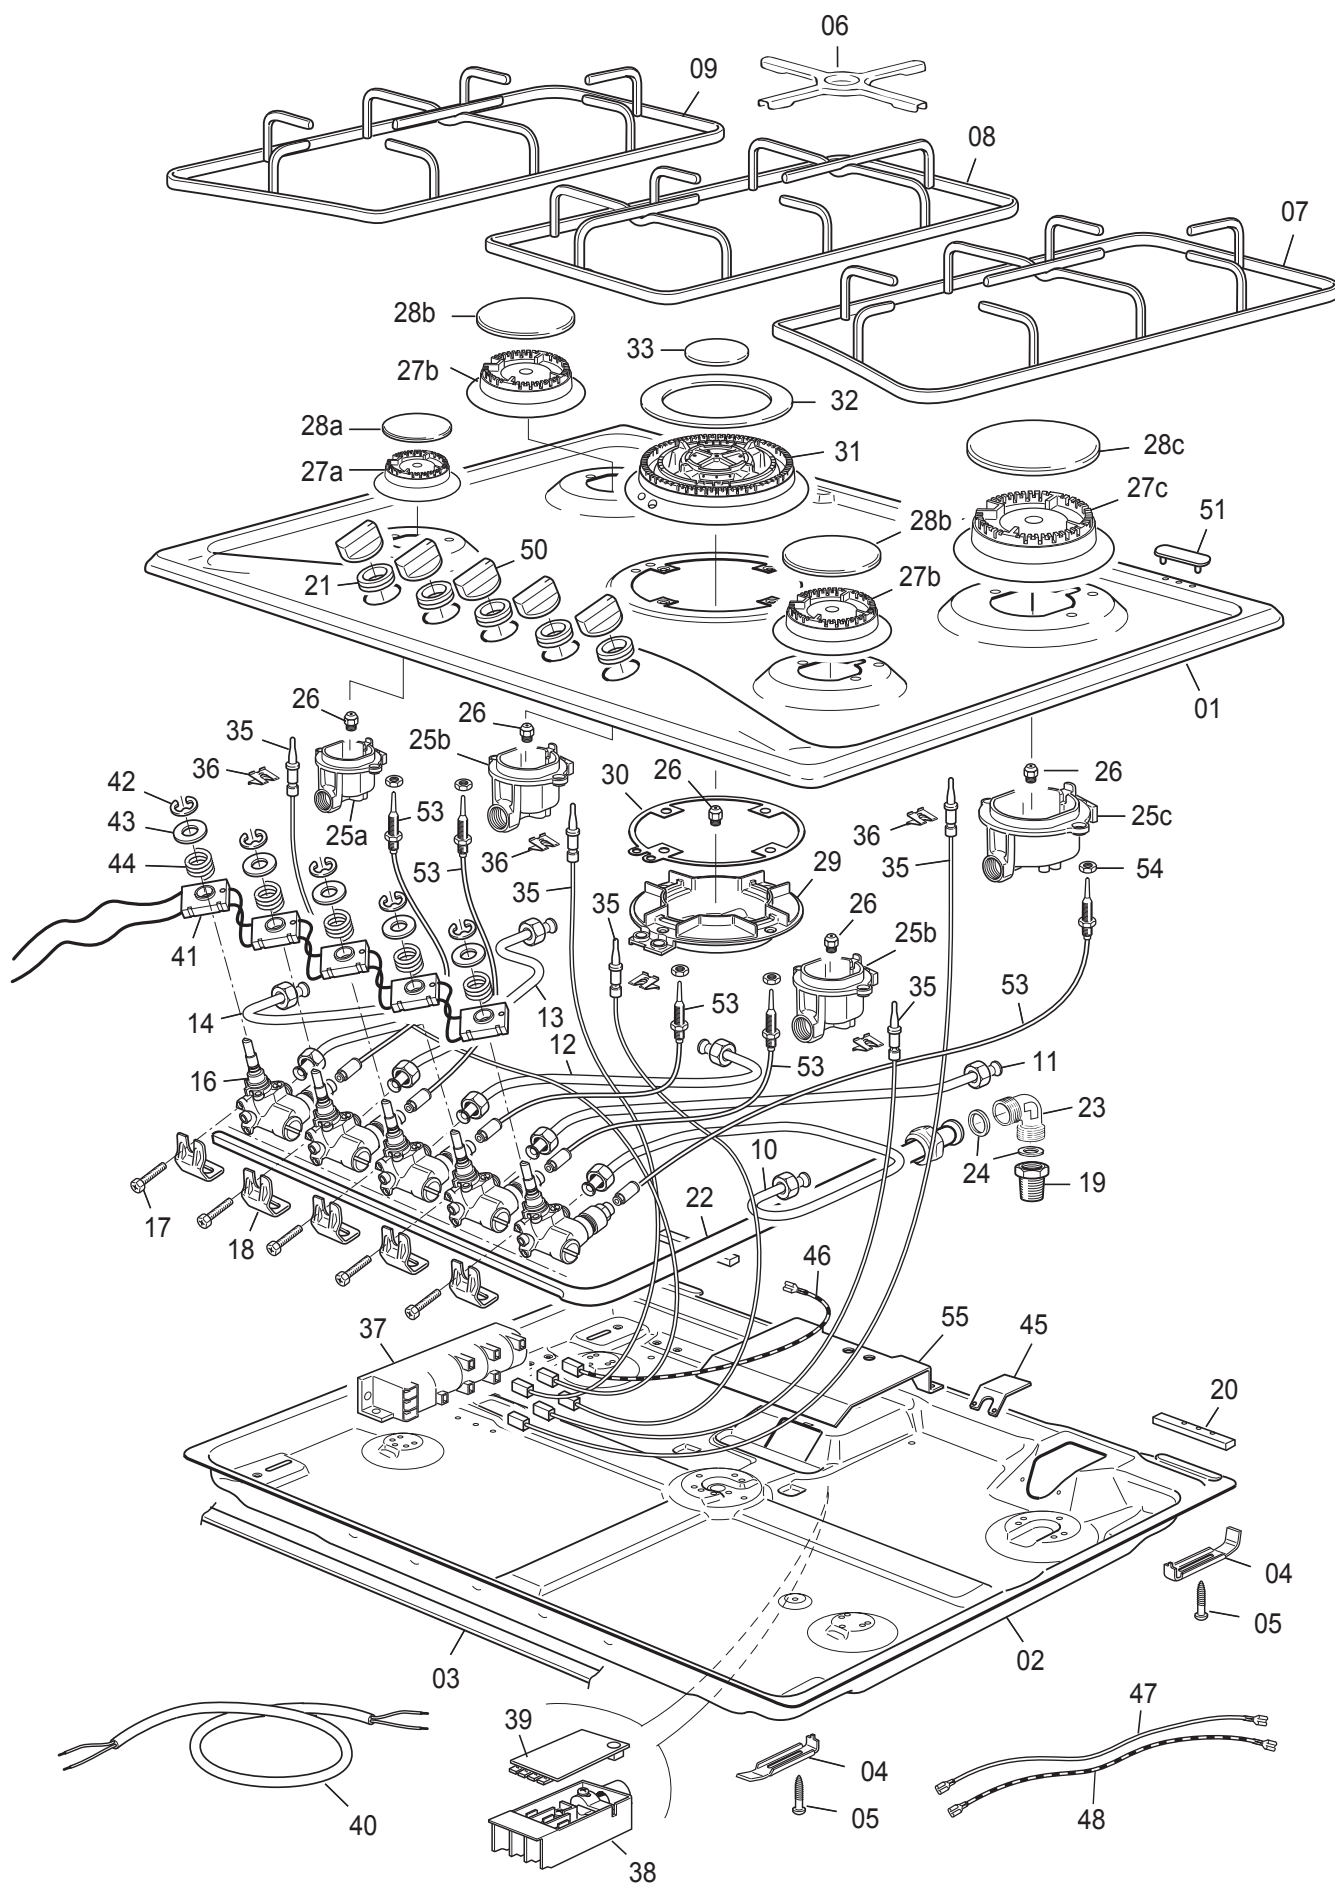

Position	Code	description
01	33705011DL	WORK TOP
02	4117001	Burner casing
03	053065	SEAL
004A	094335	Fixing bracket
004B	094338	Fixing bracket
06	217303	Grate for small pans
07	217572080	GRID RIGHT
08	217574080	CENTRAL GRID
09	217573080	GRID LEFT
14	NOCODE01	NOT AVAILABLE
016A	106224	Tap - diameter 0.25 - A
016B	106230	SR tap - diameter 0.30
016C	106231	R tap - diameter 0.40
016D	106232	Tap - diameter 0.62
17	001189	SCREW
19	067026	Conical adaptor
21	040057	Rubber joint
22	3427050G01	5 gas inlet pipe
23	067008	Elbow
24	053024.1	Sealing washer
25A	215465	Burner-cupA
25B	215466	Burner-cupSR
25C	215467	Burner-cupTR
026A	101180	Injector (ulpg) diam 0.50 - DU CENTR
026B	101181	INJECTOR d. 0,65
026C	101233	Injector ULPG Ø 0.95 - TR
026D	101234	INJECTOR d. 0,72
026E	101235	INJECTOR d. 0,97
026F	101237	Injector diam 1.35 - G20
27A	068109003	Burner-head Auxiliary
27B	068110003	Burner-head Semi-rapid
27C	068111003	Burner-head Rapid
28A	216129080	Burner-cap A
28B	216130080	Burner-cap SR
28C	216131080	HEAD R
29	215469	Burner-cup Triple-ring
30	053078	Triple-ring burner-cup gasket

31	068115003	Burner-head Triple-ring
32	216133080	Burner-cap outside TR
33	216132080	Burner-cap inside TR
035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid & amp
035C	084032	Spark plug L=250mm (triple-ring burner)
36	035094	Igniter spring
37	082095	Electronic Ignition
38	051054	Terminal block
41	103359	Ignition switches
43	003055	WASHER
44	035095	SPRING
45	094337	Inlet pipe fixing bracket
50	218G006363	KNOB
51	103481002	PLUG
053A	107039	Burner thermocouple L=500 mm
053B	107039	Burner thermocouple L=500 mm
053C	107042	Burner thermocouple TR L=350 mm
54	214057	NUT