


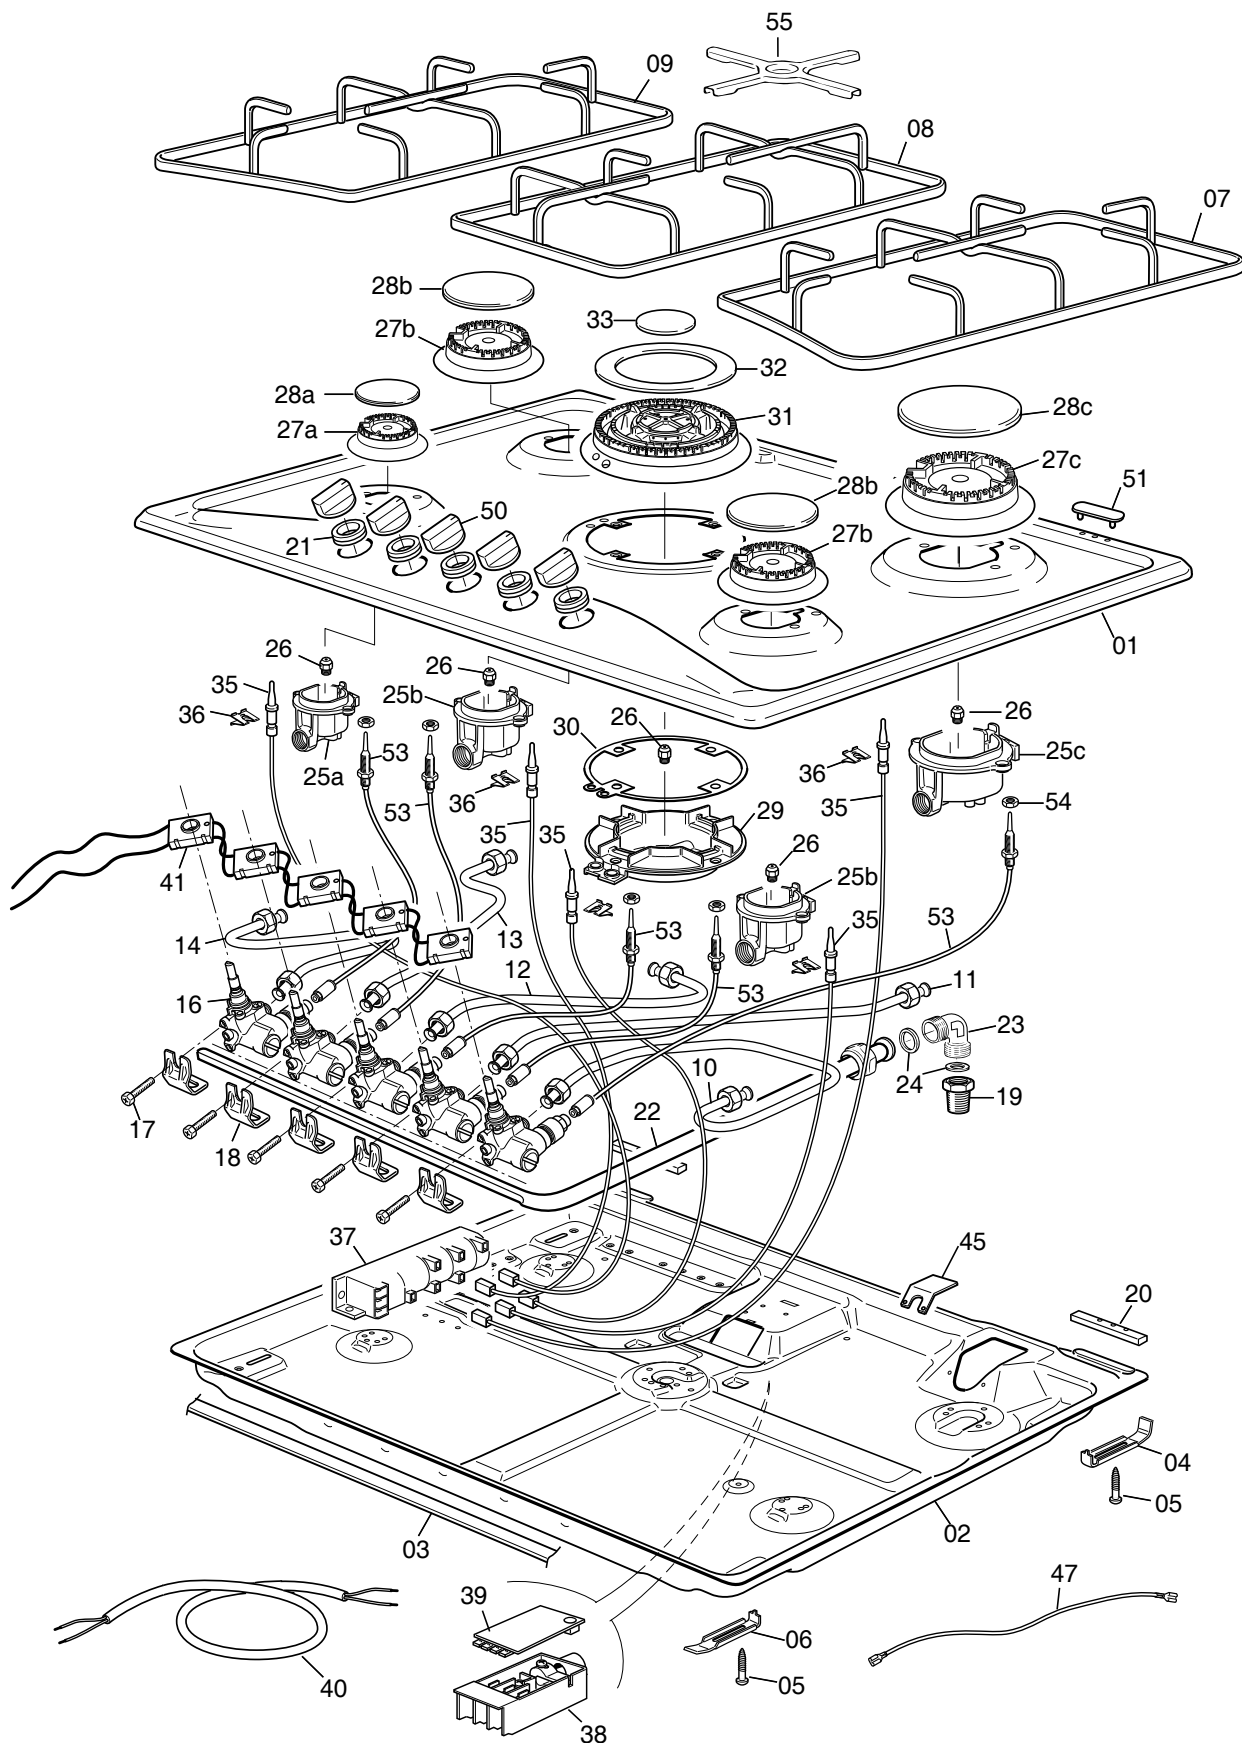

Position	Code	description
01	3370501SD2	WORK TOP
02	4117001	Burner casing
03	053065	SEAL
04	094335	Fixing bracket
05	NOCODE01	NOT AVAILABLE
06	094338	Fixing bracket
07	217572080	GRID RIGHT
08	217574080	CENTRAL GRID
09	217573080	GRID LEFT
10	029849	SR - Front right burner pipe
11	029850	R - burner pipe
12	029855	Burner pipe TR
13	029854	Rear left burner pipe SR
14	029853	Burner pipe A
016A	106249	Tap Auxiliary diam 0.27
016B	106252	Tap Semi-rapid diam 0.34
016C	106253	Tap Rapid diam 0.44
016D	106254	Tap Triple-ring diam 0.65
18	094616	Tap bracket
19	067026	Conical adaptor
21	040057	Rubber joint
22	3427050G01	5 gas inlet pipe
23	067008	Elbow
24	053024.1	Sealing washer
25a	215465	Burner-cupA
25b	215466	Burner-cupSR
25c	215467	Burner-cupTR
026A	101180	Injector (ulpg) diam 0.50 - DU CENTR
026B	101181	INJECTOR d. 0,65
026C	101182	Injector NATURAL GAS Ø 0.85 - A
026D	101233	Injector ULPG Ø 0.95 - TR
026E	101234	INJECTOR d. 0,72
026F	101235	INJECTOR d. 0,97
026G	101236	INJECTOR d. 1,15
026H	101237	Injector diam 1.35 - G20
27a	068109003	Burner-head Auxiliary
27b	068110003	Burner-head Semi-rapid

IT IF57AVT

IF 57 AVT Rubinetti Alluminio SABAF
- SOLO RICAMBI

27c	068111003	Burner-head Rapid
28a	216129080	Burner-cap A
28b	216130080	Burner-cap SR
28c	216131080	HEAD R
29	215469	Burner-cup Triple-ring
30	053078	Triple-ring burner-cup gasket
31	068115003	Burner-head Triple-ring
32	216133080	Burner-cap outside TR
33	216132080	Burner-cap inside TR
035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid &
035C	084032	Spark plug L=250mm (triple-ring burner)
36	035094	Igniter spring
37	6300088	KIT IGNITION COIL
38	051054	Terminal block
41	1031126	Ignition switches
45	094337	Inlet pipe fixing bracket
50	2183007363	KNOB
51	10348100X	PLUG
053A	107039	Burner thermocouple L=500 mm
053B	107039	Burner thermocouple L=500 mm
053C	107042	Burner thermocouple TR L=350 mm
54	214057	NUT
55	217303	Grate for small pans