


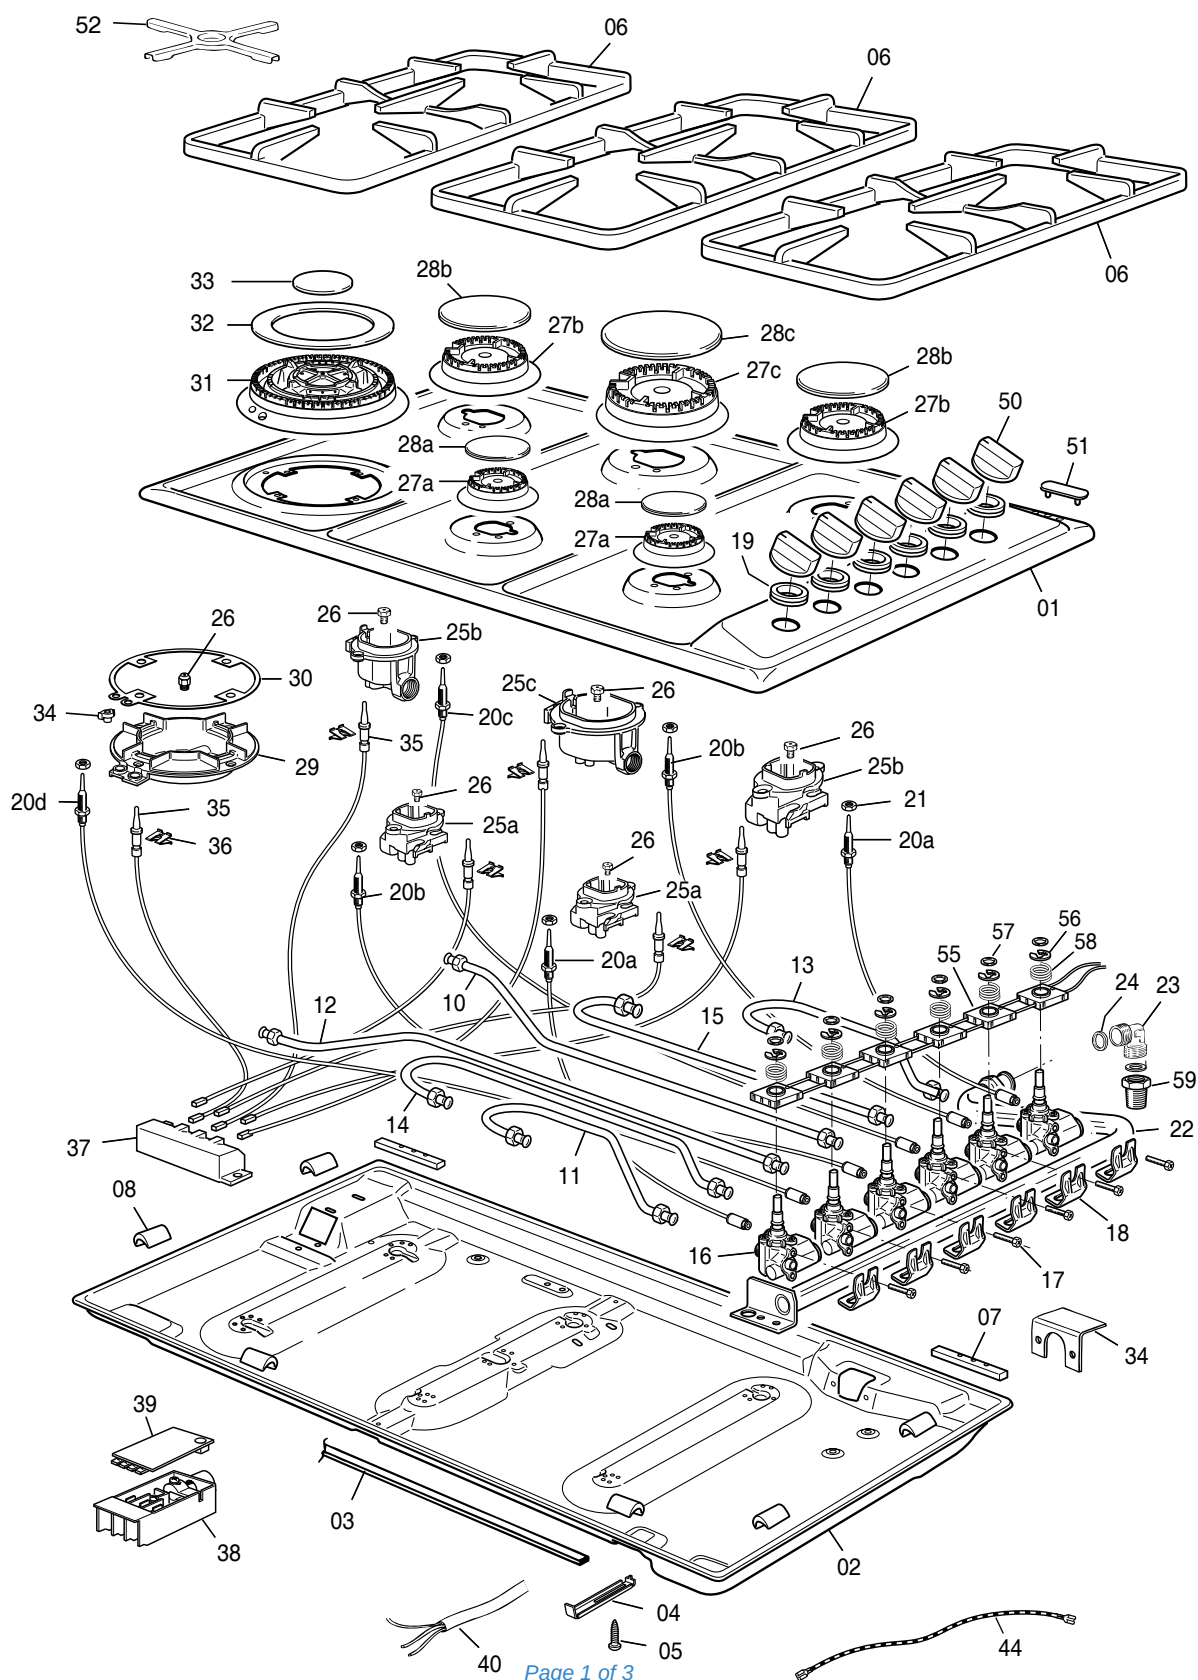

Position	Code	description
01	3390601SDL	WORK TOP
02	4119001	Burner casing
03	NOCODE01	NOT AVAILABLE
04	094154	Fixing bracket
05	001130	SCREW
06	217501	Top grate
10	029699	PIPING
12	029700	PIPING TC
13	029766	PIPING
14	029768	PIPING
15	029767	PIPING
016A	106224	Tap - diameter 0.25 - A
016B	106230	SR tap - diameter 0.30
016C	106231	R tap - diameter 0.40
016D	106232	Tap - diameter 0.62
17	001189	SCREW
19	040057	Rubber joint
20a	107039	Burner thermocouple L=500 mm
20b	107039	Burner thermocouple L=500 mm
20c	107052	Burner thermocouple L=850mm (left burners)
20d	107053/C	TR Burner thermocouple - 850 mm
21	214057	NUT
22	3429060G01	FEED ASSY
23	067008	Elbow
24	053024.1	Sealing washer
25a	215465	Burner-cupA
25b	215466	Burner-cupSR
25c	215467	Burner-cupTR
026A	101180	Injector (ulpg) diam 0.50 - DU CENTR
026B	101181	INJECTOR d. 0,65
026C	101182	Injector NATURAL GAS Ø 0.85 - A
026D	101233	Injector ULPG Ø 0.95 - TR
026E	101234	INJECTOR d. 0,72
026F	101235	INJECTOR d. 0,97
026G	101236	INJECTOR d. 1,15
026H	101237	Injector diam 1.35 - G20
27a	068109003	Burner-head Auxiliary

27b	068110003	Burner-head Semi-rapid
27c	068111003	Burner-head Rapid
28a	216129005A	Burner-capA
28b	216130005A	Burner-capSR
28c	216131005A	Burner-cap R
29	215469	Burner-cup Triple-ring
30	053078	Triple-ring burner-cup gasket
31	068115003	Burner-head Triple-ring
32	216133005A	Burner-cap outside TR
33	216132005A	Burner-cap inside TR
035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid &
035C	084033	Igniter TR - L = 500
36	035094	Igniter spring
37	082095	Electronic Ignition
38	051054	Terminal block
50	2183007363	KNOB
51	10348100X	PLUG
53	217303	Grate for small pans
55	103804	WIRING
56	003055	WASHER
58	035095	SPRING
59	067026	Conical adaptor