


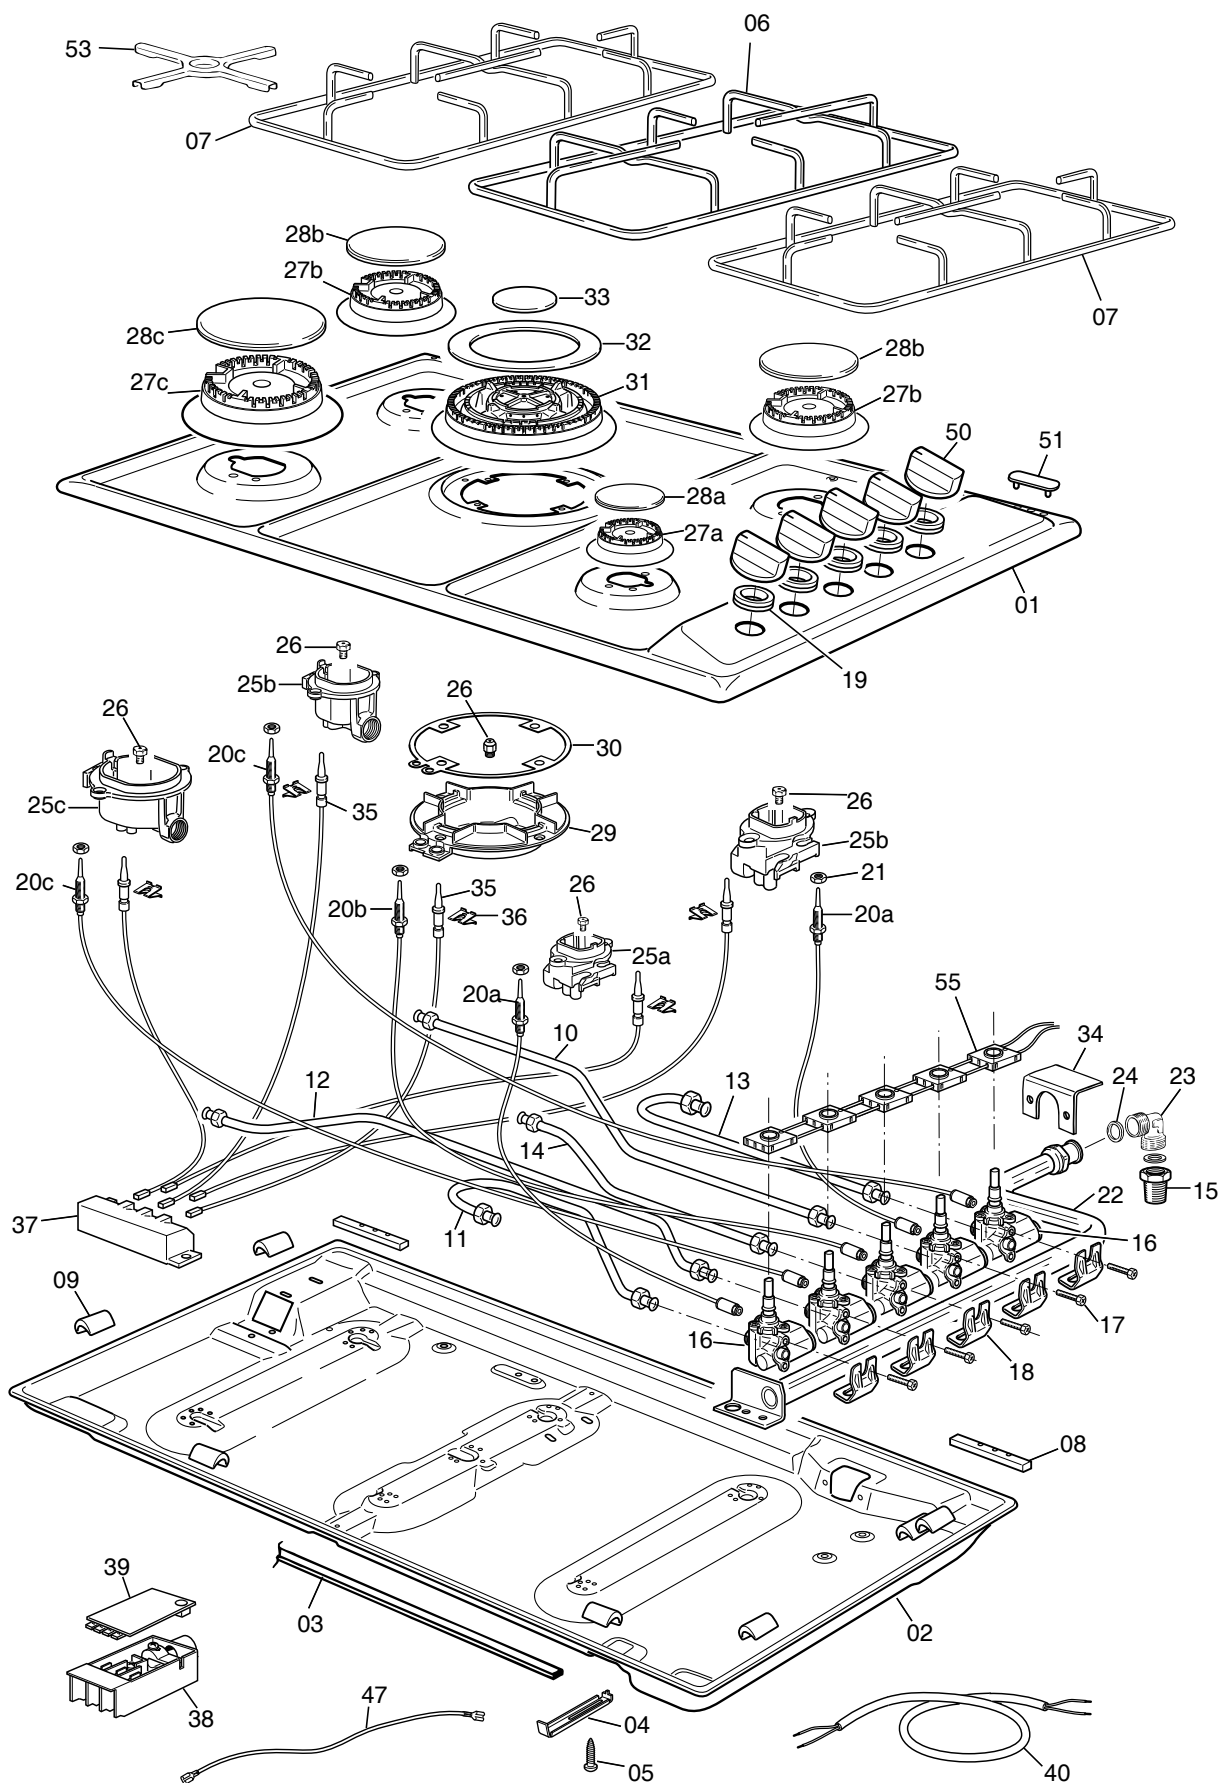

Position	Code	description
01	3390502SD1	WORK TOP
02	4119001	Burner casing
04	094154	Fixing bracket
05	001130	SCREW
06	217425	GRID
07	217424	GRID
09	NOCODE01	NOT AVAILABLE
10	029857	Rear-left burner pipe Semi-rapid
11	029858	Front-right burner pipe Auxiliary
12	029874	Front-left burner pipe Rapid
13	029856	Rear-right burner pipe Semi-rapid
14	029875	Central burner pipe Triple-ring
15	067026	Conical adaptor
016A	106249	Tap Auxiliary diam 0.27
016B	106252	Tap Semi-rapid diam 0.34
016C	106253	Tap Rapid diam 0.44
016D	106254	Tap Triple-ring diam 0.65
18	094616	Tap bracket
19	040057	Rubber joint
20a	107039	Burner thermocouple L=500 mm
20b	107043	Burner thermocouple L=500mm (triple-ring burner)
20c	107052	Burner thermocouple L=850mm (left burners)
21	214057	NUT
22	3428650G01	5 gas inlet pipe
23	067008	Elbow
24	053024.1	Sealing washer
25a	215465	Burner-cupA
25b	215466	Burner-cupSR
25c	215467	Burner-cupTR
026A	101180	Injector (ulpg) diam 0.50 - DU CENTR
026B	101181	INJECTOR d. 0,65
026C	101182	Injector NATURAL GAS Ø 0.85 - A
026D	101233	Injector ULPG Ø 0.95 - TR
026E	101234	INJECTOR d. 0,72
026F	101235	INJECTOR d. 0,97
026G	101236	INJECTOR d. 1,15
026H	101237	Injector diam 1.35 - G20

27a	068109003	Burner-head Auxiliary
27b	068110003	Burner-head Semi-rapid
27c	068111003	Burner-head Rapid
28a	216129080	Burner-cap A
28b	216130080	Burner-cap SR
28c	216131080	HEAD R
29	215469	Burner-cup Triple-ring
30	053078	Triple-ring burner-cup gasket
31	068115003	Burner-head Triple-ring
32	216133080	Burner-cap outside TR
33	216132080	Burner-cap inside TR
035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid &
035C	084032	Spark plug L=250mm (triple-ring burner)
36	035094	Igniter spring
37	6300088	KIT IGNITION COIL
38	051054	Terminal block
50	2183007363	KNOB
51	10348100X	PLUG
53	217303	Grate for small pans
55	1031126	Ignition switches