


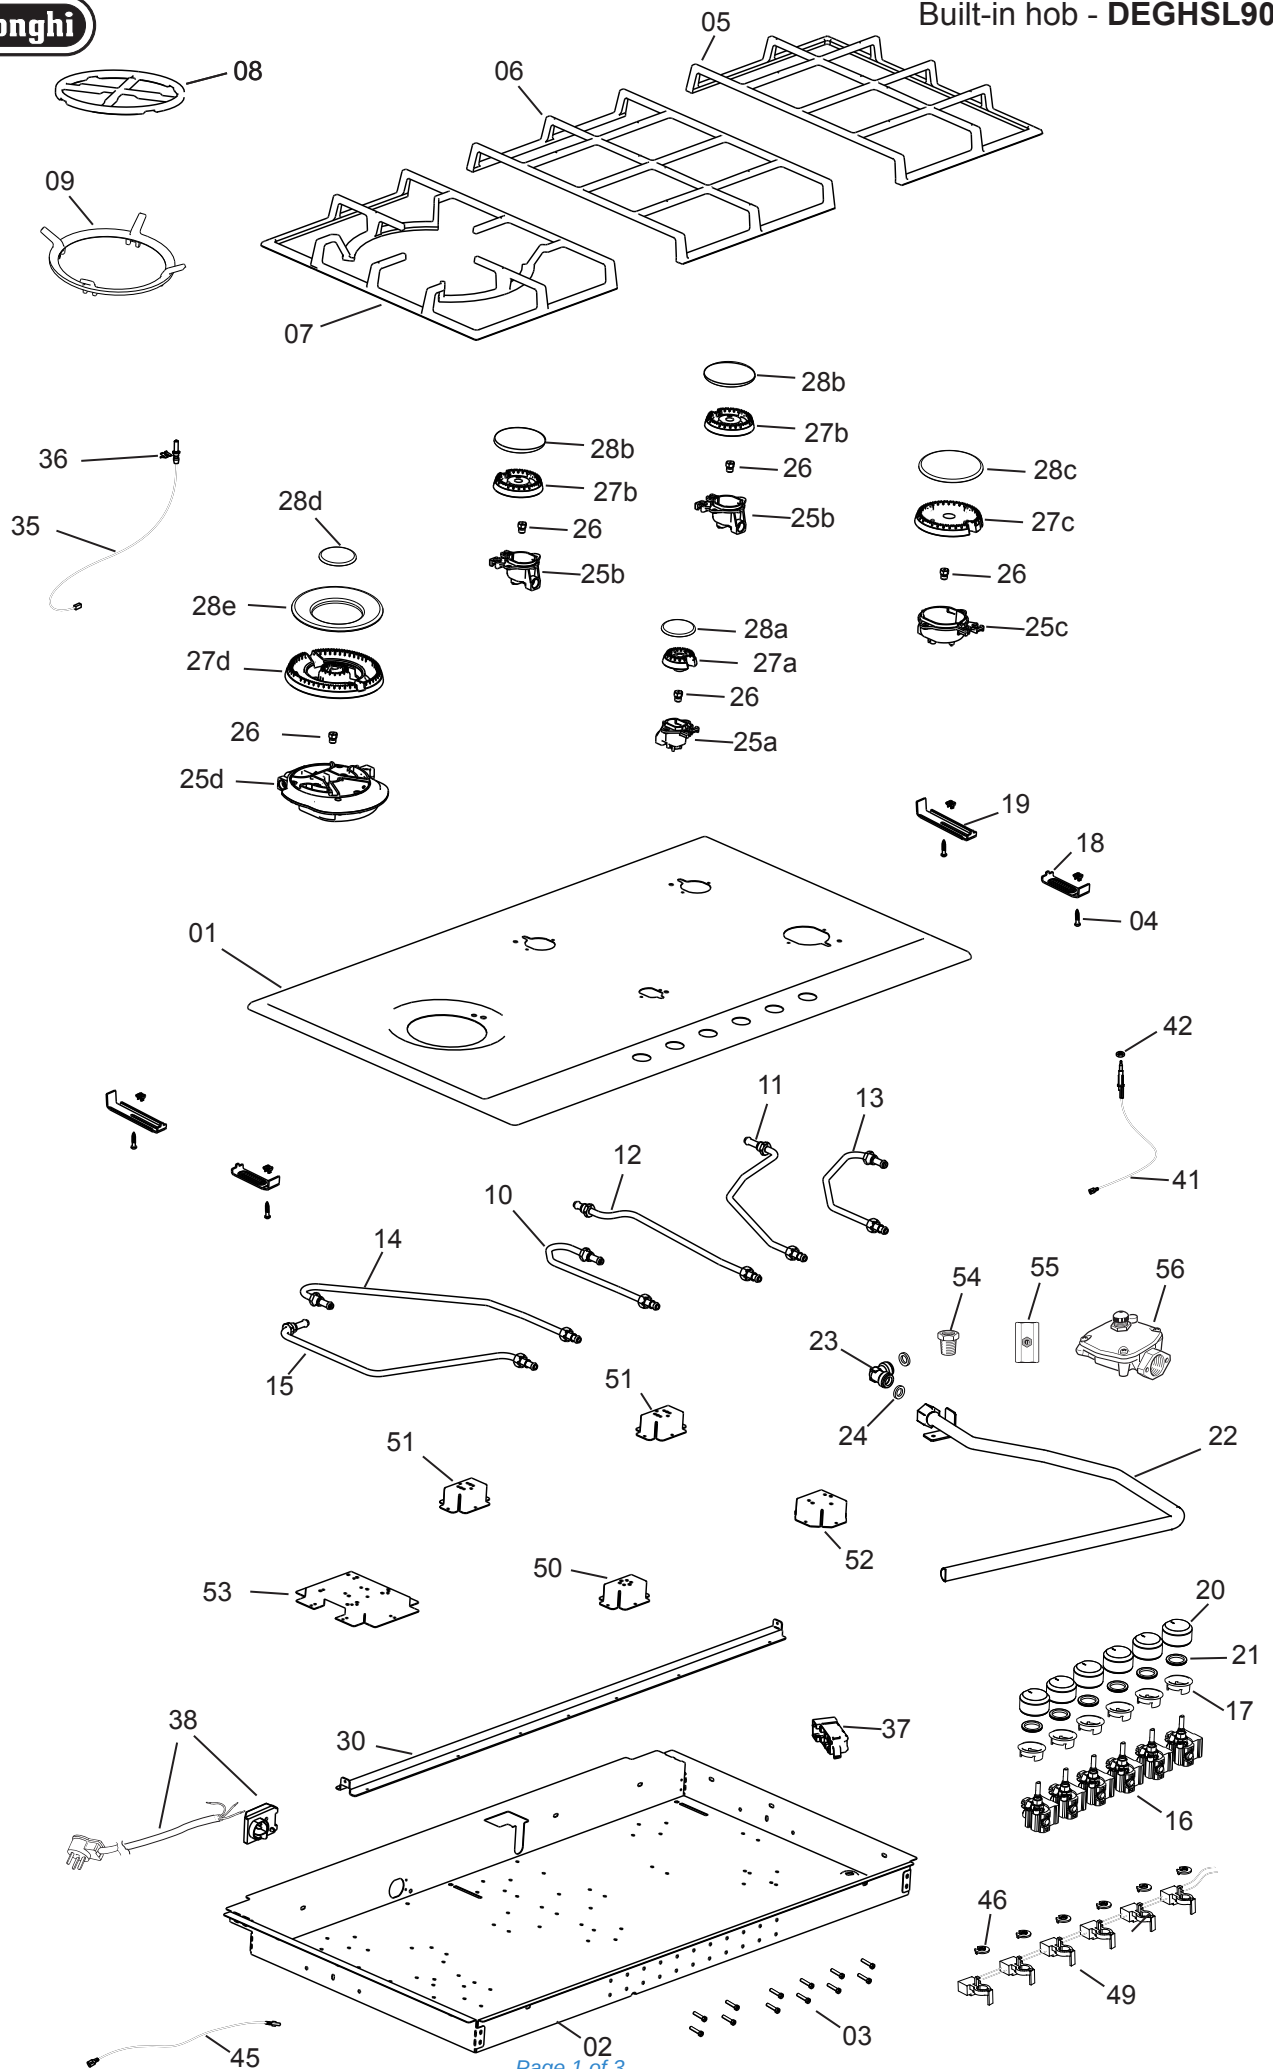

Position	Code	description
01	3D91502SD1	HOB TOP P91
02	411P9101	Burner casing
03	001085	Gas tap fixing screw
04	001217	SCREW
05	217724	RH trivet
06	217726	Central grate
07	217727	LH trivet
08	217733	Small pan adapter
09	217729	Wok pan adapter
10	0291172	Burner pipe AU
11	0291173	Burner pipe SR (RH)
12	0291174	Burner pipe SR (LH)
13	0291175	Burner pipe R
14	0291176	Burner pipe DB (inner)
15	0291177	Burner pipe DB (outer)
016A	106309GN	Tap diam 0.33 - A- DB (inner)
016B	106310GN	Tap diam 0.34 - SR
016C	106312GN	Tap diam 0.64 - DB (outer)
016D	106311GN	Tap diam 0.43 - R
17	10316760A	Knob ring
18	094347	Front fixing bracket (to fix the appliance to the cabinet)
19	094335	Fixing bracket
20	218E00H550	KNOB
21	040057	Rubber joint
22	342P915001	5 gas inlet pipe
23	067008	Elbow
24	053024.1	Sealing washer
25a	215496	Burner-cup A
25b	215497	Burner-cup SR
25c	215499	Burner-cup R
25d	215518	Burner-cup DB
026A	101351	Injector diam 0.66 - DB outer (2x) (ULPG)
026B	101410	Injector diam 0.92 - A (NG)
026C	101367	Injector diam 1.17 - SR
026D	101408	Injector diam 0.56 - A
026E	101358	Injector diam 0.70 - SR
026F	101374	Injector diam 1.54 - R

026G	101375	Injector diam 0.98 - R
026H	101350	Injector diam 0.72 - DB inner (NG)
026I	101376	Injector diam 1.23 - DUAL OUT
026J	101405	Injector diam 0.43 - DB inner (ULPG)
27a	068131003	Burner head A
27b	068132003	Burner head SR
27c	068133003	Burner head R
27d	068146003	Burner-head DB
28a	216153005A	Burner-cap A
28b	216154005A	Burner-cap SR
28c	216164005A	Burner-cap R
28d	216155005A	Burner-cap inside DUAL
28e	216156005A	Burner-cap outside DUAL
30	51BP9101	Burner casing stiffening bracket
035A	084058	Spark plug L = 250 mm
035B	084059	Spark plug L = 630 mm
035C	084060	Spark plug L = 500 mm
035D	084078	Spark plug DB outer L = 900 mm
035E	084079	Spark plug DB inner L= 900 mm
036A	035125	Igniter spring
036B	214081	Igniter spring/nut DB inner (nut)
37	082095	Electronic Ignition
38	660131046	Terminal block + power cord with plug 3x0.75 mm ²
041A	107078	Burner thermocouple L = 600
041B	107079	Burner thermocouple DU - L = 600
042A	214079	Thermocouple nut
042B	214080	Thermocouple nut DUAL
45	103827	CABLE
46	003094	RETAINING RING
49	1031686	Ignition switches
50	094627	Burner support A
51	094628	Burner support SR
52	094629	Burner support R
53	094834	Burner support DB
54	067026	Conical adaptor
55	103468	Test point adaptor
56	103347	Gas pressure regulator 1/2