


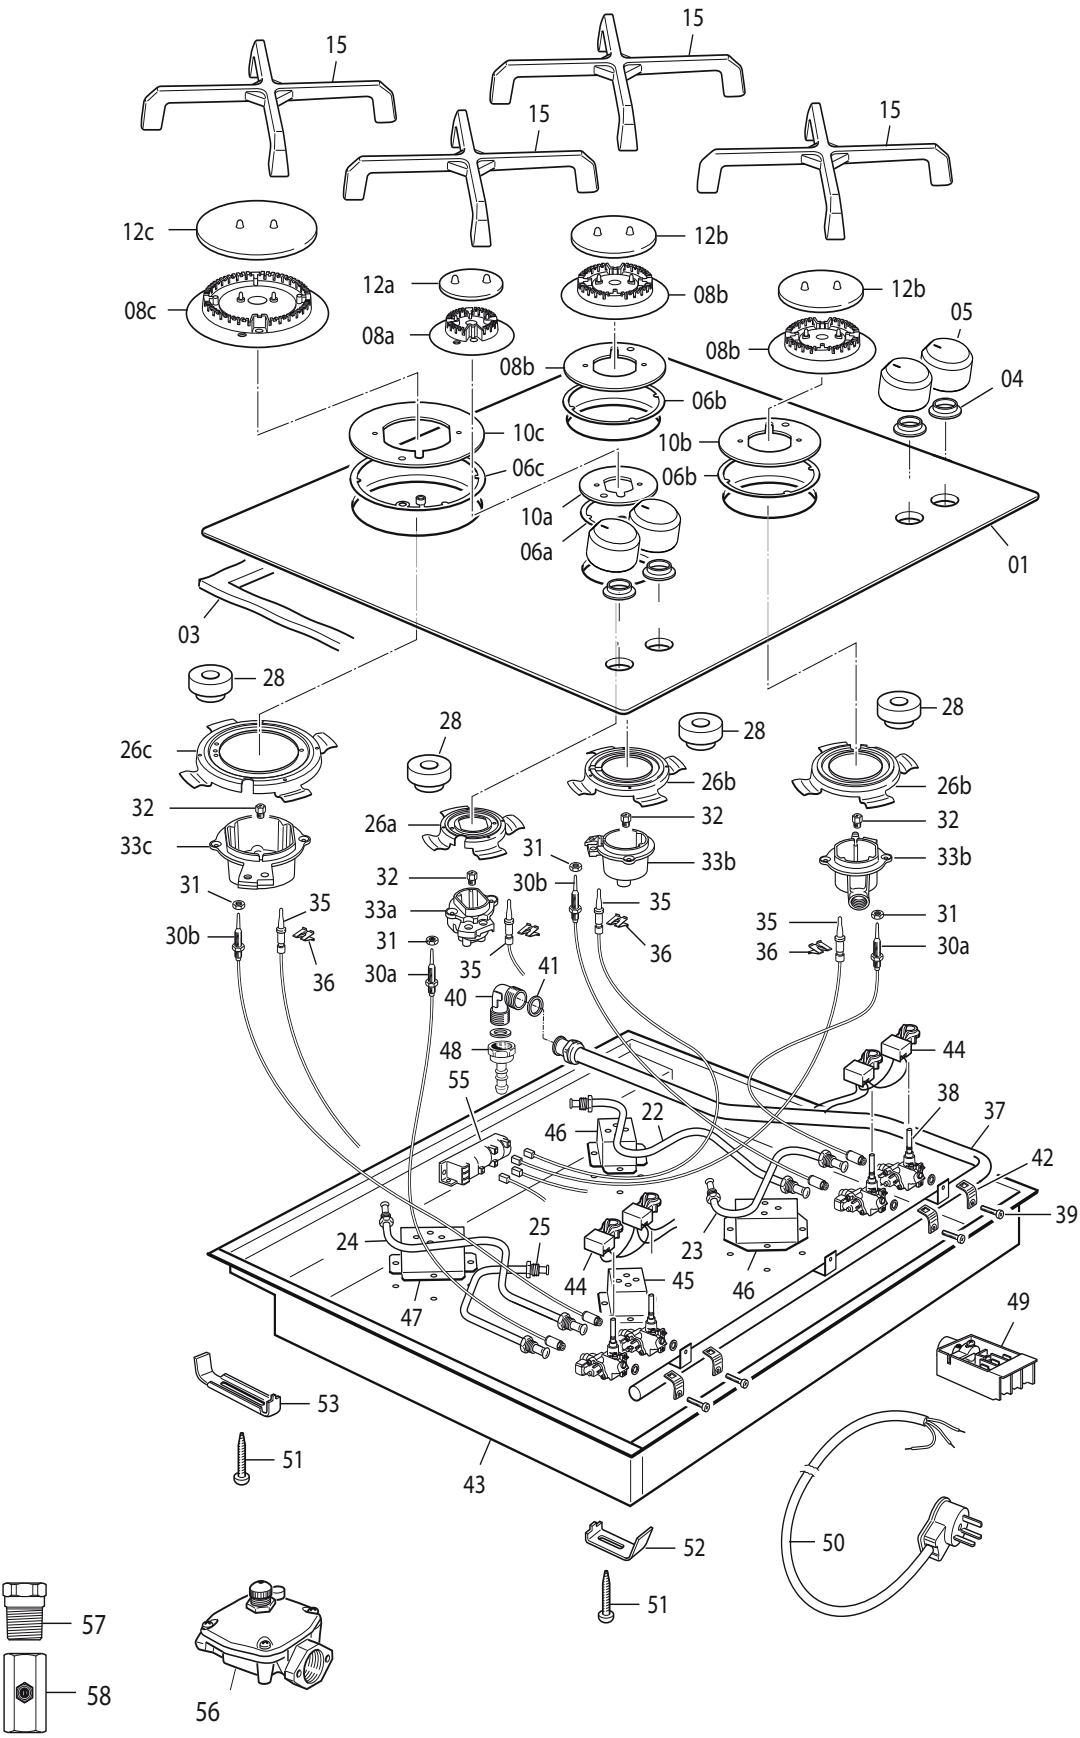

Position	Code	description
01	032G6010	Hob top
03	053076	SEAL
04	040087	Rubber joint
05	218E00H563	KNOB
06a	053136	Burner gasket A
06b	053137	Burner gasket SR
06c	053138	Burner gasket R
08a	068121035A	Burner-head A
08b	068122035A	Burner-head SR
08c	068123035A	Burner-head R
10a	51BPG01A	Burner flange A
10b	51BPG02A	Burner flange
10c	51BPG03A	Burner flange R
12a	216140005A	Burner-cap A
12b	216141005A	Burner-cap SR
12c	216142005A	Burner-cap R
15	217642	Top grate
22	029924	Inlet pipe - rear right SR
23	029923	Inlet pipe - front right SR
24	029925	Inlet pipe R
25	029922	Inlet pipe A
26a	035129	Burner spring A
26b	035120	Burner spring SR
26c	035121	Burner spring R
28	085102	Burner bush
30a	107064	Burner thermocouple L = 250
30b	107065	Burner thermocouple L = 400
31	214057	NUT
032A	101182	Injector NATURAL GAS Ø 0.85 - A
032B	101244	Injector Rapid diam 0.91 - LPG
032C	101260	Injector NATURAL GAS Ø 1.12 - SR
032D	101262	Injector ULPG Ø 0.53 - A
032E	101263	Injector ULPG Ø 0.70 - SR
032F	101273	Injector Rapid diam 1.45 - NG
33a	215486	Burner-cup A
33b	215487	Burner-cup SR
33c	215488	Burner-cup R

035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid &
36	035094	Igniter spring
37	342G640002	4 gas inlet pipe
038A	106249	Tap Auxiliary diam 0.27
038B	106252	Tap Semi-rapid diam 0.34
038C	106253	Tap Rapid diam 0.44
39	001202	SCREW
40	067008	Elbow
41	053024.1	Sealing washer
42	094616	Tap bracket
43	411G601	Burner casing
44	1031187	Ignition switches
45	094794	Burner bracket A
46	094716	Burner bracket SR
47	094717	Burner bracket R
49	051054	Terminal block
50	054131	Cord 3x0.75
51	001217	SCREW
52	094389	BRACKET
53	094335	Fixing bracket
55	082082	Electronic ignition
56	103347	Gas pressure regulator 1/2
57	067026	Conical adaptor
58	103468	Test point adaptor