



Position	Code	description
0	6107050007	Natural gas conversion kit
01	032G7017	Hob top
03	053076	SEAL
04	040087	Rubber joint
05	218E00H563	KNOB
06a	053136	Burner gasket A
06b	053137	Burner gasket SR
06c	053138	Burner gasket R
07	053107	Burner gasket
08a	068121035A	Burner-head A
08b	068122035A	Burner-head SR
08c	068123035A	Burner-head R
09	068138035A	Burner-head
10a	51BPG01A	Burner flange A
10b	51BPG02A	Burner flange
10c	51BPG03A	Burner flange R
11	51BPG07A	Burner flange
12a	216140005A	Burner-cap A
12b	216141005A	Burner-cap SR
12c	216142005A	Burner-cap R
13	216160005A	Burner-cap outside
14	216161005A	Burner-cap inside
15	217642	Top grate
16	217643	Top grate
17	217498	Grid for woks
18	067026	Conical adaptor
21	0291051	Inlet pipe - central TR
22	0291050	Inlet pipe - rear right SR
23	0291052	Inlet pipe - rear left SR
24	0291053	Inlet pipe R
25	0291049	Inlet pipe A
26a	035129	Burner spring A
26b	035120	Burner spring SR
26c	035121	Burner spring R
27	035122	Burner spring
28	085102	Burner bush
30a	107064	Burner thermocouple L = 250

30c	107057	Burner thermocouple L = 450
30d	107067	Burner thermocouple L = 500 mm
31	214057	NUT
032A	101182	Injector NATURAL GAS Ø 0.85 - A
032B	101233	Injector ULPG Ø 0.95 - TR
032C	101244	Injector Rapid diam 0.91 - LPG
032D	101335	Injector NATURAL GAS Ø 1.60 - TR
032E	101260	Injector NATURAL GAS Ø 1.12 - SR
032F	101262	Injector ULPG Ø 0.53 - A
032G	101263	Injector ULPG Ø 0.70 - SR
032H	101273	Injector Rapid diam 1.45 - NG
33a	215486	Burner-cup A
33b	215487	Burner-cup SR
33c	215488	Burner-cup R
34	215489	Burner cup
035A	084028	Spark plug L=250mm (auxiliary burner)
035B	084029	Spark plug L=630mm (semirapid &
035C	084046	Spark plug L = 400
36	035094	Igniter spring
37	342G750003	5 gas inlet pipe
038A	106249	Tap Auxiliary diam 0.27
038B	106252	Tap Semi-rapid diam 0.34
038C	106253	Tap Rapid diam 0.44
038D	106254	Tap Triple-ring diam 0.65
39	001202	SCREW
40	067008	Elbow
41	053024.1	Sealing washer
42	094616	Tap bracket
43	411G702	Burner casing
44	1031126	Ignition switches
45	094794	Burner bracket A
46	094716	Burner bracket SR
47	094717	Burner bracket R
48	094718	Burner bracket
49	051079	Terminal Block
50	054131	Cord 3x0.75
51	001217	SCREW
52	094389	BRACKET

53	094335	Fixing bracket
55	082095	Electronic Ignition
56	103468	Test point adaptor
57	103347	Gas pressure regulator 1/2