
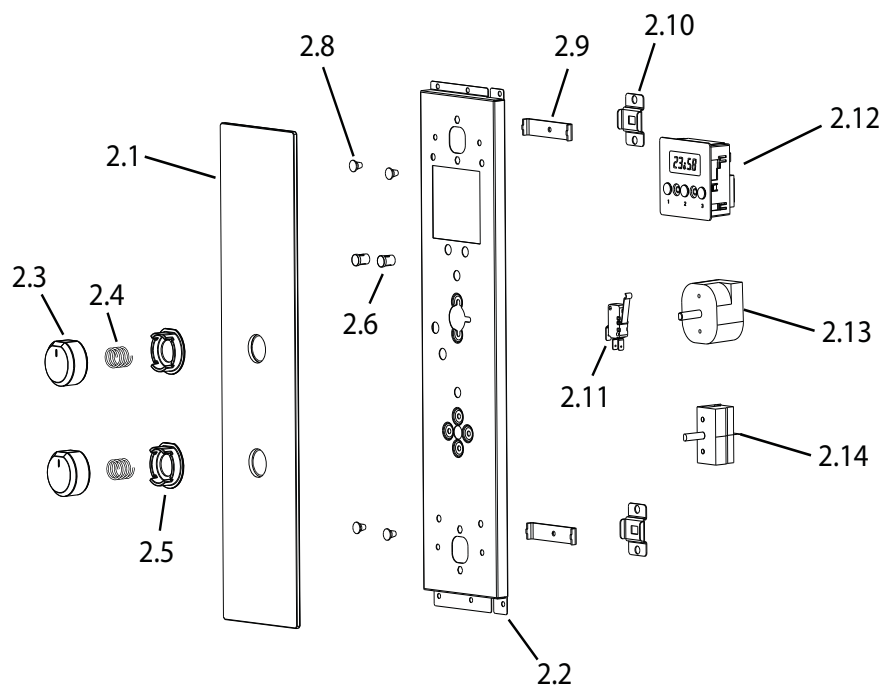
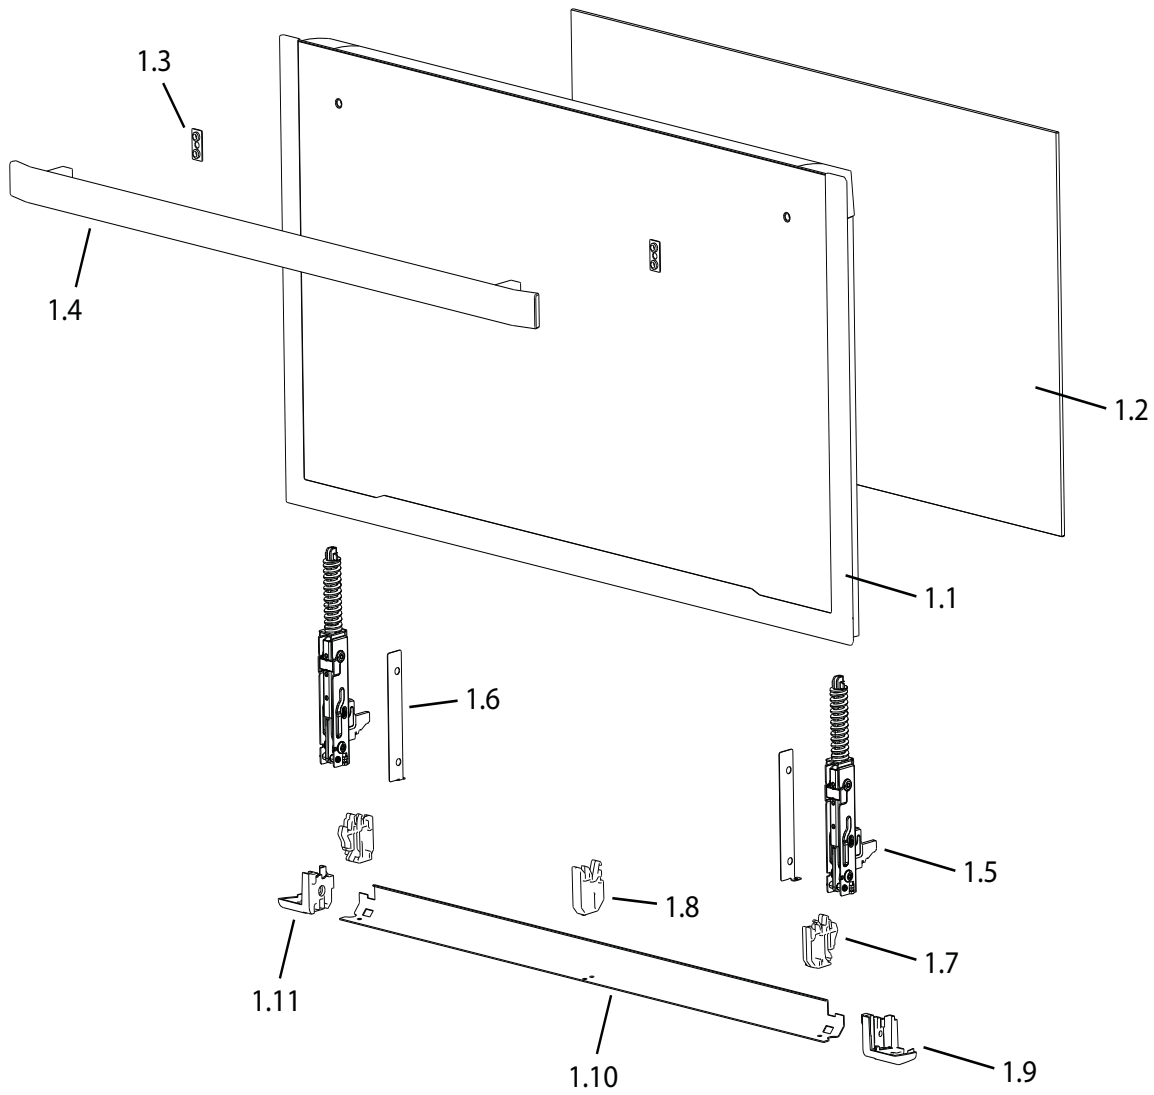


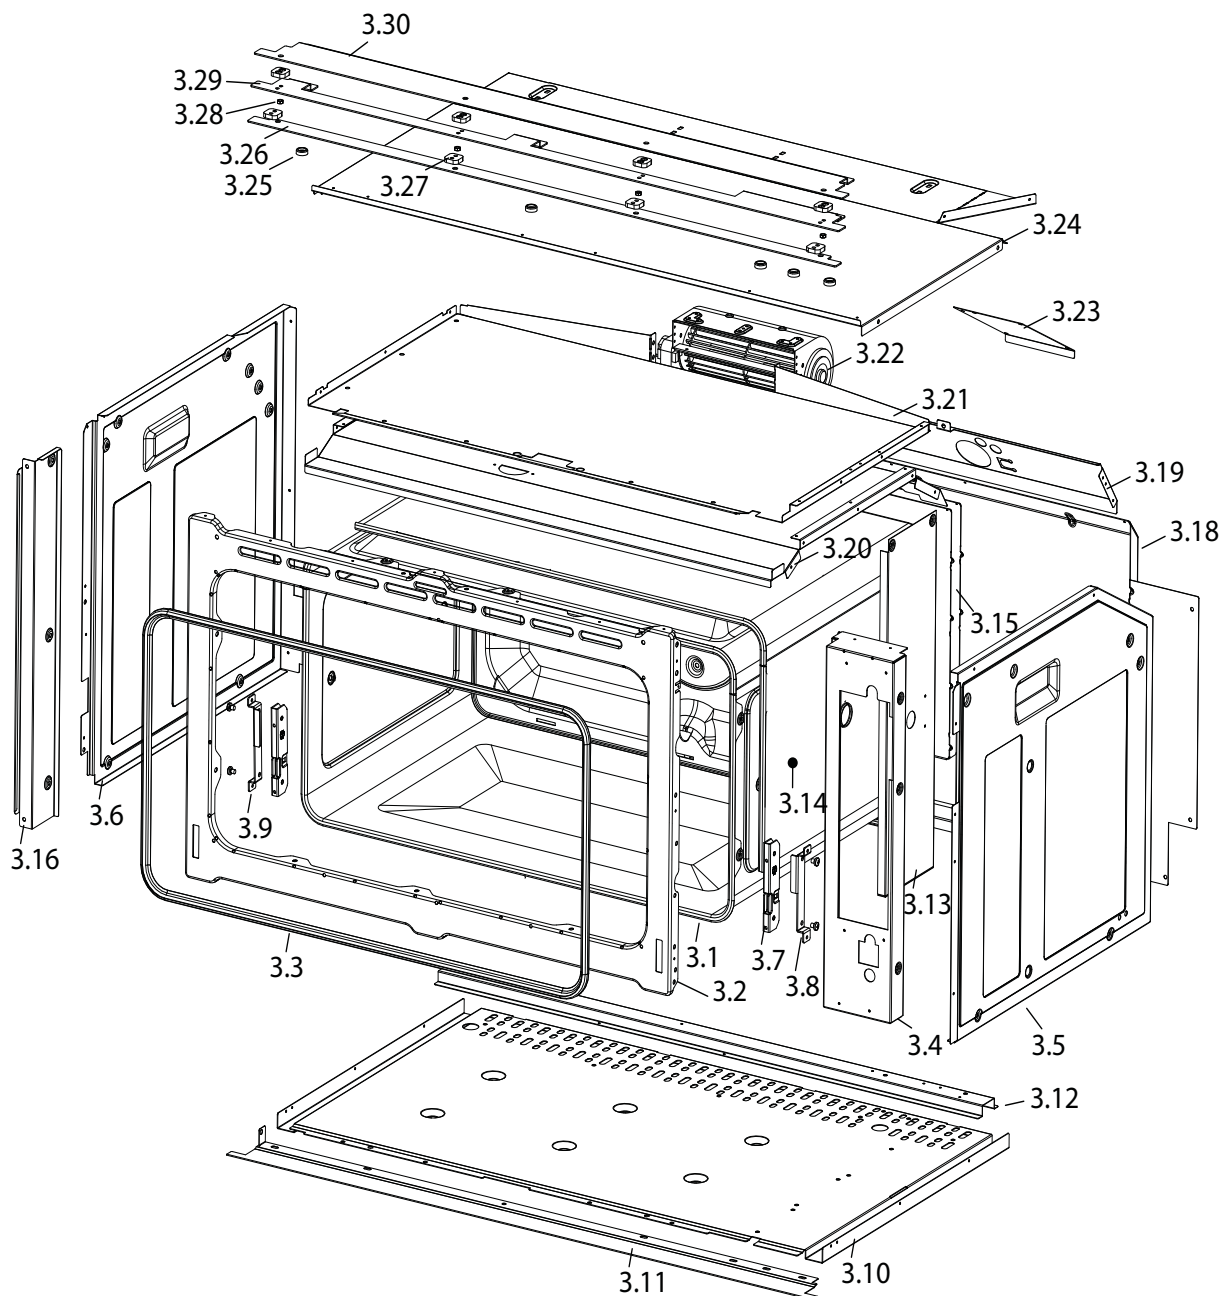



**WARNING, VERY IMPORTANT:**


The oven is supplied with **no.6 rubber spacers fixed** at the bottom

DO NOT install the oven without these spacers correctly in place.

If one or more rubber spacers are missing, please use the ones contained in this kit and fix them to the bottom of the oven as indicated in this figure.

Should you require assistance please contact our Customer Service Centre for your nearest Authorised Delonghi Service Agent.

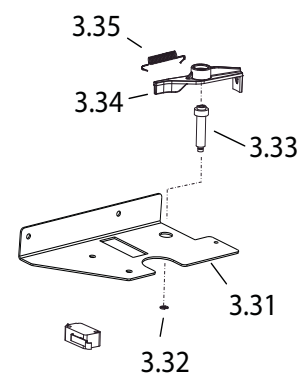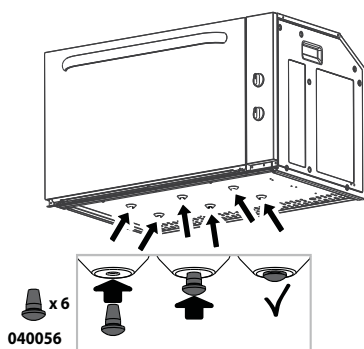

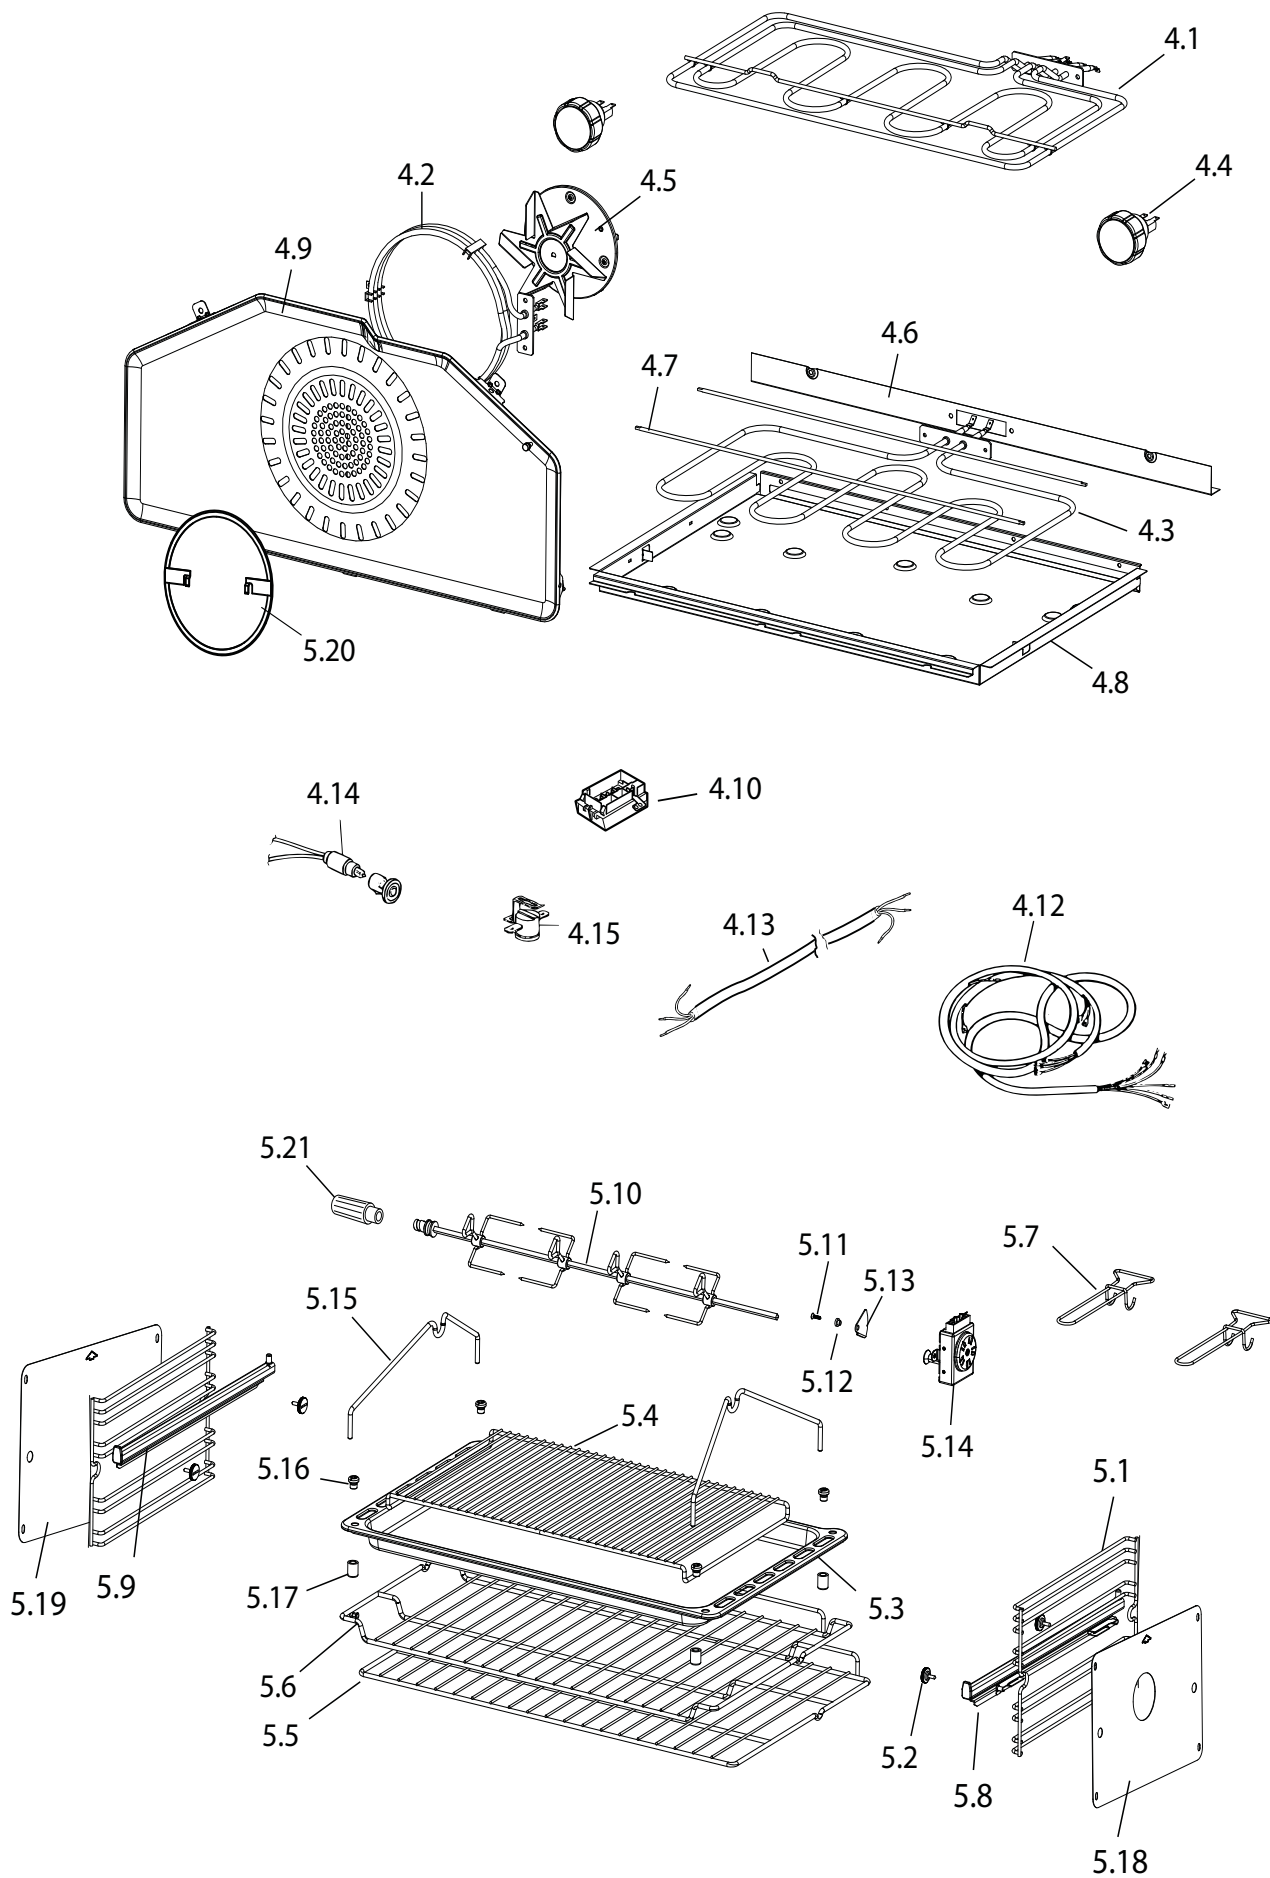

Position	Code	description
1= 1.1	0329E064	OVEN DOOR GLASS
2= 1.2	0312813	INNER DOOR GLASS
3= 1.3	1031697080	Handle spacer
4= 1.4	037354061	OVEN DOOR HANDLE
5= 1.5	063158	SOFT CLOSE HINGE MALE SX - DX
6= 1.6	094860	HINGE MALE SUPPORT SX - DX
7= 1.7	069097	Retainer door glass
8= 1.8	069098	Support door glass
9= 1.9	081115	CORNER DOOR LOWER RH RIGHT
10= 1.10	51BF904A	LOWER BAR
11= 1.11	081116	CORNER DOOR LOWER LH LEFT
12= 2.1	0329E051	GLASS FACIA PANEL
13= 2.2	35MF9G01A	INTERIOR CONTROL PANEL
14= 2.3	218E00H561	CONTROL KNOB
15= 2.4	035036	KNOB SPRING
16= 2.5	10317470A	KNOB RING
17= 2.6	073090	Control lamp cover (Blue)
18= 2.8	040056	Rubber
19= 2.9	094657	BRACKET
20= 2.10	094868	BRACKET
21= 2.11	077088	SWITCH DOOR
22= 2.12	074103	PROGRAMMER
23= 2.13	066078	THERMOSTAT
24= 2.14	050100	SWITCH
25= 3.1	450F91EM42	Oven frame
26= 3.2	45BF9003G	BODY FRONT PANEL
27= 3.3	053179	SEAL
28= 3.4	35M9E002A	INTERIOR CONTROL PANEL
29= 3.5	411F915	RIGHT SIDE PANEL
30= 3.6	411F905	LEFT SIDE PANEL
31= 3.7a	063159	FEMALE HINGE LEFT
32= 3.7b	063160	FEMALE HINGE RIGHT
33= 3.8	094858	RIGHT BRACKET
34= 3.9	094859	LEFT BRACKET
35= 3.10	411F901	LOWER SHELTER
36= 3.11	08333100A	LOWER TRIM
37= 3.12	51BF907	SUPPORT BAR

38= 3.13	51BF909	MOTOR SUPPORT
39= 3.14	030219	Oven insulation
40= 3.15	030242	Rear insulation
41= 3.16	51BF906A	FRONT TRIM
42= 3.18	411F913	REAR SHELTER
43= 3.19	51BF910	REAR SUPPORT
44= 3.20	421F905Z	LOWER SHELTER
45= 3.21	421F909Z	PANEL VENTING MIDDLE
46= 3.22	079054	TANGENTIAL FAN
47= 3.23	51BF915	REAR BRACKET
48= 3.24	411F914	UPPER SHELTER
49= 3.25	040041001	PLUG
50= 3.26	083334061S	LOWER TRIM
51= 3.27	1031234	SPACER
52= 3.28	214005	NUT
53= 3.29	083333061S	MIDDLE TRIM
54= 3.30	083332061S	TOP TRIM
55= 3.31	094864	LOCK DOOR BRACKET
56= 3.32	003040	STARLOCK WASHER
57= 3.33	085118	PIN PIVOT LOCK
58= 3.34	1031277	TRIGGER DOOR SENSOR
59= 3.35	035113	SPRING
60= 4.1	062157004	Top + grill element
61= 4.2	062097004	Fan element
62= 4.3	062146004	Bottom element
63= 4.4	072026	LAMP HOLDER
64= 4.5	079049	Fan motor 230 V
65= 4.6	51BF911	SUPPORT BAR
66= 4.7	1031283	Element support
67= 4.8	421F908Z	LOWER PROTECTION
68= 4.9	47AF9020	Fan diffuser
69= 4.10	051072	TERMINAL BLOCK
70= 4.12	1132403	WIRING
71= 4.13	054041	CORD
72= 4.14a	073091	Control lamp L = 230
73= 4.14b	073095	Control lamp L 600/230
74= 4.15	066068	Cut-off thermostat 130 degree
75= 5.1	217659	Shelf support

76= 5.2	001142	Shelf support screw
77= 5.3	48BF902G	Oven tray
78= 5.4	217651	Grill pan grid
79= 5.5	217657	FLAT SHELF
80= 5.6	217650	OVEN SHELF
81= 5.7	037224.1	GRILL-PAN GRID HANDLE
82= 5.8	1031782	Right telescopic runner
83= 5.9	1031783	LEFT TELESCOPIC RUNNER
84= 5.10	080037	Rotisserie spear (including handle)
85= 5.11	001162	SCREW
86= 5.12	085113	Douille
87= 5.13	094671	Equerre
88= 5.14	079053	Rotisserie motor
89= 5.15	217652	Rotisserie support
90= 5.16	085109	Rotisserie screw
91= 5.17	085110	Rotisserie bush
92= 5.18	473140	RIGHT CATALYTIC PANEL
93= 5.19	473150	LEFT CATALYTIC PANEL
94= 5.20	103085	FILTER
95= 5.21	037012	Spear handle