


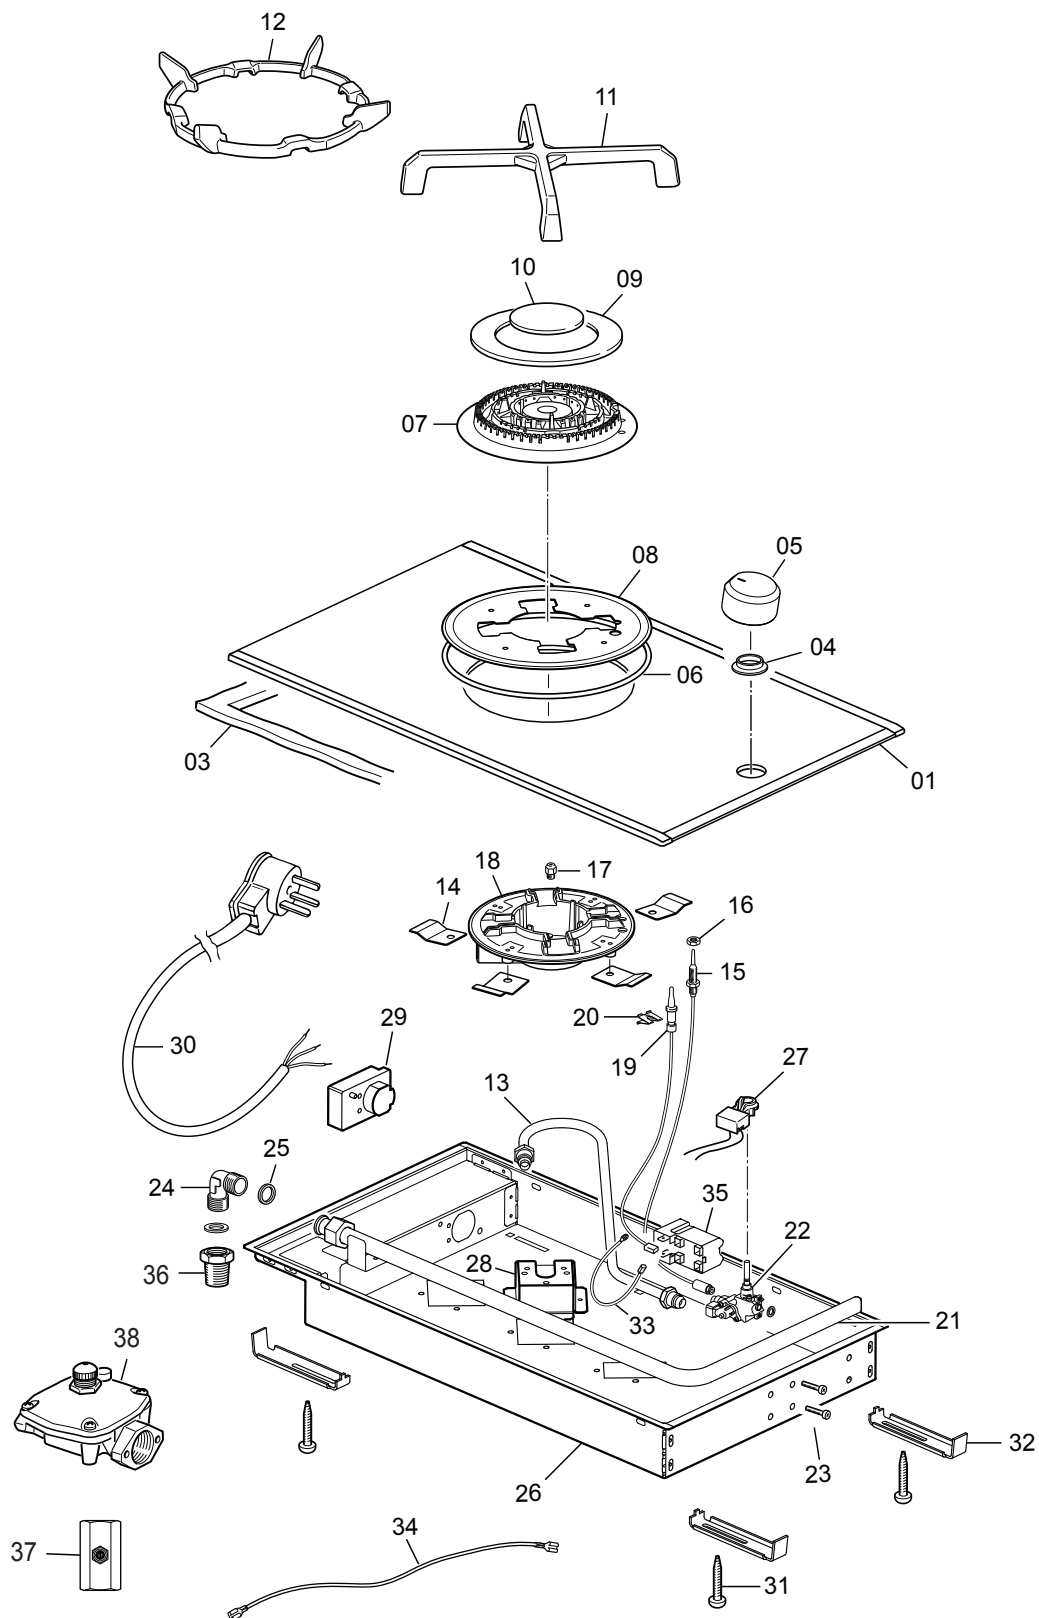

Position	Code	description
01	032P2999DL	Hob top
03	053076	SEAL
04	040087	Rubber joint
05	218E00H563	KNOB
06	053107	Burner gasket
07	068138035A	Burner-head
08	51BPG07A	Burner flange
09	216160005A	Burner-cap outside
10	216161005A	Burner-cap inside
11	217643	Top grate
12	217498	Grid for woks
13	029984	Inlet pipe
14	035122	Burner spring
15	107057	Burner thermocouple L = 450
16	214057	NUT
017A	101233	Injector ULPG Ø 0.95 - TR
017B	101335	Injector NATURAL GAS Ø 1.60 - TR
18	215489	Burner cup
19	084046	Spark plug L = 400
20	035094	Igniter spring
21	342G310001	1 gas inlet pipe
22	106254	Tap Triple-ring diam 0.65
23	001090	SCREW
24	067008	Elbow
25	053024.1	Sealing washer
26	411G302	Burner casing
27	1031131	Ignition switches
28	094718	Burner bracket
29	051079	Terminal Block
30	054131	Cord 3x0.75
31	001217	SCREW
32	094335	Fixing bracket
33	103607	Cable L = 400
34	103389	Cable L = 400
35	082076	Electronic ignition
36	067026	Conical adaptor
37	103468	Test point adaptor

38	103347	Gas pressure regulator 1/2
----	--------	----------------------------
