



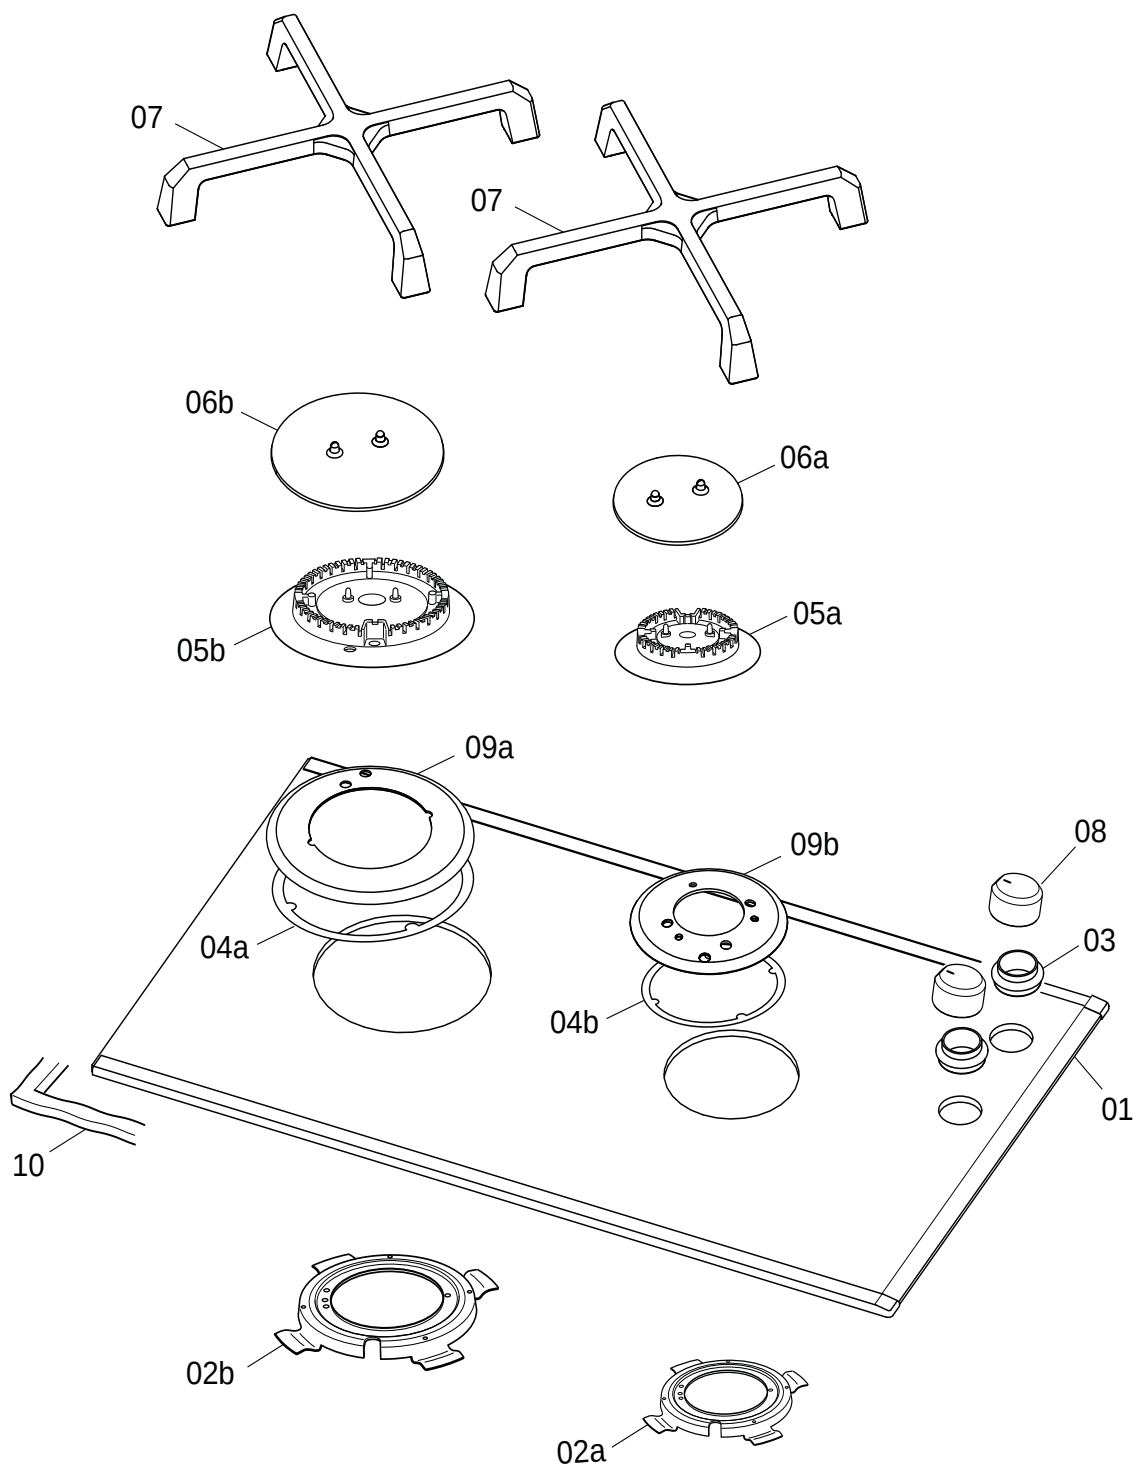

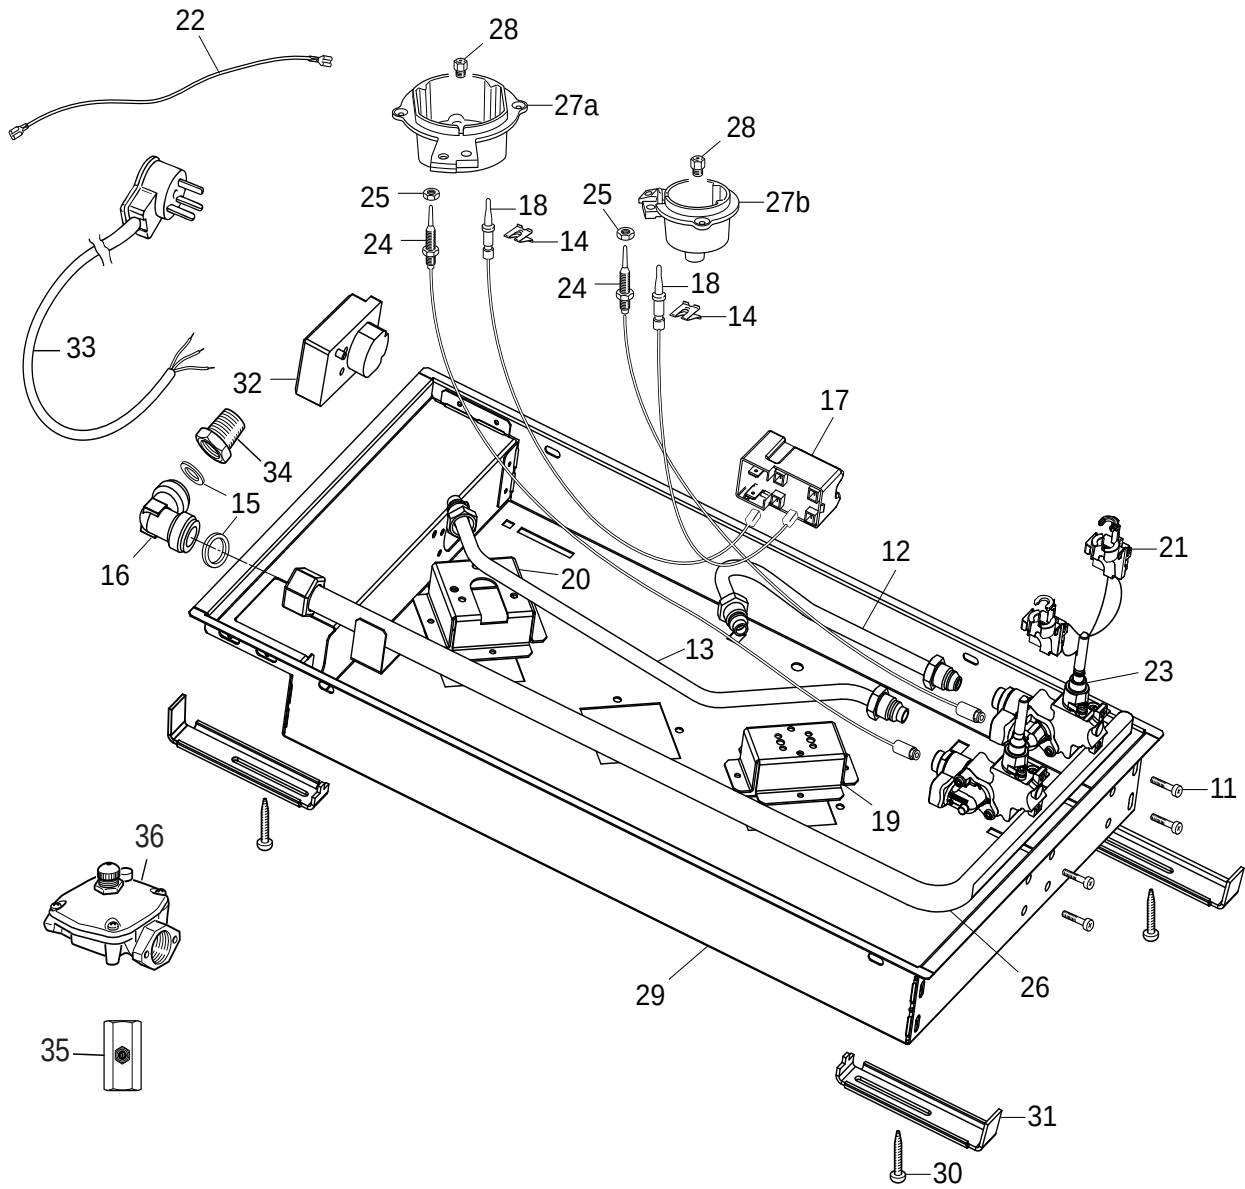

Position	Code	description
01	032P2989NP	Hob top
02a	035120	Burner spring SR
02b	035121	Burner spring R
03	040087	Rubber joint
04a	053138	Burner gasket R
04b	053137	Burner gasket SR
05a	068122035A	Burner-head SR
05b	068123035A	Burner-head R
06a	216141005A	Burner-cap SR
06b	216142005A	Burner-cap R
07	217642	Top grate
08	218E00H563	KNOB
09a	51BPG03A	Burner flange R
09b	51BPG02A	Burner flange
10	053076	SEAL
11	001090	SCREW
12	029982	Inlet pipe SR
13	029983	Inlet pipe R
14	035094	Igniter spring
15	053024.1	Sealing washer
16	067008	Elbow
17	082076	Electronic ignition
18	084028	Spark plug L=250mm (auxiliary burner)
19	094716	Burner bracket SR
20	094717	Burner bracket R
21	1031132	Ignition switches
22	103389	Cable L = 400
023A	106252	Tap Semi-rapid diam 0.34
023B	106253	Tap Rapid diam 0.44
024A	107064	Burner thermocouple L = 250
024B	107065	Burner thermocouple L = 400
25	214057	NUT
26	342G320001	2 gas inlet pipe
27a	215488	Burner-cup R
27b	215487	Burner-cup SR
028A	101244	Injector Rapid diam 0.91 - LPG
028B	101260	Injector NATURAL GAS Ø 1.12 - SR

028C	101263	Injector ULPG Ø 0.70 - SR
028D	101273	Injector Rapid diam 1.45 - NG
29	411G301	Burner casing
30	001217	SCREW
31	094335	Fixing bracket
32	051079	Terminal Block
33	054131	Cord 3x0.75
34	067026	Conical adaptor
35	103468	Test point adaptor
36	103347	Gas pressure regulator 1/2