




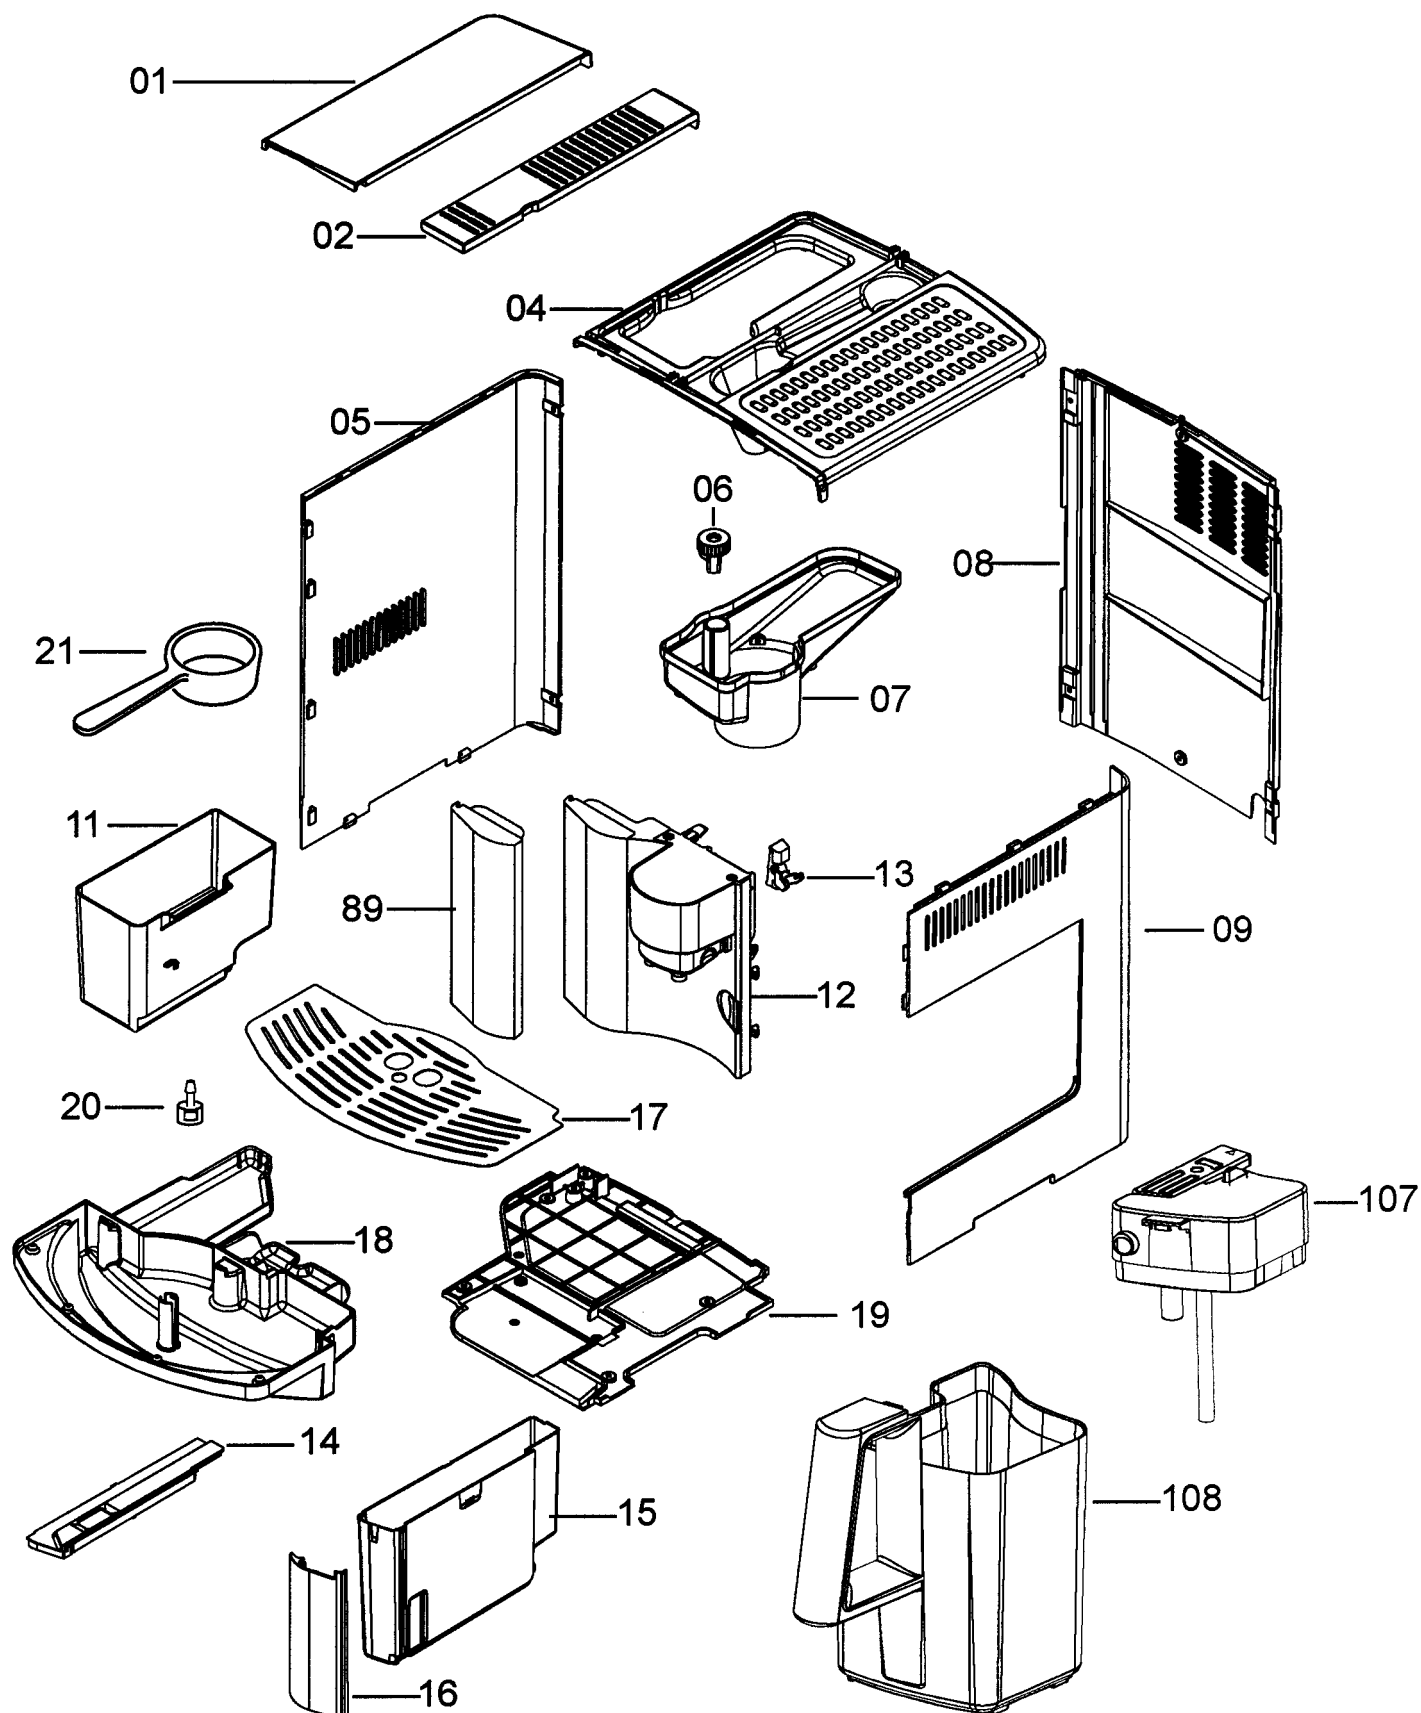

10

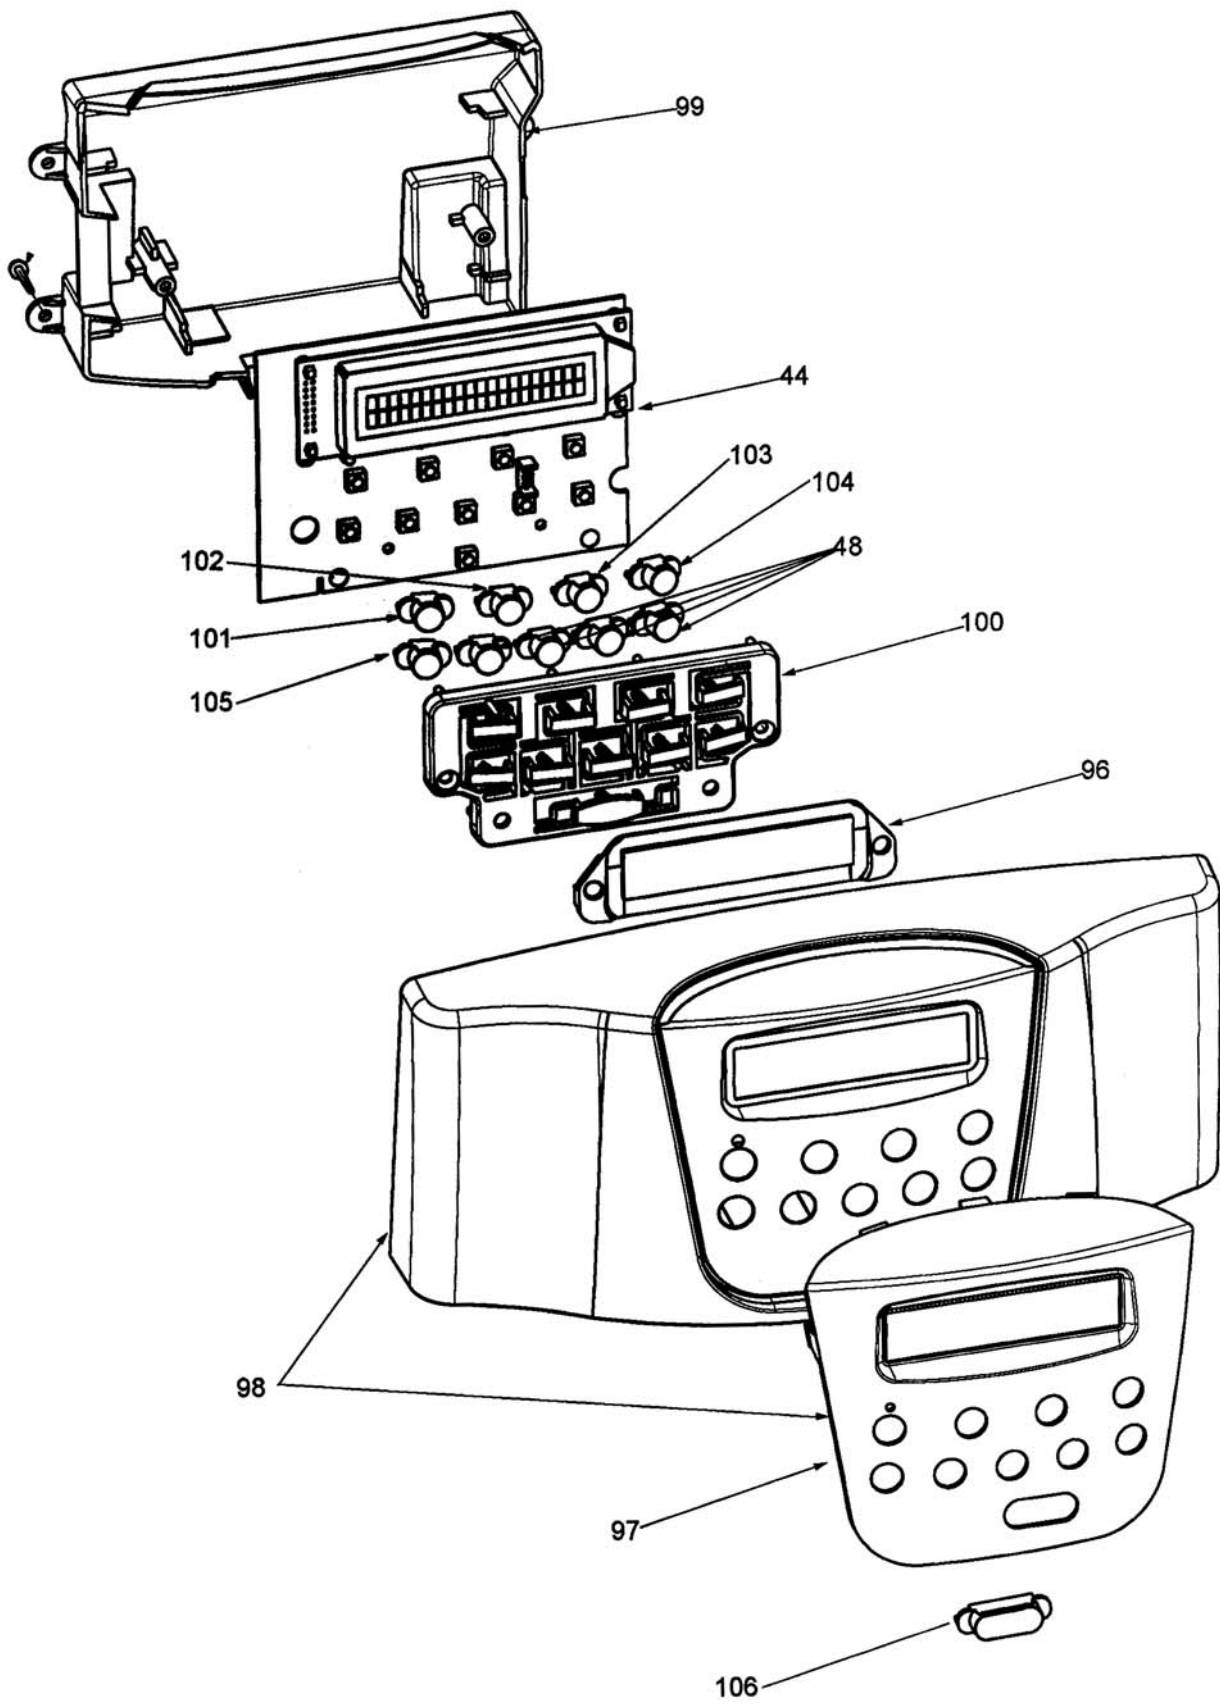





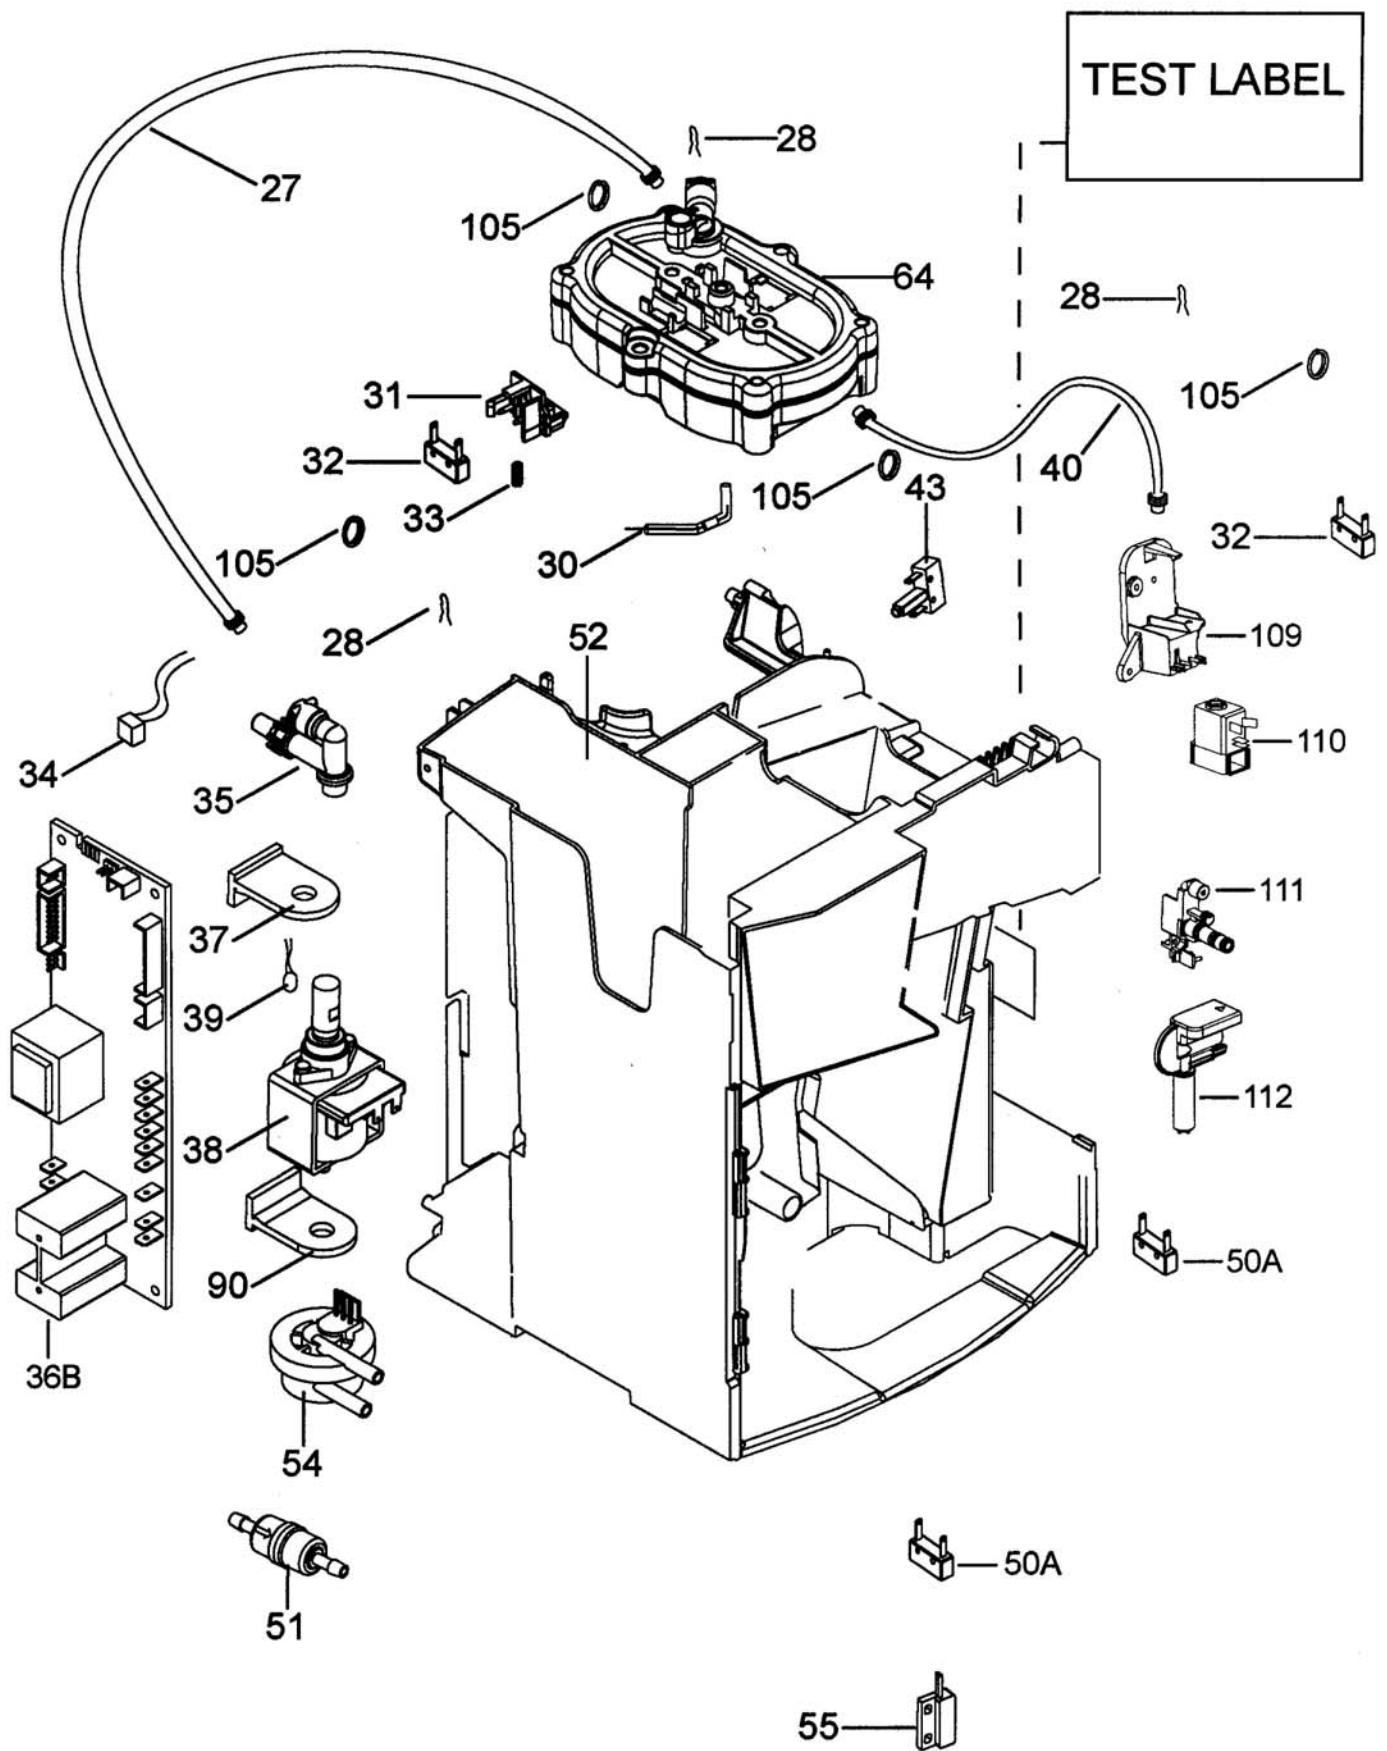


TEST LABEL


TO PLACE AN ORDER CHECK THE LABEL

CCCCC **EE** SSSSS PPPP


AB=62B

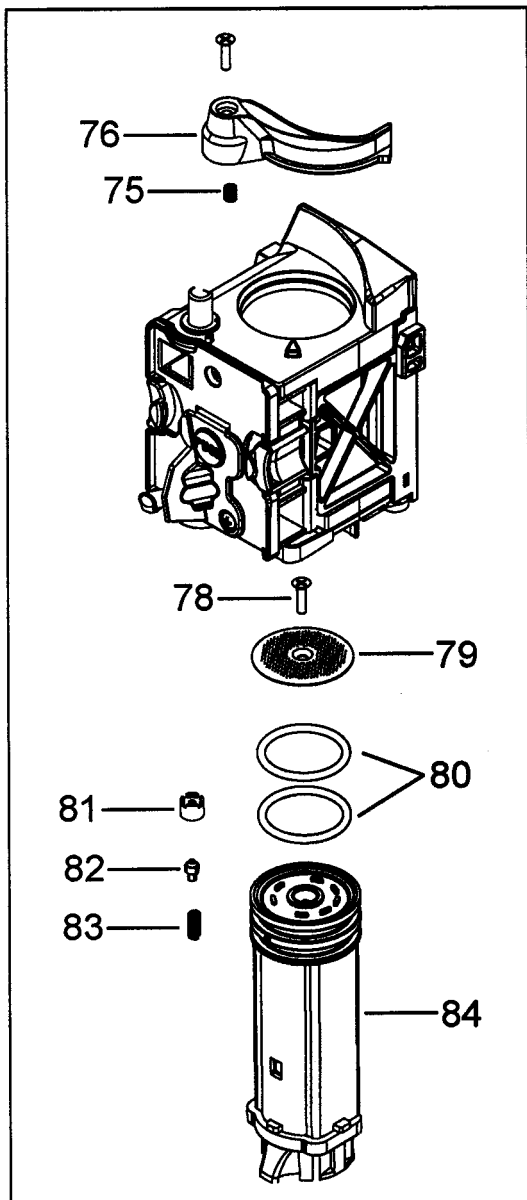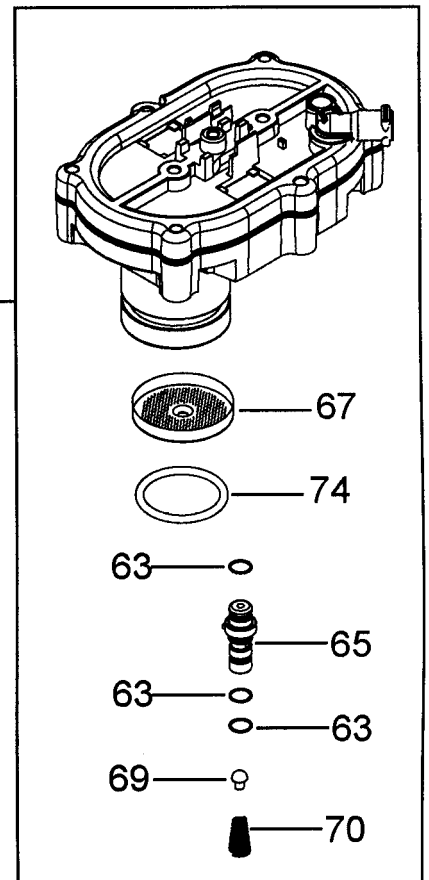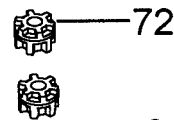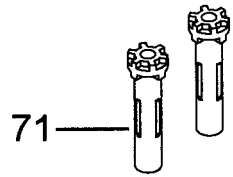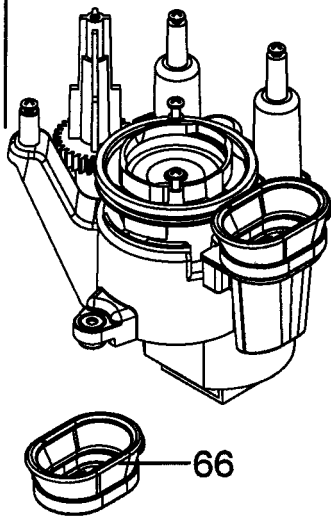

77

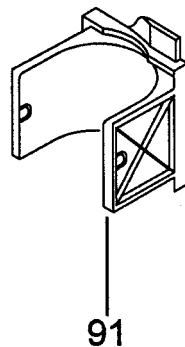

68B

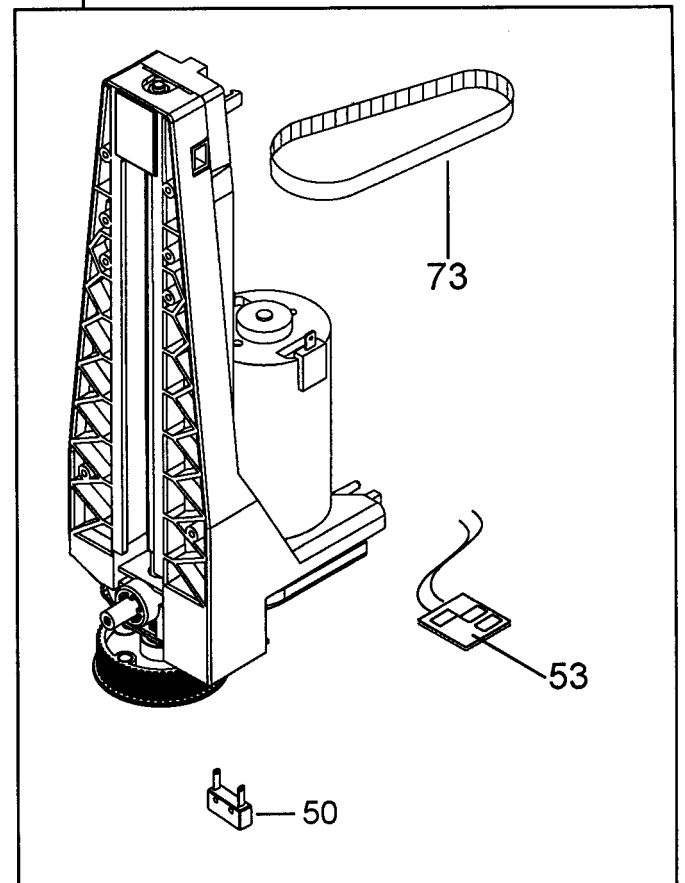

Position	Code	description
000A	5313210401	FINGER STOP COVER (B)
000B	5332224100	MOTOR BELT
000C	5332164700	RUNNER FRAME
000D	5313215891	SCUFF-PROOF RUBBER PAD
000E	5513211891	SCRAPER BRUSH WITH BRISTLES
000F	5332215100	GASKET
000G	6913210021	SOLENOID VALVE SUPPORT (2V)
000H	6913210031	SOLENOID VALVE SUPPORT (3V)
000I	SER0354	GREASE TUBE (5GR VERKOFOOD)
000J	IT1000	PORTABLE DIGITAL THERMOMETER (-50°C +150°C)
000K	AS00000378	ECOMULTICLEAN 10ML VIAL
001	5332187300	COVER
002	5332187200	COVER
004	7332200800	UPPER COVER
005	5332236800	LEFT SIDE
006	5913210471	GRINDING ADJUSTMENT KNOB
007	5532146600	TANK
008	5332237000	REAR PANEL
009	5332236600	SIDE RIGHT
010	7332200600	CONTROL PANEL ASSEMBLY WITH BOARD
011	NOCODE04	SEE TECHNICAL BULLETIN
012	7332200900	DOOR ASSY
013	5332142600	HOOK
014	5313251471	COVER
015	AS13200251	WATER TANK
016	5332203200	PROFILE
017	6032107700	CUP HOLDER
018	5332236200	CUP HOLDER TRAY
019	5332225800	BOTTOM
020	5332266300	FLOAT
021	53132C8134	MEASURING SPOON
027	5532118000	TUBE PTFE DI2-DE4 L=230 2BUSHES
028	6132101300	SPRING
030	5032517300	TCO WITH WIRING
031	5332142200	SUPPORT
032	5132104100	MICROSWITCH (250V 85°)

033	6132104700	SPRING (x micro 12 x 5)
034	5232105100	SENSOR (NTC)
035	7313219431	SAFETY VALVE
036B	5232113800	POWER BOARD (120V)
037	5332225700	SUPPORTO
038	5113211291	PUMP (ULKA 120V 52W)
039	5232102000	PROTECTOR
040	5513212881	TUBE WITH 2 BUSHES (L270)
043	5113210421	MICROSWITCH
044	5232114600	ELECTRONIC CONTROL BOARD
048	5332218900	KEY
051	5513220521	IMPURITY FILTER
053	5213213971	HALL SENSOR (L620)
054	5213225251	FLOWMETER
055	5232104600	REED SENSOR
062B	7313216831	GRINDER ASSEMBLY (2D-DL 120V)
063	5313217751	O-RING BLACK (D=6.07 T=1.78)
064	7332167300	GENERATOR WITH MECHANICS VALVE (120V)
065	5332184900	PIN
066	5313276531	GASKET
067	5332139200	FILTER
068B	AS00004230	TRANSMISSION ASSEMBLY (ECM 120V)
069	5332148400	VALVE
070	6132106900	SPRING
071	5332142300	BUSH
072	5332142400	BUSH
073	AS00009034	TOOTHED BELT
074	5332149100	O-RING
075	6132103500	SPRING
076	5332139800	LEVER
078	9812631250	SCREW (3.5X12)
079	6013213181	FILTER (D.40X2.3 TAI-FENG)
081	5313277681	STOPPER
082	53132C9532	FROTH DEVICE VALVE NATURAL(PSU)ESAM&ECAM
083	6132106700	SPRING
084	5332140300	PISTON
089	5332203400	COVER

090	534848	SUPPORT
091	7313251441	INFUSER
092	5232105000	SAFETY THERMOSTAT (13.5A 318°)
094	5513225801	SOLENOID VALVE KIT (3VA 120V)
095	7332212600	VAPORIZER (120V)
096	5332195000	GLASS
097	5932121200	FRONT PIECE
098	5532139500	CONTROL PANEL
099	5332194900	COVER
100	5332195300	KEYBOARD
101	5932118600	PUSH BUTTON
102	5932118700	PUSH BUTTON
103	5932118800	PUSH BUTTON
104	5932118900	PUSH BUTTON
105	5313217701	O-RING (D=3.85 T=2)
106	NOCODE01	NOT AVAILABLE
107	7313210921	COVER
108	5513218341	TANK
109	5313219491	SOLENOID VALVE SUPPORT
110	5213214731	SOLENOID VALVE CEME 5220VN2
111	5513227411	CARAFE COUPLING
112	5532124900	SPOUT