




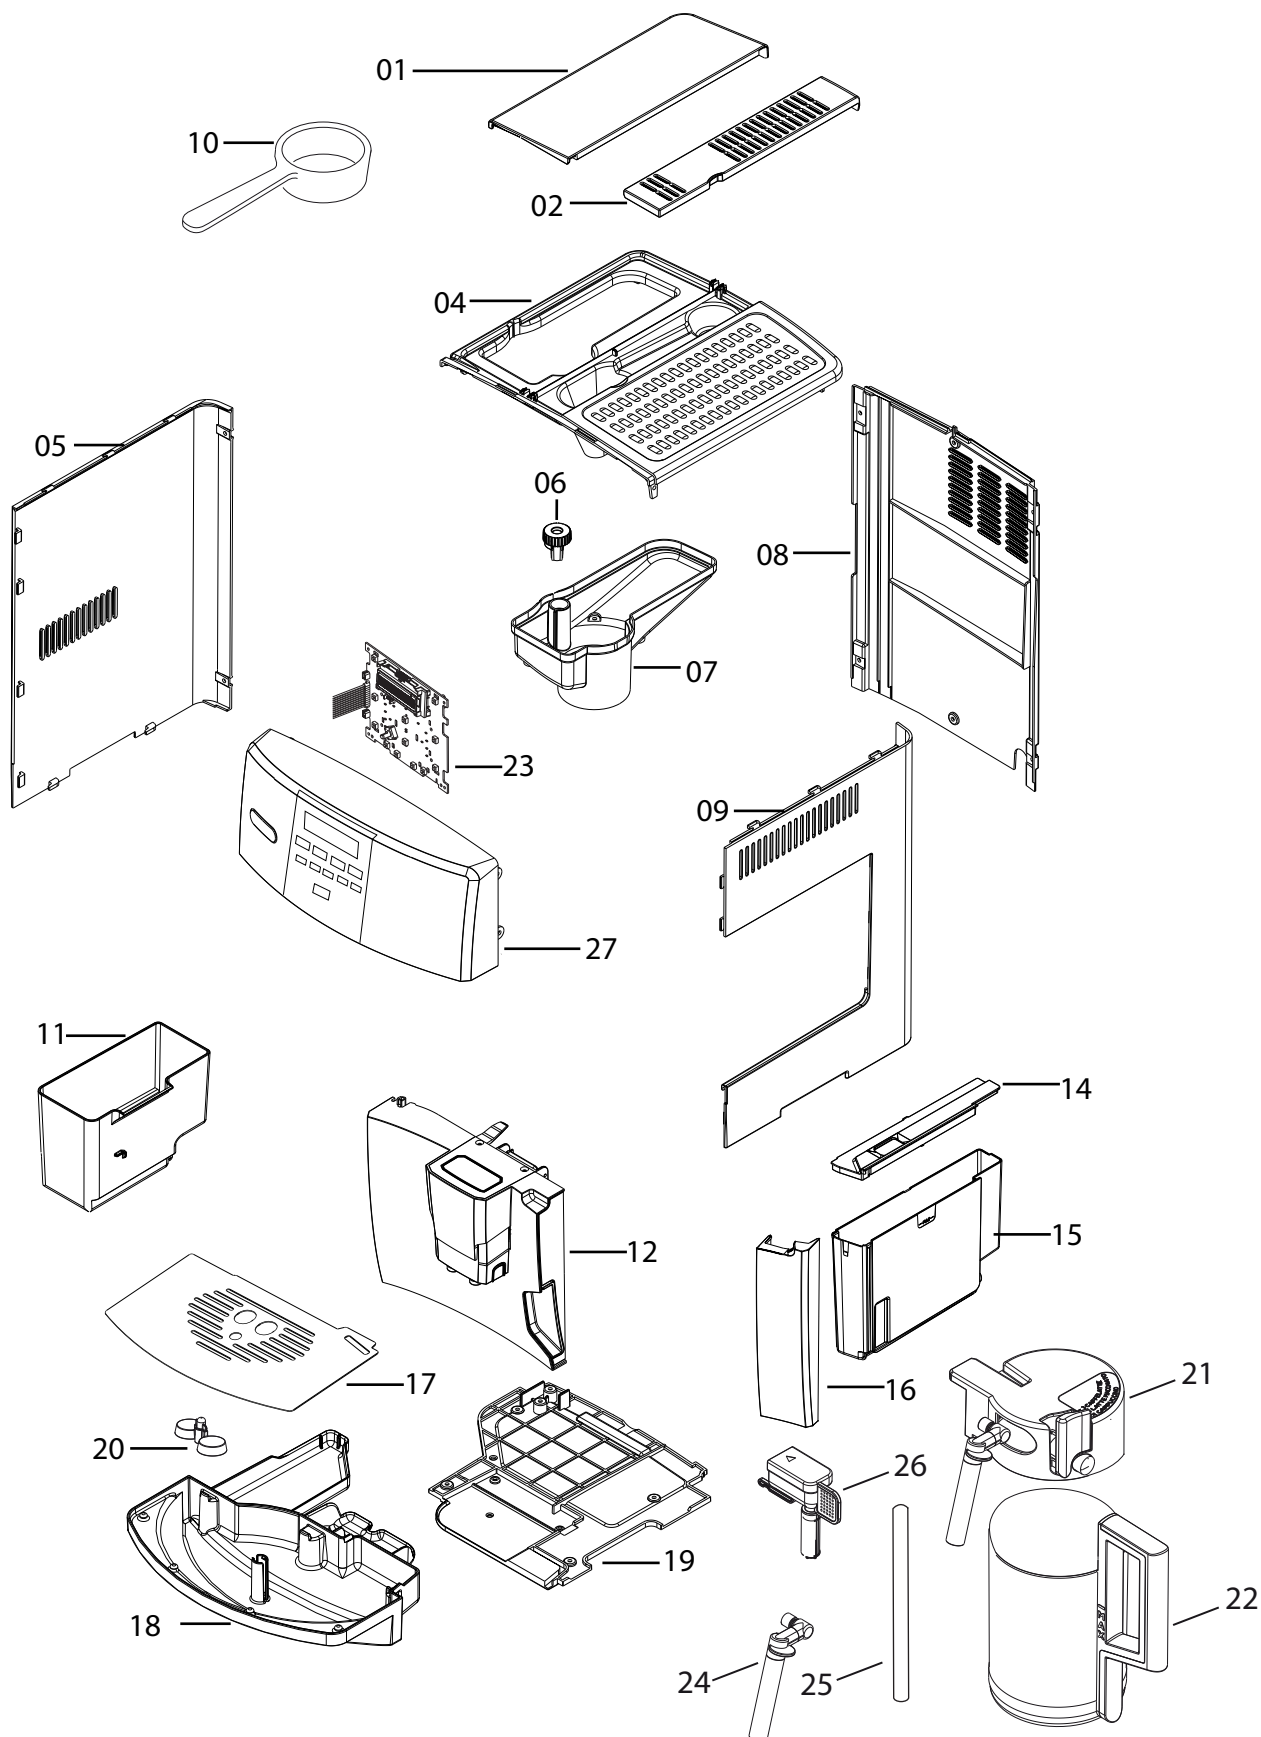

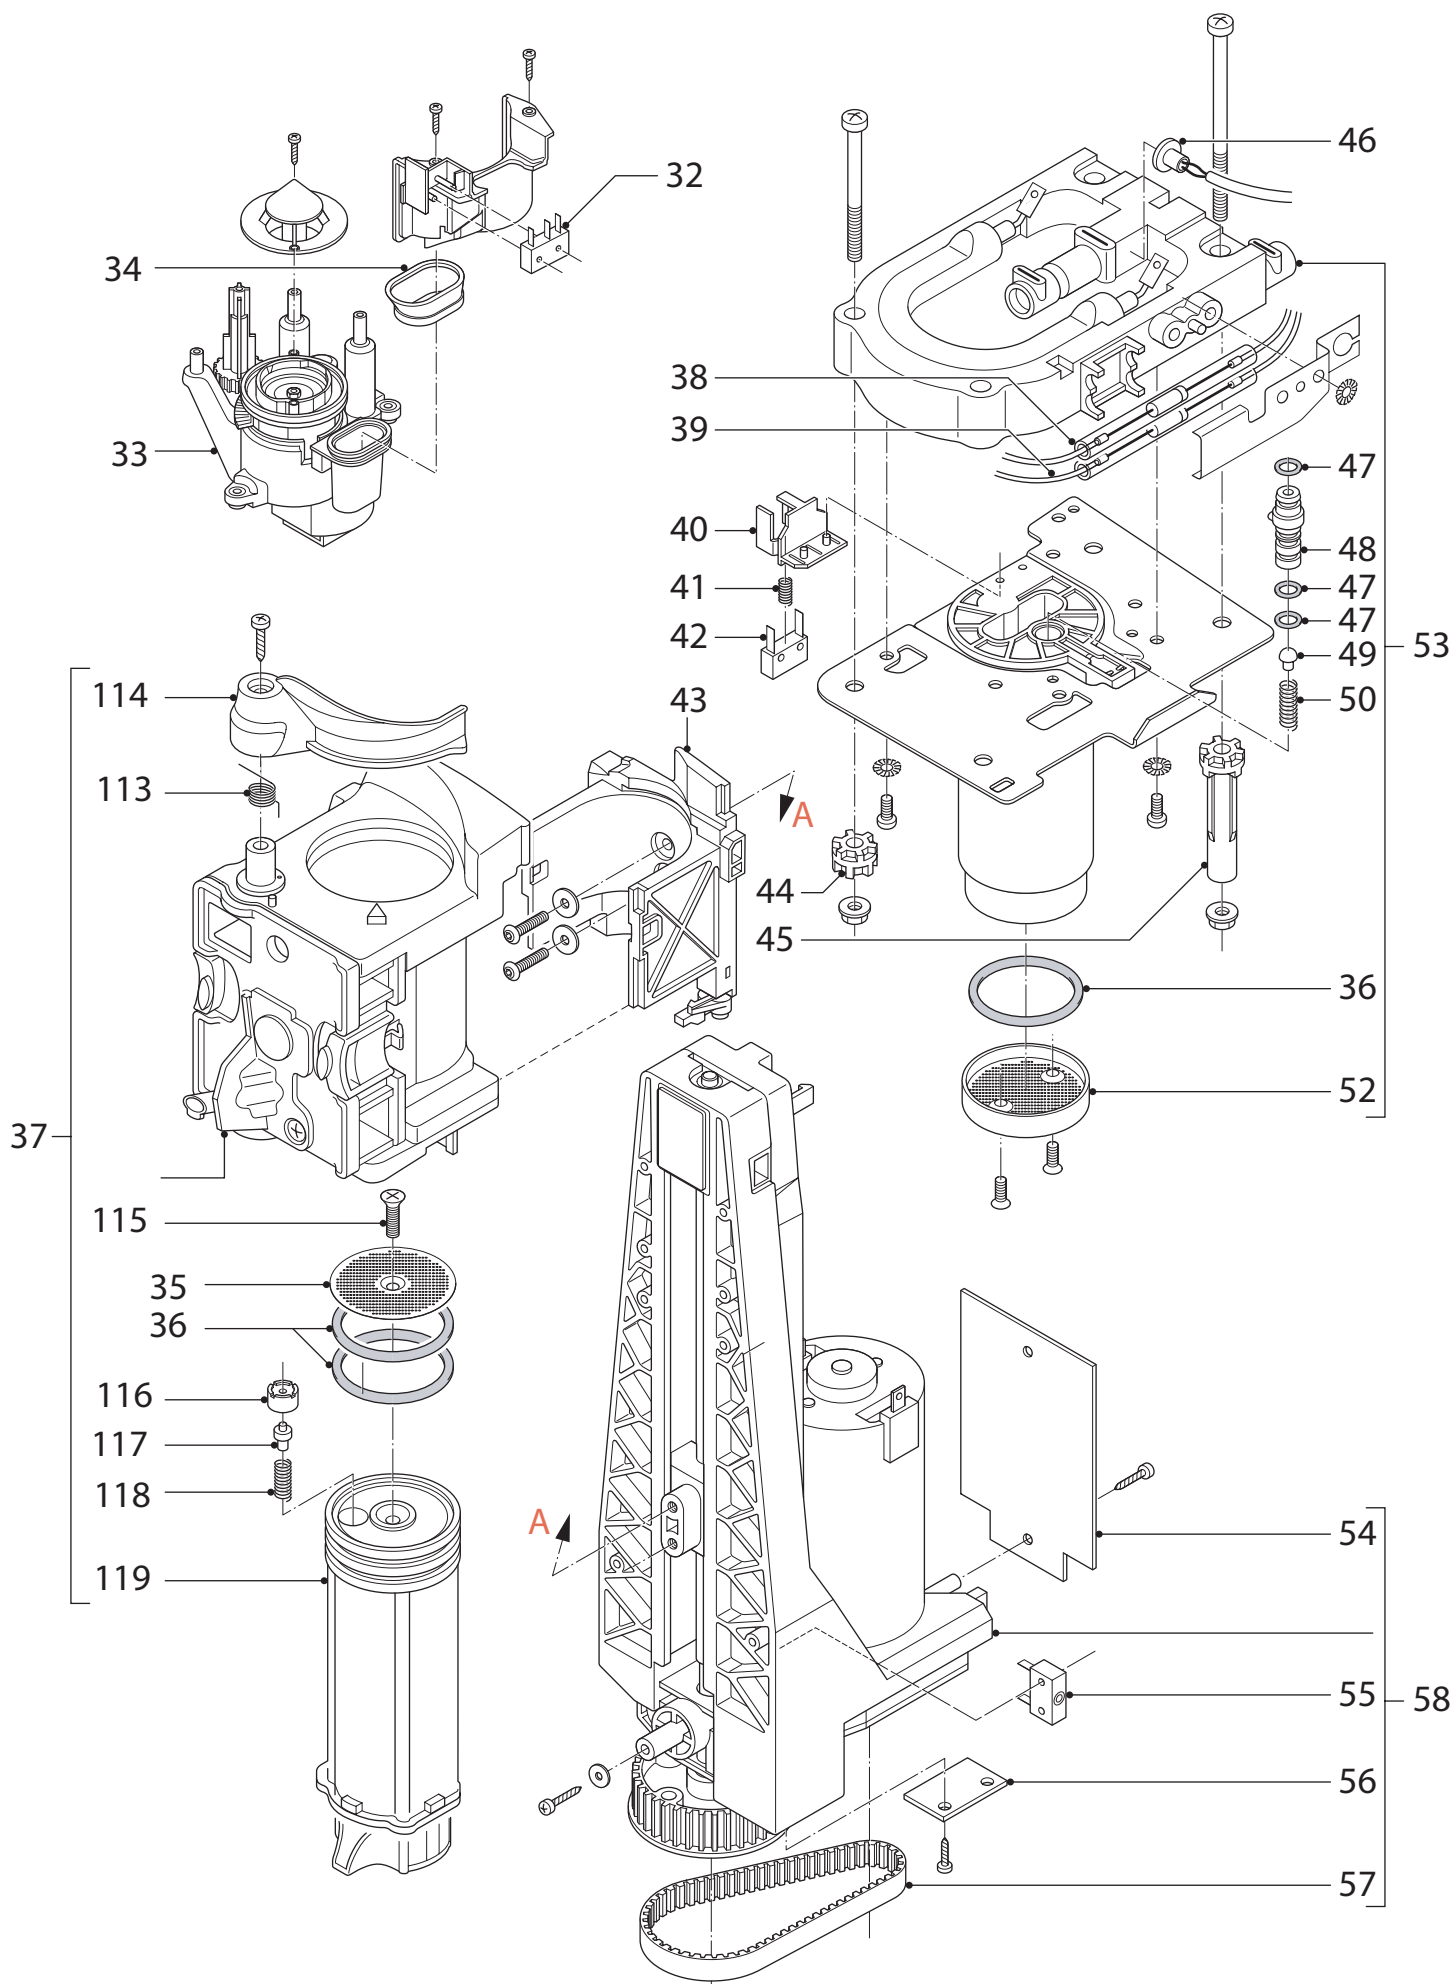

SERIE TUBI TUBE SERIES

SERIE TUBI CON BOCCOLE TUBE SERIES WITH BUSHES

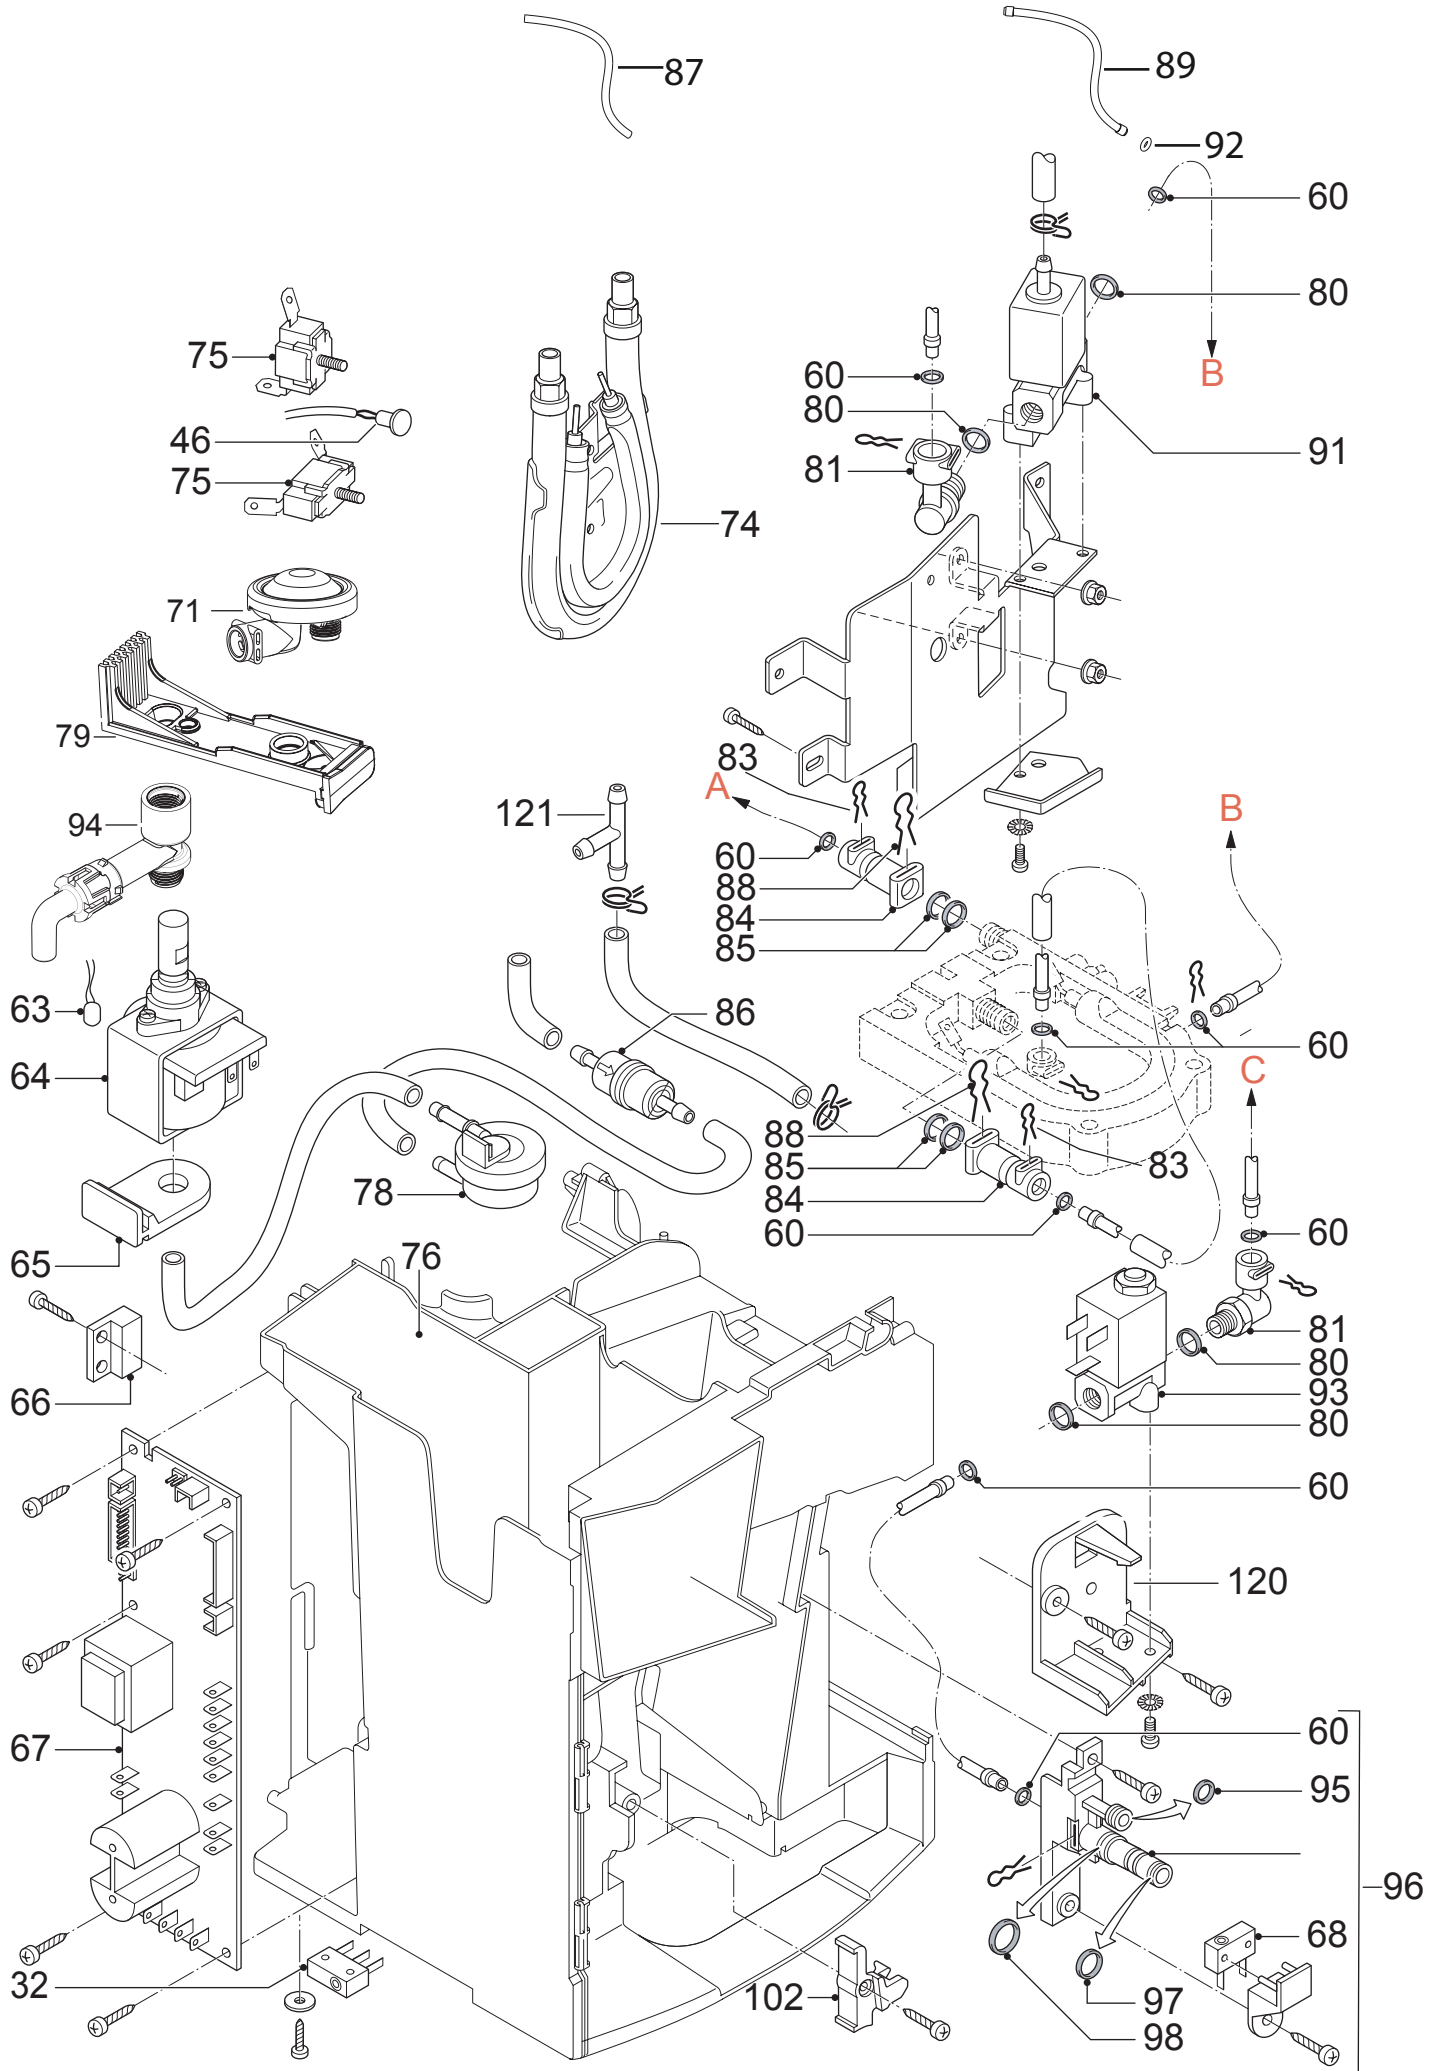

Position	Code	description
000A	7313217261	MOTOR WITH PULLEY (ECM 230V)
000B	5332186200	DRAIN HOSE (90°L180)
000C	5332224100	MOTOR BELT
000D	5332238300	DRAIN HOSE (90° L=180)
000E	AS13200107	COVER ASSEMBLY
000F	5332164700	RUNNER FRAME
000G	5013252911	WIRING FOR FLOWMETER (L630)
000H	5313212371	BICCHIERE EROGATORE(ABS)NERO ESAM03
000I	5313215891	SCUFF-PROOF RUBBER PAD
000J	5513211891	SCRAPER BRUSH WITH BRISTLES
000K	5313224241	FROTHER NICHE (IFD)
000L	5313219181	GRINDER BELLOW GASKET
000M	SER0354	GREASE TUBE (5GR VERKOFOOD)
000N	5032110800	POWER SUPPLY CORD WITH PLUG (SCHUKO)
000O	5313222591	COUPLING SPACER
000P	5313239751	GRINDER PANEL
000Q	IT1000	PORTABLE DIGITAL THERMOMETER (-50°C +150°C)
000R	5013257331	CABLING WITH FUSE (1.25 A)
000S	5313240551	TUBE (SIL PLAT)DI=3 DE=5.5 L17
000T	AS00000378	ECOMULTICLEAN 10ML VIAL
000U	5332261200	GASKET
000V	6913210111	FRONT BRACKET DEGREASED ESAM69
001	5332187300	COVER
002	5332187200	COVER
004	7313224481	UPPER COVER
005	5332187500	LEFT SIDE
006	5913210471	GRINDING ADJUSTMENT KNOB
007	5532146600	TANK
008	5313220261	REAR PANEL
009	5332187400	RIGHT SIDE
010	53132C8134	MEASURING SPOON
011	5313228721	COFFEE GROUNDS CONTAINER
012	7313222031	DOOR ASSEMBLY
014	5313251481	WATER TANK COVER
015	AS13200255	WATER TANK
016	5313214841	WATER TANK FRONT PIECE

017	6013210441	CUP HOLDER
018	5313214961	CUP HOLDER TRAY
019	5332225000	BOTTOM
020	5332266600	FLOAT
021	7313245211	MILK CARAFE COVER ASSEMBLY
022	7313229421	MILK CARAFE
023	5213213901	BOARD DISPLAY
024	5532144200	DISPENSING TUBE
025	5332259800	WATER INTAKE TUBE
026	5513212801	HOT WATER SPOUT
027	7313222181	CONTROL PANEL ASSEMBLY WITHOUT BOARD
032	5132105400	MICROSWITCH (10A/ 250V/ 125°)
033	5513227971	GRINDER ASSEMBLY (2D-DL 230V)
034	5313276531	GASKET
035	6013213181	FILTER (D.40X2.3 TAI-FENG)
036	5332149100	O-RING
037	7313251441	INFUSER
038	5032526900	TCO WITH WIRING
039	5032526800	TCO WITH WIRING
0040	5313284261	SUPPORT
041	6132104700	SPRING (x micro 12 x 5)
042	5132104100	MICROSWITCH (250V 85°)
043	7332166600	SLIDER
044	5332142400	BUSH
045	5332142300	BUSH
046	5217100200	SENSOR (NTC L400)
047	5313217751	O-RING BLACK (D=6.07 T=1.78)
048	5332213000	PIN
049	5332148400	VALVE
050	6132106900	SPRING
051	5332149100	O-RING
052	5332139200	FILTER
053	5513227901	GENERATOR WITH MECHANICS VALVE (5X0.5 230V)
054	5213212381	MOTOR BOARD (ECM 230V)
055	5132110500	MICROSWITCH (250V 85°)
056	5213213971	HALL SENSOR (L620)
057	5313243071	TOOTHED BELT

058	5513227951	TRANSMISSION ASSEMBLY (CHIAPHUA 230V)
060	5313217701	O-RING (D=3.85 T=2)
063	5213211801	PUMP PROTECTOR
064	5113270612	PUMP (230V)
065	534848	SUPPORT
066	5232104600	REED SENSOR
067	5213213871	POWER BOARD (SW1.0 230V)
068	5132104100	MICROSWITCH (250V 85°)
071	5513230831	FLOW REGULATOR
074	5513227931	VAPORIZER (R1000W 230V)
075	5232105000	SAFETY THERMOSTAT (13.5A 318°)
076	NOCODE04	SEE TECHNICAL BULLETIN
078	5213225251	FLOWMETER
079	5313216501	PUMP SUPPORT
080	5313217741	O-RING (D=6.75 T=1.78)
081	5313218341	CONNECTION
083	6132101300	SPRING
084	5332239200	CONNECTOR
085	5313228791	GENERATOR GASKET
086	5513220521	IMPURITY FILTER
087A	5332110600	TUBE (DI=4 L=220)
087B	5332111500	TUBE (DI=7 DE=10 L=120)
087C	5332115400	SILICONE HOSE (DI=5 L=145)
087D	5332150700	SILICONE HOSE (DI=4 L=55)
087E	5332177800	SILICONE HOSE (DI=4 L=200)
087F	5313283911	TUBE
087G	5332188600	SILICONE HOSE (DI=3.5 DE=6 L=14.5)
088	6113213191	CLIP (WIRE 1,2 AISI302)
089A	5513212881	TUBE WITH 2 BUSHES (L270)
089B	5513213501	TUBE WITH 2 BUSHES (L150)
089C	5513213801	TUBE WITH 2 BUSHES (L180)
089D	5513219841	TUBE WITH NUT AND 1 BUSH (L135)
089E	5513219851	TUBE WITH NUT AND 1 BUSH (L335)
090	5332196800	CONNECTION
091	5513225711	SOLENOID VALVE KIT (3VA 230V)
092	5313217701	O-RING (D=3.85 T=2)
093	5513225701	SOLENOID VALVE KIT (2VA 230V)
094	7313219421	SAFETY VALVE

095	5332196000	O-RING
096	AS13200286	CARAFE COUPLING
097	5313217751	O-RING BLACK (D=6.07 T=1.78)
098	5332177500	O-RING
102	5332142600	HOOK
113	6132103500	SPRING
114	5332139800	LEVER
115	9812631250	SCREW (3.5X12)
116	5313277681	STOPPER
117	53132C9532	FROTH DEVICE VALVE NATURAL(PSU)ESAM&ECAM
118	6132112200	SPRING
119	5332140300	PISTON
120	5313219481	SOLENOID VALVE SUPPORT
121	537407	CONNECTION