


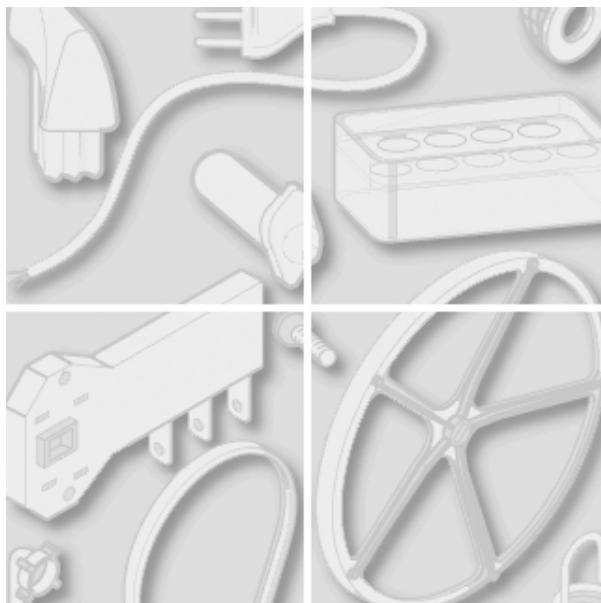

Model type:

FB 86C IX AUS

FB86CIX/AUS

Commercial code:

F027854

869990278540

THIS DOCUMENT IS ONLY INTENDED FOR QUALIFIED TECHNICIANS WHO ARE AWARE OF THE RESPECTIVE SAFETY REGULATIONS. SUBJECT TO MODIFICATIONS

4174010

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00089569				user instruction book		
001	C00081571 (482000076724)				back panel ovens		
002	C00081573 (482000076725)				top oven		
003	C00089130 (482000022743)			1 x C00265655 (488000265655)	cooling fan 220-240 v. (ck)		
004	C00081592 (482000053436)			1 x C00143061 (482000081933)	evac.conduit,rr preassembled		
005	C00081599 (482000022708)				thermostat 75c n.a. (ck)		
006	C00081587 (482000076727)				ventilation ducting		
007	C00081600 (482000054561)			1 x C00089573 (482000022746)	thermostat 240øc nc		
008	C00081591 (482000022705)				upper element oven/grill		
009	C00039578 (482000022614)				spring for thermostat bulb		
010	C00082435 (482000054687)			1 x C00196055 (482000030249)	commutator electr. oven speed-cooking		
012	C00074157 (482000027280)				pilot light red		
013	C00083853 (482000054375)			1 x C00270746 (482000086579)	junction clamp		
014	C00081597 (482000022707)			1 x C00145486 (482000030025)	oven thermostat		
015	C00081582 (482000091600)				chimney		
016	C00081581				oven insulation		
017	C00074135 (482000022675)				neon lens clear		

018	C00092346 (482000027920)		knob ix	n1015089
018	C00115774 (482000028847)	1 x C00082380 (482000027541)	knob style inox	n1015089
019	C00081569 (482000058138)	1 x C00115541 (482000062286)	side panel right	
		1 x C00143112 (482000062027)		
020	C00081575 (482000053422)	1 x C00143322 (482000029743)	rh oven door hinge support	
021	C00081585 (482000027500)		taptite screw	
022	C00084750 (482000076997)	1 x C00290621 (482000031893)	heat distribution panel	
023	C00081577 (482000032356)	1 x C00137834 (482000022922)	grill pan black	
024	C00140401		shelf + 2 grates	03278540010
024	C00097991 (482000052553)	1 x C00299296 (482000023366)	oven grid aus 447x365	03278540100
024	C00097991 (482000052553)	1 x C00299296 (482000023366)	oven grid aus 447x365	03278540300
024	C00140401		shelf + 2 grates	03278540000
025	C00115775 (482000028848)		oven door handle inox	n1015089
025	C00082381 (482000027542)		oven door handle inox	n1015089
026	C00082382 (482000055170)	1 x C00094595 (482000028032)	inox oven door glass + squad.	n1015015
027	C00081594 (482000027502)		oven door hinge (fixed pivot)	
028	C00082406 (482000027543)		oven metal inner door+glass	
029	C00017240 (482000025977)		self-tapping screw 8px9,52 t1/2t- black	

4174010

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
030	C00081572 (488000081572)				oven bottom cover		
031	C00138829 (482000081398)				lower heating element box		
032	C00081590 (482000076728)		11 39 / 11001...	1 x C00288251 (482000023277)	oven botton heating element 230v/1200		
				1 x C00288252 (482000023278)			
032	C00288251 (482000023277)	11 39 / 11002...			oven bottom heating element 230v/1200w		
033	C00081583				taptite screw m4x8		
034	C00081576 (482000053423)			1 x C00143323 (482000029744)	lh oven door hinge support		
035	C00081568 (482000076723)				cabinet fixing		
036	C00081570 (482000058139)			1 x C00115541 (482000062286)	side panel left		
				1 x C00143111 (482000062029)			
037	C00082358 (482000061770)				oven insulation mat - rear		
038	C00076978 (482000022693)				oven lamp t25 230v-240v 25w e14s brass c		
039	C00078426 (482000022698)				lamp assembly 25 w 230 v		
040	C00118110 (482000062499)				mains terminal block		
041	C00081574 (482000053635)			1 x C00119339 (482000022890)	rear cross beam		
043	C00081589 (482000022704)				circulating fan motor 220-240v 30w		
044	C00084747 (482000055177)			1 x C00109677 (482000079496)	oven		

045	C00091676 (482000027871)			sheath covering oven style	
045	C00082446 (482000058164)		1 x C00257728 (482000064822)	oven front panel + graphics fb86 ix	
046	C00081579 (482000022703)			oven door seal 4 sides	
047	C00082364 (482000027539)			condensation trim - lower door edge	
052	C00078606 (482000054516)		1 x C00138834 (482000022925)	heating element 2000w fan oven	
053	C00097045 (482000078394)	05 13 / 50329...	1 x C00289343 (4880000289343)	timer button (inox)	n1015099
053	C00082445 (482000091181)	05 13 / 50328...		timer button - inox	n1015099
054	C00051477 (482000022634)			electronic program eaton 220- 240v (rh)	
062	C00082429 (482000053434)		1 x C00143932 (482000029831)	plate for fixing cooking programmer	
074	C00084753 (482000027641)			self cleaning oven panel - lh	03278540000
074	C00084753 (482000027641)			self cleaning oven panel - lh	03278540010
075	C00084752 (482000027640)			self-cleaning oven panel - rh	03278540000
075	C00084752 (482000027640)			self-cleaning oven panel - rh	03278540010
076	C00091784 (482000077681)			side shelf oven	03278540300
076	C00091784 (482000077681)			side shelf oven	03278540100
077	C00097990 (482000078502)			self-cleaning oven panel rh/lh	03278540100
081	C00084756 (482000027642)			fixing insert m4	03278540010
081	C00084756 (482000027642)			fixing insert m4	03278540000

4174010

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
081	C00091781 (482000053902)			1 x C00271907 (482000031065)	round securing nut - shelf runners		03278540100
097	C00084746				drip tray handle		
099	C00089119 (482000077369)				screw condensation trim - lower door edge		
099	C00018053				self-tapping screw 8px10 tcb		
099	C00088347 (482000077315)			1 x C00145442 (482000082375)	screw trc 3.5x25 tsp		

Notices

n1015015: Method to remove the external glass of the oven door.

On all built-in cooker and oven models, when it is necessary to remove the glass from the oven door handle (to avoid breaking the handle) the glass is not removed upwards, but should be oscillated towards the right and left until the two silicone points, that unite the glass to the handle, detach.

n1015089: INTRODUCTION OF OVEN DOOR HANDLE AND KNOBS WITH NEW S/STEEL FINISH ON BUILT-IN

From serial no. 50117.0001, all Ariston and Hotpoint built-in "style" ovens affected by this note have been equipped with new knobs and door handle with stainless steel finish different from premodification items.

The new knobs/handle are not interchangeable separately with premodification items as they are different in appearance, therefore:

a) on ovens with serial number prior to 50117.0001 use the following together:

- 092346 chromed knobs with dark grey satin finish disc
- 082381 chromed oven door handle

b) on ovens with serial number subsequent to 50117.0001 use the following together:

- 115774 knobs painted metallic grey+clear coating
- 115775 oven door handle painted stainless steel

n1015099: INTRODUCTION OF PROGRAMMER BUTTONS

Appliances from serial number 50329.0001 have been equipped with nickel-finished programmer buttons in place of the satin chrome-finished ones. The 2 types of buttons are not aesthetically interchangeable.

Buttons to be used on appliances with serial number prior to 50329.0001:


- 082445

Buttons to be used on appliances with serial number subsequent to 50329.0001:

- 097045

Electric schemes and links

Cod. 16001361200

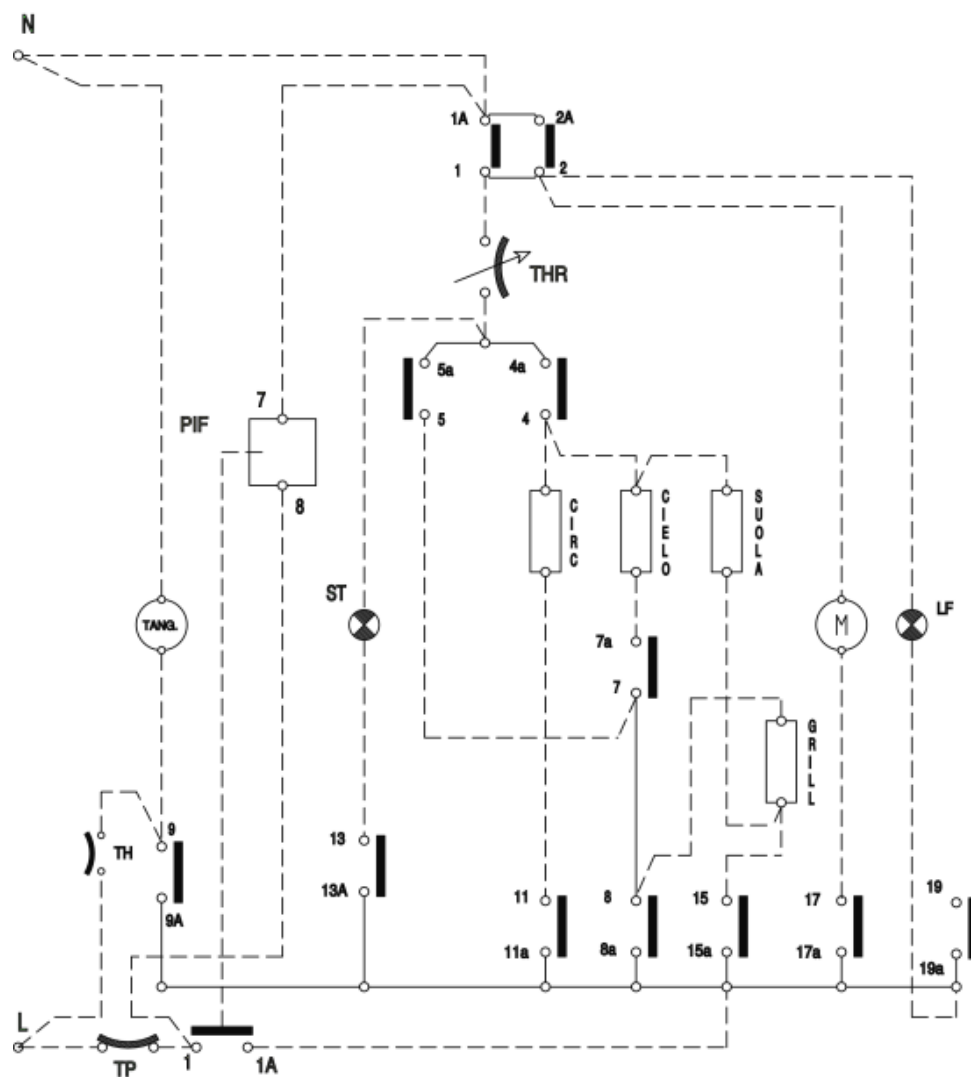

se16001361200

Legend

Legend: 16001361200

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card