


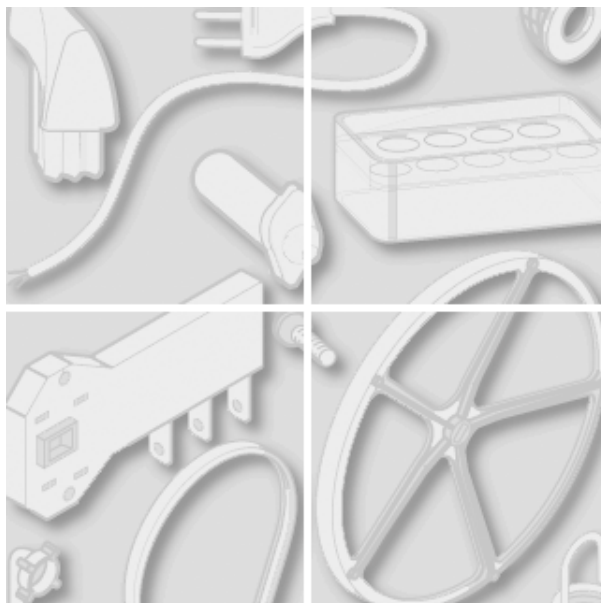

Model type:

FI 51.B IX

FI51.BIX

Commercial code:

F033900

859990339000


869990339000

THIS DOCUMENT IS ONLY INTENDED FOR QUALIFIED TECHNICIANS WHO ARE AWARE OF THE RESPECTIVE SAFETY REGULATIONS. SUBJECT TO MODIFICATIONS

4200190

Exploded views

matr.41120.0001

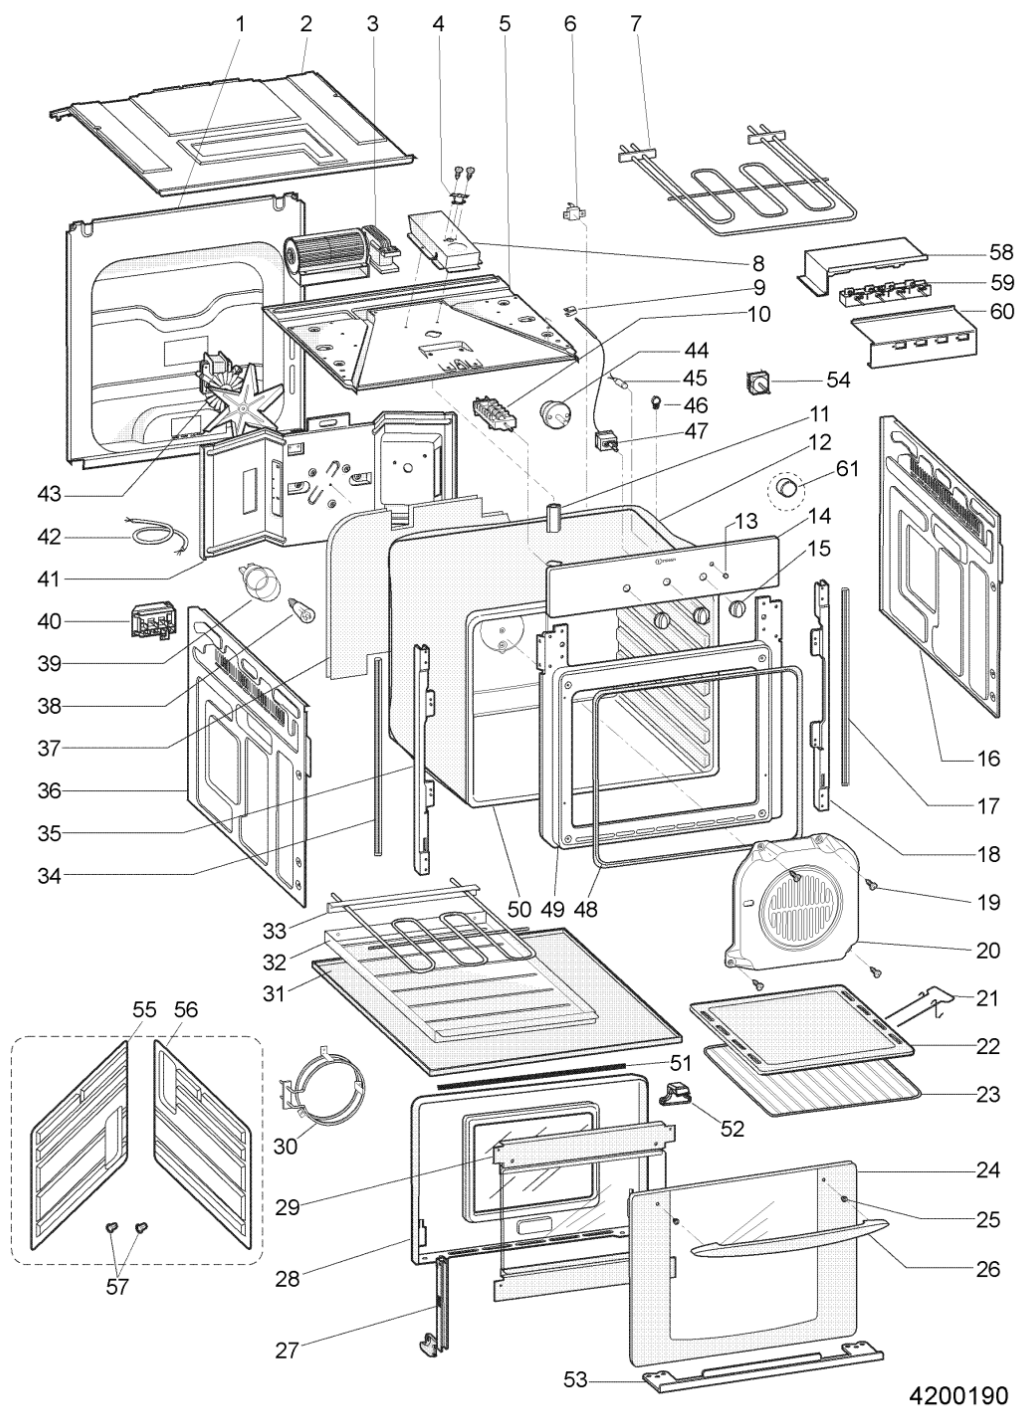

4200190

4200190

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00115133 (482000080225)				instructions booklet it-gb-fr-es-pt-nl-d		
001	C00081571 (482000076724)				back panel ovens		
002	C00081573 (482000076725)				top oven		
006	C00121897 (482000022891)				thermostat, t300 nc opens 280 deg		
007	C00081591 (482000022705)				upper element oven/grill		
009	C00039578 (482000022614)				spring for thermostat bulb		
010	C00088318 (482000077311)			1 x C00196053 (482000030248)	commutator electr. oven		
012	C00082349				oven insulation		
013	C00074135 (482000022675)				neon lens clear		
014	C00115132 (482000080224)				dashboard panel ix fi51.b		
015	C00114923 (482000028793)				knob black lucid		
016	C00113241 (482000054136)			1 x C00115541 (482000062286) 1 x C00143114 (482000081940)	right oven front panel		
018	C00090670 (482000053427)			1 x C00143917 (482000022976)	rh oven door hinge support		
019	C00081585 (482000027500)				taptite screw		
020	C00081584 (482000076726)			1 x C00108932 (482000058812)	oven back panel (inner) enamelled		
022	C00081577 (482000032356)			1 x C00137834 (482000022922)	grill pan black		
023	C00081578 (482000022702)				oven grid		

024	C00142935 (482000029676)			oven door - inox
026	C00033431 (482000026247)			screw m5 x 20 tsp black
026	C00115134 (482000022855)			oven door handle black
027	C00090677 (482000022750)			oven door hinge
028	C00115137 (482000022856)			oven metal inner door+glass th.
031	C00082486 (482000076830)			oven bottom cover
032	C00138829 (482000081398)			lower heating element box
033	C00288251 (482000023277)	11 39 / 11002...		oven bottom heating element 230v/1200w
033	C00081590 (482000076728)	11 39 / 11001...	1 x C00288251 (482000023277)	oven botton heating element 230v/1200
			1 x C00288252 (482000023278)	
035	C00090671 (482000053428)		1 x C00143930 (482000022977)	lh oven door hinge support
036	C00090669 (482000054131)		1 x C00115541 (482000062286)	side panel left
			1 x C00143113 (482000062028)	
037	C00081581			oven insulation
038	C00076978 (482000022693)			oven lamp t25 230v-240v 25w e14s brass c
039	C00078426 (482000022698)			lamp assembly 25 w 230 v
040	C00081601 (482000027503)	12 11 / 20316...		terminal block itw x f2000

4200190


Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
040	C00271142 (482000031029)	12 11 / 20317...			terminal block		
041	C00081574 (482000053635)			1 x C00119339 (482000022890)	rear cross beam		
042	C00026767 (482000026096)				supply cable 10a 3x1		
043	C00081589 (482000022704)				circulating fan motor 220-240v 30w		
044	C00052527 (482000026798)				minute timer d = 6mm		
045	C00074157 (482000027280)				pilot light red		
046	C00083853 (482000054375)			1 x C00270746 (482000086579)	junction clamp		
047	C00082365 (482000022711)				oven thermostat		
048	C00081579 (482000022703)				oven door seal 4 sides		
049	C00090695 (482000077555)				black oven front panel		
050	C00082376 (482000076813)				electric oven		
052	C00115136 (482000028809)				outlet vent (inner)		
099	C00033163 (482000026237)				washer - black		
099	C00088347 (482000077315)			1 x C00145442 (482000082375)	screw trc 3.5x25 tsp		
099	C00017240 (482000025977)				self-tapping screw 8px9,52 t1/2t- black		

Electric schemes and links

Cod. se082700

SE082700

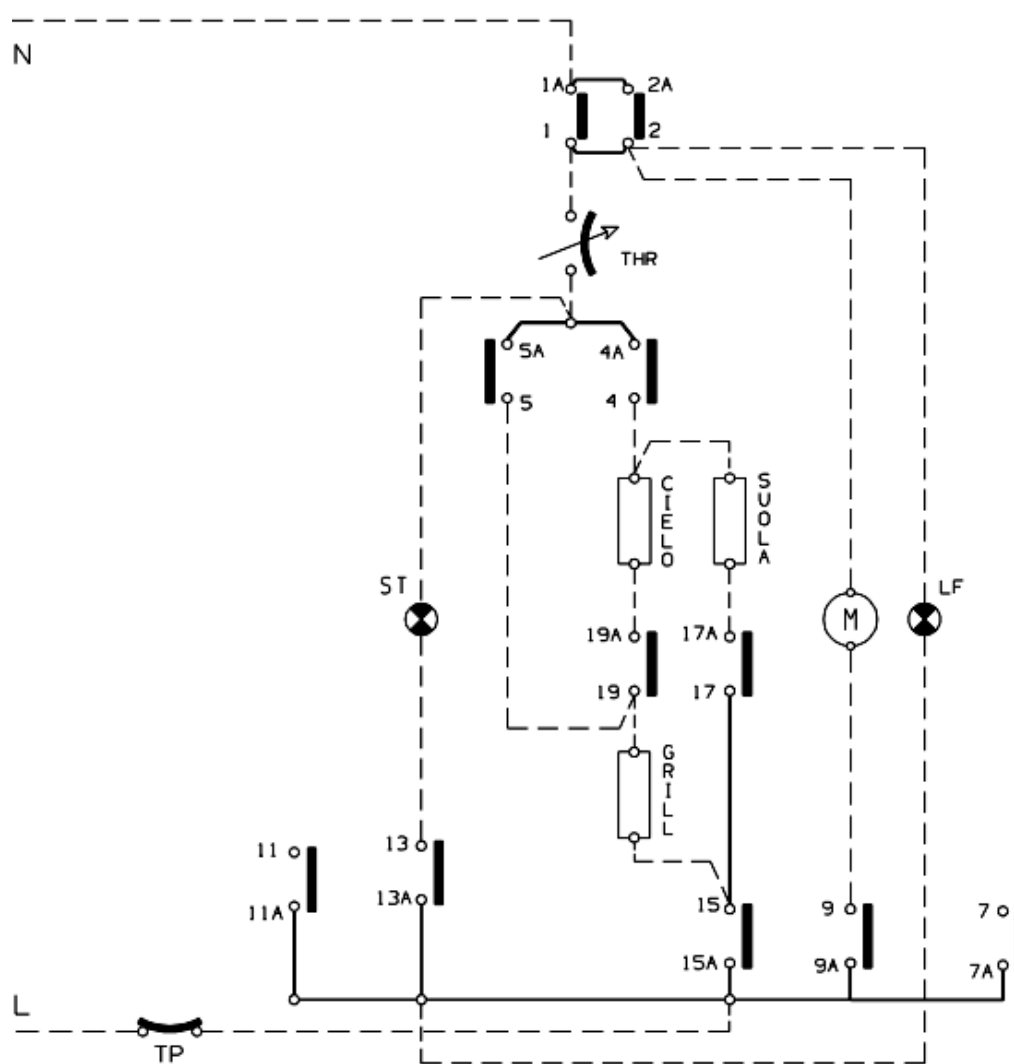

COMMUTATORE DREEFS COD.160.013090.00

Legend

Legend: se082700

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card