


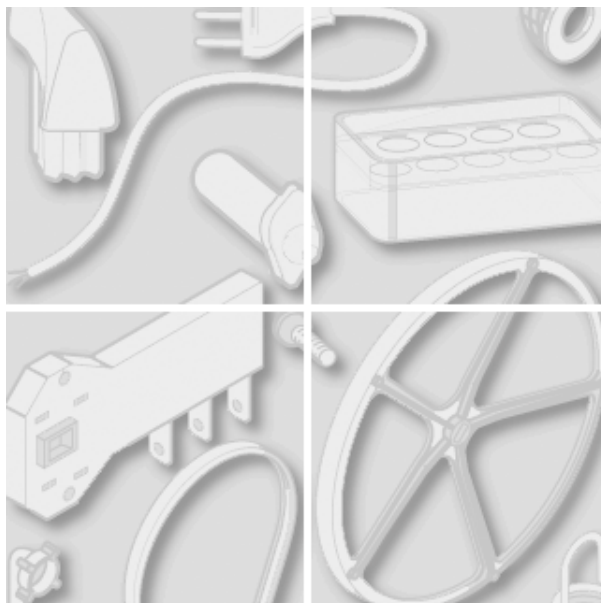

Model type:

FP 955

FP955

Commercial code:

F027983

869990279830


THIS DOCUMENT IS ONLY INTENDED FOR QUALIFIED TECHNICIANS WHO ARE AWARE OF THE RESPECTIVE SAFETY REGULATIONS. SUBJECT TO MODIFICATIONS

star0028

Exploded views (2026/06/20)

Scholtès

matr.21121.0001

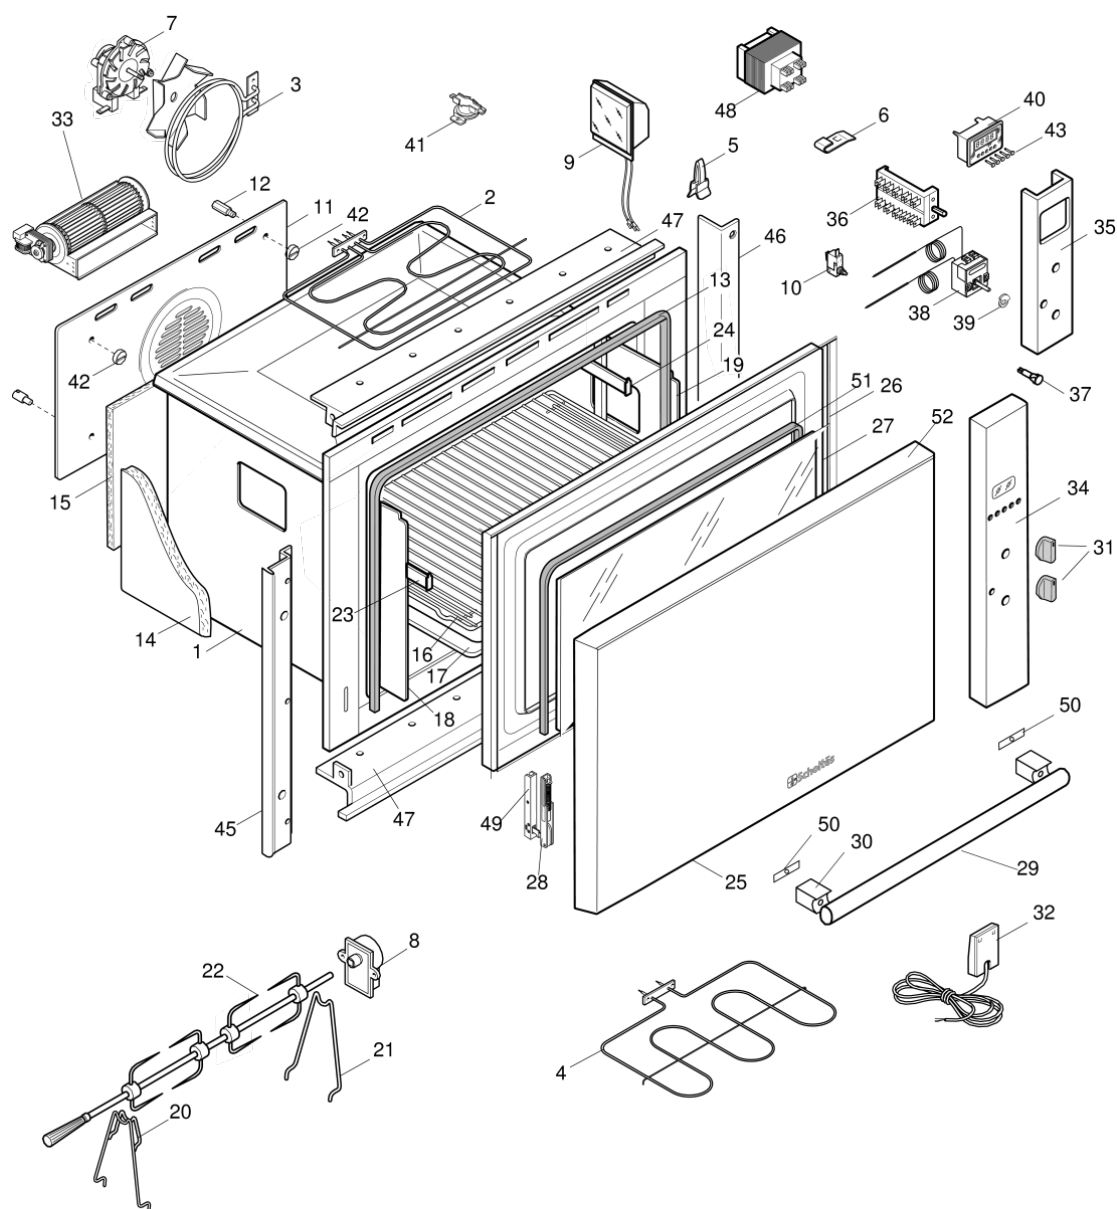

star0028

star0028

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00092001				instruction book it-gb-fr-de-nl		
001	C00083057				oven enamelled cavity		
002	C00049942 (482000052653)			1 x C00141175 (482000022947)	heating element - upper grill		
003	C00052371 (482000052654)			1 x C00141180 (482000022948)	heating element fan oven star		
004	C00049943 (482000054604)			1 x C00141176 (482000029546)	heating element - lower 1300w		
005	C00049971 (482000074501)				flat spring retainer-thermos.capil. mm26		
006	C00059234				flat spring retainer-thermos.capil.		
007	C00083099 (482000076883)				fan motor - cooking		
008	C00131986				turn-spit motor		
009	C00083100				lamp-holder complete		
010	C00083101				microswitch		
011	C00050005 (482000053698)			1 x C00193995 (482000062042)	oven inner back panel- self cleaning		
012	C00051017 (482000026747)				pin mm26		
013	C00091946 (482000022767)				oven door seal		
014	C00083102				oven insulation - top		
015	C00049970				oven insulation - back		
016	C00083103				oven grid shelf		
017	C00076073 (482000027368)				enamelled drip tray		

018	C00083104		self cleaning oven panel - lh	
019	C00083105		self-cleaning oven panel - rh	
020	C00049974 (482000026716)		rotisserie support	
021	C00049973 (482000026715)		holder tbc?	
022	C00083106		rotisserie complete	
023	C00083108		left guide rail	
024	C00083110		guide rail dx	
025	C00092004 (482000077708)	1 x C00195753 (482000083264)	outer door glass fp995	n1015069 n1507100
026	C00089083 (482000053657)	1 x C00143724 (482000029814) 1 x C00196568 (482000083331) 1 x C00145640 (482000030033) 1 x C00193991 (482000030163)	oven metal inner door	
027	C00049936 (482000026710)		oven door glass - inner (564x306x4)	
028	C00085563 (482000027681)		door hinge	
029	C00092002 (482000077707)		door handle	
030	C00092005		door handle spacer	

star0028

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
031	C00092006 (482000027897)				knob scholtes		
032	C00052166 (482000074677)			1 x C00056382 (482000026959)	terminal block complete		
				1 x C00062003 (482000075225)			
033	C00049969 (482000026714)				motor ventilation(tangential) mm26		
034	C00092007 (482000055306)			1 x C00195339 (482000083217)	rolled panel fp955		
035	C00092008				controls supporting braeket		
036	C00083119				light switch 10 pole		
037	C00089743 (482000077410)				pilot light red		
038	C00089745 (482000022747)				thermostat		
039	C00053696 (482000074817)				push in spring clip - thermostat		
040	C00092009 (482000077709)				elettronic programmereaton el198/370		
041	C00049968 (482000026713)				thermostat non adjustable		
043	C00090737 (482000027842)				knob ix (electronic prog) - star		
044	C00051018 (482000053331)			1 x C00065818 (482000027214)	impellor zigrinato mm26		
045	C00084408				side frame lh -		
046	C00092010				side frame rh - stainless		
047	C00065822 (488000065822)				upper/lower profile for frame		
048	C00083122				transformer		

049	C00075148 (482000053760)	1 x C00271825 (482000031064)	roller support m26	
050	C00112526 (482000079813)		handle spacer	n1015069

Notices

n1015069: Adding handle backplates

If replacing the viewing glass on an appliance whose serial number is before 406010001, it is advisable to add handle backplates, code 112526, as shown in the photos.



n1507100: OUTER DOOR GLASS


On products with serial number prior to 60116.... (2006-01-16) when changing the external glass door it is of paramount

importance that you fit ALL the following parts.

- C00092004 = OUTER DOOR GLASS
- C00115705 = DOOR HANDLE
- C00095075 = HANDLE SUPPORT

Electric schemes and links

Cod. 16001369200

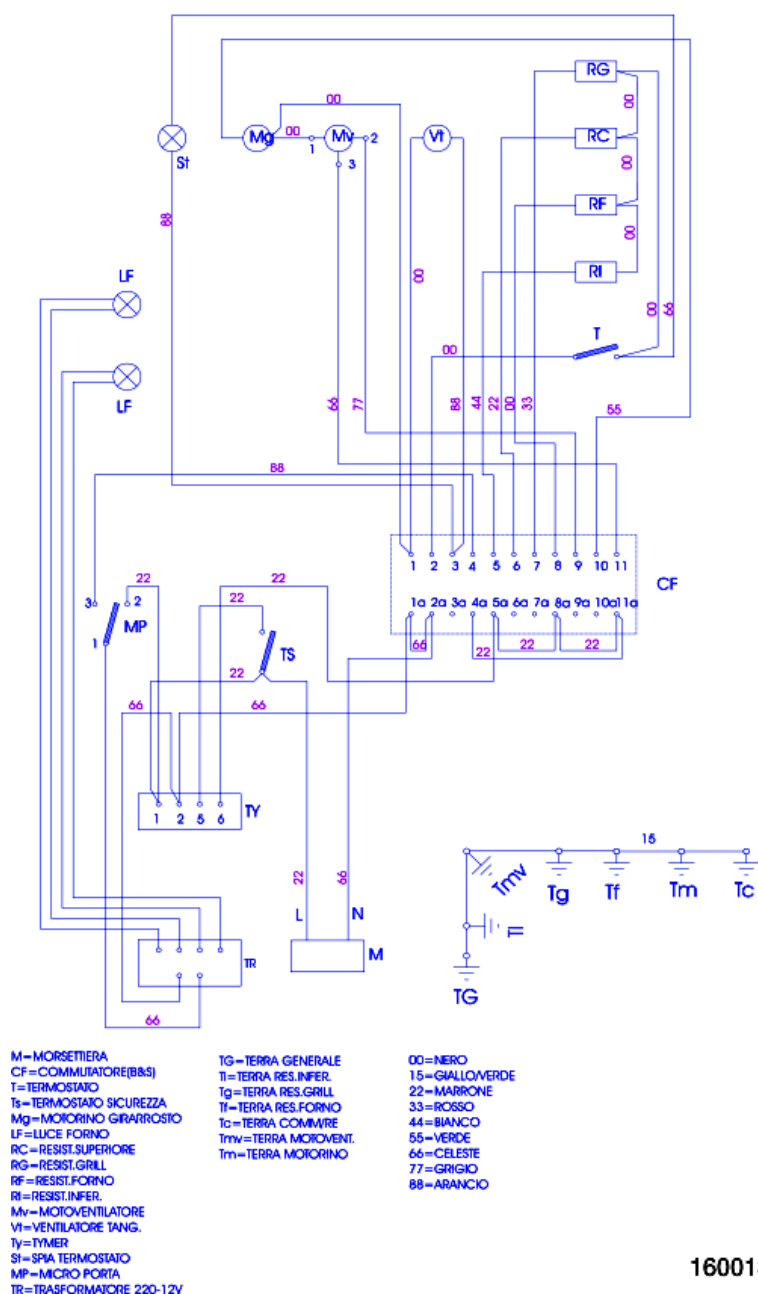

16001369200

Legend

Legend: 16001369200

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card